

HYDRAULIC
EXCAVATOR

PC290LC-8
PC290NLC-8

SERIAL NUMBERS	PC290LC-	10001	and up
	PC290NLC-	10001	

HYDRAULIC EXCAVATOR

PC290LC-8 PC290NLC-8

Machine model	Serial number
PC290LC-8	10001 and up
PC290NLC-8	10001 and up

00 Index and foreword

Index

Organization list of the shop manual	2
Table of contents	4

Organization list of the shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	UEN00420-01 ●
00 Index and foreword	
Index	UEN00422-01 ●
Foreword and general information	UEN00423-00
01 Specification	
Specification and technical data	UEN00425-00
10 Structure, function and maintenance standard	
Engine and cooling system	UEN00427-00
Power train	UEN00428-00
Undercarriage and frame	UEN00429-00
Hydraulic system, Part 1	UEN00430-00
Hydraulic system, Part 2	UEN00431-00
Hydraulic system, Part 3	UEN00432-00
Work equipment	UEN00433-01 ●
Cab and its attachments	UEN00434-00
Electrical system	UEN00435-00
20 Standard value table	
Standard service value table	UEN00641-00
30 Testing and adjusting	
Testing and adjusting, Part 1	UEN00642-00
Testing and adjusting, Part 2	UEN00643-00
Testing and adjusting, Part 3	UEN00644-00
40 Troubleshooting	
General information on troubleshooting	UEN00645-00
Troubleshooting by failure code (Display of code), Part 1	UEN00646-00
Troubleshooting by failure code (Display of code), Part 2	UEN00647-00
Troubleshooting by failure code (Display of code), Part 3	UEN00648-00
Troubleshooting by failure code (Display of code), Part 4	UEN00649-00
Troubleshooting of electrical system (E-mode)	UEN00650-00
Troubleshooting of hydraulic and mechanical system (H-mode)	UEN00651-00
Troubleshooting of engine (S-mode)	UEN00652-00

50 Disassembly and assembly	
General information on disassembly and assembly	UEN00865-00
Engine and cooling system	UEN00866-00
Power train	UEN00867-00
Undercarriage and frame	UEN00868-00
Hydraulic system	UEN00869-00
Work equipment	UEN00870-00
Cab and its attachments	UEN00871-00
Electrical system	UEN00872-00
90 Diagrams and drawings	
Hydraulic diagrams and drawings	UEN00441-00
Electrical diagrams and drawings	UEN00442-00

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$