

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC300 -8**

**PC300LC-8**

SERIAL NUMBERS    PC300-    C50001    and up  
                                 PC300LC-    C50001

**ecot3**

**KOMATSU**



---

# HYDRAULIC EXCAVATOR

## PC300-8

## PC300LC-8

**Machine model      Serial number**

PC300-8                      C50001 and up  
PC300LC-8                 C50001 and up

---

## 00 Index and foreword

### Index

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN01983-15TH
00 Index and foreword	SEN01984-15
Index	SEN01985-15 ●
Foreword and general information	SEN01986-02
01 Specification	SEN01987-01
Specification and technical data	SEN01988-01
10 Structure, function and maintenance standard	SEN01989-08
Engine and cooling system	SEN01990-00
Power train	SEN01991-00
Undercarriage and frame	SEN01992-00
Hydraulic system, Part 1	SEN01993-00
Hydraulic system, Part 2	SEN01994-01
Hydraulic system, Part 3	SEN01995-01
Work equipment	SEN01996-01
Cab and its attachments	SEN01997-00
Electrical system	SEN01998-05
20 Standard value table	SEN01999-03
Standard service value table	SEN02624-03
30 Testing and adjusting	SEN02000-08
Testing and adjusting, Part 1	SEN02625-06
Testing and adjusting, Part 2	SEN02626-04 ●
Testing and adjusting, Part 3	SEN02663-02
40 Troubleshooting	SEN02001-09
Failure code table and fuse locations	SEN02627-04
General Information on troubleshooting	SEN02628-04
Troubleshooting by failure code (Display of code), Part 1	SEN02629-03
Troubleshooting by failure code (Display of code), Part 2	SEN02630-05
Troubleshooting by failure code (Display of code), Part 3	SEN02631-02
Troubleshooting of electrical system (E-mode)	SEN02632-02
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02633-03

---

Troubleshooting of engine (S-mode)	SEN02634-02
50 Disassembly and assembly	SEN02002-09
General information on disassembly and assembly	SEN02635-02
Engine and cooling system	SEN02636-03
Power train	SEN02637-02
Undercarriage and frame	SEN02638-03
Hydraulic system	SEN02639-02
Work equipment	SEN02640-00
Cab and its attachments	SEN02641-02
Electrical system	SEN02642-02
90 Diagrams and drawings	SEN02003-04
Hydraulic diagrams and drawings	SEN02004-01
Electrical diagrams and drawings	SEN02005-04

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$