

Shop Manual

HYDRAULIC
EXCAVATOR

PC300LC-8M0
PC350LC-8M0

SERIAL NUMBERS PC300LC-N330001 and up
PC350LC-N360001

ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC300LC-8M0

PC350LC-8M0

Machine model	Serial number
---------------	---------------

PC300LC-8M0	N330001 and up
PC350LC-8M0	N360001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN06257-03-NI00
00 Index and foreword	SEN06258-03-NI00
100 Index	SEN06259-03-NI00 ●
200 Foreword and general information	SEN06260-00-NI00
01 Specification	SEN06261-01-NI00
100 Specification and technical data	SEN06262-01-NI00
10 Structure, function and maintenance standard	SEN06263-01-NI00
100 Engine and cooling system	SEN06264-01-NI00
200 Power train	SEN06265-01-NI00
300 Undercarriage and frame	SEN06266-01-NI00
401 Hydraulic system, Part 1	SEN06267-01-NI00
402 Hydraulic system, Part 2	SEN06268-01-NI00
403 Hydraulic system, Part 3	SEN06269-02-NI00 ●
500 Work equipment	SEN06270-01-NI00
600 Electrical system	SEN06271-01-NI00
20 Standard value table	SEN06275-00-NI00
100 Standard service value table	SEN06276-00-NI00
30 Testing and adjusting	SEN06277-00-NI00
101 Testing and adjusting, Part 1	SEN06278-00-NI00
102 Testing and adjusting, Part 2	SEN06279-00-NI00
103 Testing and adjusting, Part 3	SEN06280-00-NI00
40 Troubleshooting	SEN06353-00-NI00
100 Failure code table and fuse locations	SEN06354-00-NI00
200 General Information on troubleshooting	SEN06355-00-NI00
301 Troubleshooting by failure code, Part 1	SEN06356-00-NI00
302 Troubleshooting by failure code, Part 2	SEN06357-00-NI00
303 Troubleshooting by failure code, Part 3	SEN06358-00-NI00
304 Troubleshooting by failure code, Part 4	SEN06359-00-NI00
305 Troubleshooting by failure code, Part 5	SEN06360-00-NI00
400 Troubleshooting of electrical system (E-mode)	SEN06361-00-NI00

500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN06362-00-NI00
600 Troubleshooting of engine (S-mode)	SEN06363-00-NI00
50 Disassembly and assembly	SEN06344-01-NI00
100 Related information on disassembly and assembly	SEN06345-00-NI00
200 Engine and cooling system	SEN06346-00-NI00
300 Power train system	SEN06347-00-NI00
400 Undercarriage and frame	SEN06348-00-NI00
500 Hydraulic system	SEN06349-00-NI00
600 Work equipment	SEN06350-01-NI00 ●
700 Cab and its attachments	SEN06351-00-NI00
800 Electrical system	SEN06352-00-NI00
80 Appendix	SEN06364-00-NI00
100 Air conditioner	SEN06365-00-NI00
90 Diagrams and drawings	SEN06272-00-NI00
100 Hydraulic diagrams and drawings	SEN06273-00-NI00
200 Electrical diagrams and drawings	SEN06274-00-NI00

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$