Shop Manual

HYDRAULIC EXCAVATOR

FALEO PC340LC-7 PC340NLC-7

PC340LC-7E0 K45001 and up PC340NLC-7E0 K45001



HYDRAULIC EXCAVATOR

PC340LC-7 PC340NLC-7

Machine model Serial number

PC340LC-7E0 K45001 and up PC340NLC-7E0 K45001 and up

00 Index and foreword

Index

Organization list of the shop manual	 2
Table of contents	4

UEN00264-00 00 Index and foreword

Organization list of the shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly. The marks shown to the right of Form No. denote the following:

- O: New issue (to be filed additionally) •: Revision (to be replaced for each Form No.)
- Note 2: This shop manual can be supplied for each Form No.
- Note 3: To file this shop manual in the special binder for management, handle it as follows:
 - Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
 - File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	UEN00262-00
00 Index and foreword Index Foreword and general information	UEN00264-00 UEN00265-00
01 Specification Specification and technical data	UEN00267-00
10 Structure, function and maintenance standard Engine and cooling system Power train Undercarriage and frame Hydraulic system, Part 1 Hydraulic system, Part 2 Hydraulic system, Part 3 Work equipment Cab and its attachments Electrical system	UEN00269-00 UEN00270-00 UEN00271-00 UEN00272-00 UEN00273-00 UEN00274-00 UEN00275-00 UEN00276-00 UEN00277-00
20 Standard value table Standard service value table	UEN00366-00
30 Testing and adjusting Testing and adjusting, Part 1 Testing and adjusting, Part 2	UEN00536-00 UEN00537-00
Information related to troubleshooting Troubleshooting by failure code (Display of code), Part 1 Troubleshooting by failure code (Display of code), Part 2 Troubleshooting by failure code (Display of code), Part 3 Troubleshooting of electrical system (E-mode) Troubleshooting of hydraulic and mechanical system (H-mode) Troubleshooting of engine (S-mode)	UEN00539-00 UEN00540-00 UEN00541-00 UEN00542-00 UEN00543-00 UEN00544-00 UEN00545-00

2 PC340-7

00 Index and foreword UEN00264-00

50 Disassembly and assembly	
General information on disassembly and assembly	UEN00956-00
Engine and cooling system	UEN00957-00
Power train	UEN00958-00
Undercarriage and frame	UEN00959-00
Hydraulic system	UEN00960-00
Work equipment	UEN00961-00
Cab and its attachments	UEN00962-00
Electrical system	UEN00963-00
90 Diagrams and drawings	
Hydraulic diagrams and drawings	UEN00279-00
Electrical diagrams and drawings	UEN00280-00

PC340-7 3

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$