

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC400 -8R**

**PC400LC-8R**

**PC450 -8R**

**PC450LC-8R**

SERIAL NUMBERS

PC400- 75001

PC400LC- 75001

PC450- 75001

PC450LC- 75001

and up

**KOMATSU**



# HYDRAULIC EXCAVATOR

## PC400-8R

## PC400LC-8R

## PC450-8R

## PC450LC-8R

Machine model	Serial number
---------------	---------------

PC400-8R	75001 and up
PC400LC-8R	75001 and up
PC450-8R	75001 and up
PC450LC-8R	75001 and up

---

## 00 Index and foreword

### Index

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04239-18
00 Index and foreword	SEN04240-18
Index	SEN04241-18
Foreword and general information	SEN04242-01
01 Specification	SEN04243-02
Specification and technical data	SEN04244-02
10 Structure, function and maintenance standard	SEN04245-09
Engine and cooling system	SEN04246-00
Power train	SEN04247-00
Undercarriage and frame	SEN04248-00
Hydraulic system, Part 1	SEN04249-01
Hydraulic system, Part 2	SEN04250-03
Hydraulic system, Part 3	SEN04251-03
Work equipment	SEN04252-01
Cab and its attachments	SEN04253-00
Electrical system	SEN04254-03
20 Standard value table	SEN04255-01
Standard service value table	SEN04256-01
30 Testing and adjusting	SEN04257-07
Testing and adjusting, Part 1	SEN04258-05
Testing and adjusting, Part 2	SEN04259-03
Testing and adjusting, Part 3	SEN04260-00
40 Troubleshooting	SEN04261-02
Failure code table and fuse locations	SEN04262-01
General information on troubleshooting	SEN04263-01
Troubleshooting by failure code (Display of code), Part 1	SEN04264-02
Troubleshooting by failure code (Display of code), Part 2	SEN04265-01
Troubleshooting by failure code (Display of code), Part 3	SEN04266-02
Troubleshooting of electrical system (E-mode)	SEN04267-01
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04268-01
Troubleshooting of engine (S-mode)	SEN04269-01
50 Disassembly and assembly	SEN04270-10
General information on disassembly and assembly	SEN04271-03
Engine and cooling system	SEN04272-01
Power train	SEN04273-02
Undercarriage and frame	SEN04274-04
Hydraulic system	SEN04275-01

Work equipment	SEN04276-01
Cab and its attachments	SEN04277-01
Electrical system	SEN04278-01
90 Diagrams and drawings	SEN04279-02
Hydraulic diagrams and drawings	SEN04280-00
Electrical diagrams and drawings	SEN04281-02

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$