

# Shop Manual

HYDRAULIC  
EXCAVATOR

**GALEO**

PC450-8

PC450LC-8

PC450LCD-8

PC450LCHD-8

SERIAL NUMBERS

PC450-8

PC450LC-8

PC450LCD-8

PC450LCHD-8

K50001 and up

**ecot3**

**KOMATSU**



# HYDRAULIC EXCAVATOR

## PC450-8

## PC450LC-8

## PC450LCD-8

## PC450LCHD-8

Machine model	Serial number
---------------	---------------

PC450-8	K50001 and up
PC450LC-8	K50001 and up
PC450LCD-8	K50001 and up
PC450LCHD-8	K50001 and up

---

## 00 Index and foreword

### Index

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	UEN02223-00
00 Index and foreword	
Index	UEN02225-00
Foreword and general information	UEN02226-00
01 Specification	
Specification and technical data	UEN02228-00
10 Structure, function and maintenance standard	
Engine and cooling system	UEN02230-00
Power train	UEN02231-00
Undercarriage and frame	UEN02232-00
Hydraulic system, Part 1	UEN02233-00
Hydraulic system, Part 2	UEN02234-00
Hydraulic system, Part 3	UEN02235-00
Work equipment	UEN02236-00
Cab and its attachments	UEN02237-00
Electrical system	UEN02238-00
20 Standard value table	
Standard service value table	UEN02643-00
30 Testing and adjusting	
Testing and adjusting, part 1	UEN02644-00
Testing and adjusting, Part 2	UEN02645-00
Testing and adjusting, Part 3	UEN02662-00
40 Troubleshooting	
Failure code table and fuse locations	UEN02646-00
General information on troubleshooting	UEN02647-00
Troubleshooting by failure code (Display of code), Part 1	UEN02648-00
Troubleshooting by failure code (Display of code), Part 2	UEN02649-00
Troubleshooting by failure code (Display of code), Part 3	UEN02650-00
Troubleshooting of electrical system (E-mode)	UEN02651-00
Troubleshooting of hydraulic and mechanical system (H-mode)	UEN02652-00

---

Troubleshooting of engine (S-mode)	UEN02653-00
50 Disassembly and assembly	
General information on disassembly and assembly	UEN02654-00
Engine and cooling system	UEN02655-00
Power train	UEN02656-00
Undercarriage and frame	UEN02657-00
Hydraulic system	UEN02658-00
Work equipment	UEN02659-00
Cab and its attachments	UEN02660-00
Electrical system	UEN02661-00
90 Diagrams and drawings	
Hydraulic diagrams and drawings	UEN02244-00
Electrical diagrams and drawings	UEN02245-00

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$