

Shop Manual

HYDRAULIC
EXCAVATOR

PC500LC-10M0

SERIAL NUMBERS 95001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-15
FOREWORD, SAFETY, BASIC INFORMATION	00-21
HOW TO READ THE SHOP MANUAL.....	00-21
SAFETY NOTICE FOR OPERATION.....	00-23
PRECAUTIONS TO PREVENT FIRE.....	00-31
ACTIONS IF FIRE OCCURS	00-33
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-34
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-35
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-38
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-44
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-46
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-47
PRACTICAL USE OF KOMTRAX	00-48
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-49
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-53
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-57
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-58
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-60
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-61
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE ..	00-63
HOW TO READ ELECTRICAL WIRE CODE	00-64
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-68
STANDARD TIGHTENING TORQUE TABLE.....	00-71
CONVERSION TABLE	00-78
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING.....	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-13
WEIGHT TABLE	01-19
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-23
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-5
BOOT-UP SYSTEM.....	10-11
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-11
SYSTEM OPERATING LAMP SYSTEM	10-13
BATTERY DISCONNECT SWITCH	10-14
ENGINE SYSTEM	10-15
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-15
ENGINE CONTROL SYSTEM	10-17
AUTO-DECELERATION SYSTEM.....	10-20
ENGINE AUTOMATIC WARM-UP SYSTEM.....	10-22
OVERHEAT PREVENTION SYSTEM.....	10-24
TURBOCHARGER PROTECTION SYSTEM.....	10-26
AUTOMATIC IDLE STOP SYSTEM	10-28
COMPONENT PARTS OF ENGINE SYSTEM	10-31
COOLING SYSTEM.....	10-38
LAYOUT DRAWING OF COOLING SYSTEM	10-38
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH.....	10-40
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH.....	10-42
COMPONENT PARTS OF COOLING SYSTEM.....	10-44

CONTROL SYSTEM.....	10-45
LAYOUT DRAWING OF CONTROL SYSTEM	10-45
MACHINE MONITOR SYSTEM	10-48
KOMTRAX SYSTEM.....	10-50
COMPONENT PARTS OF CONTROL SYSTEM.....	10-51
HYDRAULIC SYSTEM.....	10-78
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-78
CLSS	10-82
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-101
PUMP AND VALVE CONTROL SYSTEM	10-107
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-110
WORK EQUIPMENT SYSTEM	10-196
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-196
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-200
MACHINE PUSH-UP SYSTEM.....	10-202
PPC LOCK SYSTEM	10-204
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-205
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-207
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-209
SWING SYSTEM	10-227
LAYOUT DRAWING OF SWING SYSTEM	10-227
SWING CONTROL SYSTEM DIAGRAM	10-231
COMPONENT PARTS OF SWING SYSTEM.....	10-235
TRAVEL SYSTEM.....	10-253
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-253
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-257
COMPONENT PARTS OF TRAVEL SYSTEM	10-259
UNDERCARRIAGE AND FRAME.....	10-280
LAYOUT DRAWING OF UNDERCARRIAGE	10-280
WORK EQUIPMENT.....	10-281
STRUCTURE OF WORK EQUIPMENT	10-281
FUNCTION OF WORK EQUIPMENT	10-282
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-283
BUCKET CLEARANCE ADJUSTMENT SHIM	10-284
CAB AND ITS ATTACHMENTS	10-285
ROPS CAB	10-285
CAB MOUNT	10-286
CAB TIPPING STOPPER	10-287
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: PC500LC-10M0	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-13
STANDARD VALUE TABLE FOR MACHINE: PC500LC-10M0	20-13
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-27
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING	30-11
TOOLS FOR TESTING AND ADJUSTING.....	30-11
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-16
ENGINE AND COOLING SYSTEM.....	30-18
TEST ENGINE SPEED	30-18
TEST BOOST PRESSURE.....	30-21
TEST EXHAUST GAS TEMPERATURE	30-24
TEST EXHAUST GAS COLOR.....	30-26
TEST AND ADJUST VALVE CLEARANCE	30-28

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$