Shop Manual

HYDRAULIC EXCAVATOR

PC600-8 PC600LC-8

SERIAL NUMBERS PC600- K50001 and up PC600LC-K50001



HYDRAULIC EXCAVATOR

PC600-8 PC600LC-8

Machine model	Serial number

PC600-8 K50001 and up PC600LC-8 K50001 and up

00 Index and foreword

Index

Organization list of the shop manual	. 2
Table of contents	. 4

UEN00130-02 00 Index and foreword

Organization list of the shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly. The marks shown to the right of Form No. denote the following:

- O: New issue (to be filed additionally) •: Revision (to be replaced for each Form No.)
- Note 2: This shop manual can be supplied for each Form No.
- Note 3: To file this shop manual in the special binder for management, handle it as follows:
 - Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
 - File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	UEN00128-03
00 Index and foreword Index Foreword and general information	UEN00130-02 ● UEN00131-00
01 Specification Specification and technical data	UEN00133-01 ●
10 Structure, function and maintenance standard Engine and cooling system Power train Undercarriage and frame Hydraulic system, Part 1 Hydraulic system, Part 2 Work equipment Cab and its attachments Electrical system	UEN00135-00 UEN00136-00 UEN00137-00 UEN00138-00 UEN00140-00 UEN00141-00 UEN00142-01
20 Standard value table Standard service value table	UEN00395-01
30 Testing and adjusting Testing and adjusting, Part 1 Testing and adjusting, Part 2	UEN00444-00 UEN00445-00
40 Troubleshooting General information on troubleshooting Troubleshooting by failure code (Display of code), Part 1 Troubleshooting by failure code (Display of code), Part 2 Troubleshooting by failure code (Display of code), Part 3 Troubleshooting of electrical system (E-mode) Troubleshooting of hydraulic and mechanical system (H-mode) Troubleshooting of engine (S-mode)	UEN00447-01 ● UEN00448-00 UEN00449-00 UEN00450-00 UEN00451-00 UEN00452-00 UEN00453-00
50 Disassembly and assembly Engine and cooling system, Part 1 Engine and cooling system, Part 2	UEN01063-00 UEN01064-00

2 PC600-8

00 Index and foreword UEN00130-02

Power train	UEN01065-00
Undercarriage and frame	UEN01066-00
Hydraulic system	UEN01067-00
Work equipment	UEN01068-00
Cab and its attachments	UEN01069-00
Electrical system	UEN01070-01 ●
90 Diagrams and drawings	
Hydraulic diagrams and drawings	UEN00144-00
Electrical diagrams and drawings	UEN00145-02 ●

PC600-8 3

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$