

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC650LC-11***

SERIAL NUMBERS 80001 and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-19
FOREWORD, SAFETY, BASIC INFORMATION .....	00-25
HOW TO READ THE SHOP MANUAL.....	00-25
SAFETY NOTICE FOR OPERATION.....	00-27
PRECAUTIONS TO PREVENT FIRE.....	00-35
ACTIONS IF FIRE OCCURS .....	00-37
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-38
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-39
PRECAUTIONS FOR DEF.....	00-40
STORE AdBlue/DEF .....	00-41
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-42
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-45
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-52
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-54
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-55
PRACTICAL USE OF KOMTRAX .....	00-56
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-57
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-61
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-65
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-66
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE ..	00-71
HOW TO READ ELECTRICAL WIRE CODE .....	00-72
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-76
STANDARD TIGHTENING TORQUE TABLE.....	00-79
CONVERSION TABLE .....	00-86
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING.....	01-9
WORKING RANGE DRAWINGS .....	01-11
SPECIFICATIONS .....	01-12
WEIGHT TABLE .....	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-17
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-5
UREA SCR SYSTEM.....	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-11
UREA SCR SYSTEM DIAGRAM .....	10-16
FUNCTION OF UREA SCR SYSTEM.....	10-17
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-26
BOOT-UP SYSTEM.....	10-35
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-35
SYSTEM OPERATING LAMP SYSTEM .....	10-36
BATTERY DISCONNECT SWITCH .....	10-37
ENGINE SYSTEM .....	10-38
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-38
ENGINE CONTROL SYSTEM .....	10-40
AUTO-DECELERATION SYSTEM.....	10-43
AUTOMATIC LOW IDLE SYSTEM.....	10-45
ENGINE AUTOMATIC WARM-UP SYSTEM.....	10-47

OVERHEAT PREVENTION SYSTEM .....	10-50
TURBOCHARGER PROTECTION SYSTEM .....	10-52
AUTOMATIC IDLE STOP SYSTEM .....	10-54
COMPONENT PARTS OF ENGINE SYSTEM .....	10-57
COOLING SYSTEM.....	10-75
LAYOUT DRAWING OF COOLING SYSTEM .....	10-75
FAN SPEED CONTROL SYSTEM OF HYDRAULIC FAN.....	10-77
ENGINE OUTPUT CONTROL SYSTEM OF HYDRAULIC FAN.....	10-79
FAN REVERSE ROTATION SYSTEM OF HYDRAULIC FAN.....	10-81
COMPONENT PARTS OF COOLING SYSTEM.....	10-82
CONTROL SYSTEM.....	10-97
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-97
MACHINE MONITOR SYSTEM .....	10-99
KomVision SYSTEM .....	10-101
KOMTRAX SYSTEM.....	10-106
COMPONENT PARTS OF CONTROL SYSTEM.....	10-107
HYDRAULIC SYSTEM.....	10-147
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-147
OLSS .....	10-150
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-163
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-168
WORK EQUIPMENT SYSTEM .....	10-222
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-222
ONE-TOUCH POWER MAXIMIZING SYSTEM .....	10-228
MACHINE PUSH-UP SYSTEM.....	10-230
BOOM SHOCKLESS CONTROL FUNCTION.....	10-232
PPC LOCK SYSTEM .....	10-233
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-234
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-236
SWING SYSTEM .....	10-248
LAYOUT DRAWING OF SWING SYSTEM .....	10-248
SWING CONTROL SYSTEM DIAGRAM .....	10-251
COMPONENT PARTS OF SWING SYSTEM.....	10-255
TRAVEL SYSTEM.....	10-270
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-270
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-274
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-277
UNDERCARRIAGE AND FRAME.....	10-298
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-298
WORK EQUIPMENT.....	10-299
STRUCTURE OF WORK EQUIPMENT .....	10-299
FUNCTION OF WORK EQUIPMENT .....	10-300
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-301
BUCKET CLEARANCE ADJUSTMENT SHIM .....	10-302
CAB AND ITS ATTACHMENTS .....	10-303
ROPS CAB .....	10-303
CAB MOUNT .....	10-304
CAB TIPPING STOPPER .....	10-305
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
ABBREVIATION LIST .....	20-3
STANDARD VALUE TABLE FOR ENGINE .....	20-9
STANDARD VALUE TABLE FOR ENGINE: PC650LC-11 .....	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-14
STANDARD VALUE TABLE FOR MACHINE: PC650LC-11 .....	20-14
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE .....	20-31
30 TESTING AND ADJUSTING .....	30-1
CONTENTS .....	30-2

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$