

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC700LC-11

**SERIAL NUMBERS 80013 and up
 K70001 and up**

KOMATSU

00 INDEX AND FOREWORD

INDEX

| | |
|--|-------|
| 00 INDEX AND FOREWORD | 00-1 |
| ABBREVIATION LIST | 00-20 |
| FOREWORD, SAFETY, BASIC INFORMATION | 00-26 |
| HOW TO READ THE SHOP MANUAL | 00-26 |
| SAFETY NOTICE FOR OPERATION | 00-28 |
| PRECAUTIONS TO PREVENT FIRE | 00-36 |
| ACTIONS IF FIRE OCCURS | 00-38 |
| PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS | 00-39 |
| ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS | 00-40 |
| PRECAUTIONS FOR DEF | 00-41 |
| STORE AdBlue/DEF | 00-42 |
| PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT | 00-43 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS | 00-46 |
| PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT | 00-53 |
| PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT | 00-55 |
| PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT | 00-56 |
| PRACTICAL USE OF KOMTRAX | 00-57 |
| DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER | 00-58 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS | 00-62 |
| METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR | 00-66 |
| METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR | 00-67 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL .. | 00-69 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .. | 00-70 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE . | 00-72 |
| HOW TO READ ELECTRICAL WIRE CODE | 00-73 |
| EXPLANATION OF TERMS FOR MAINTENANCE STANDARD | 00-77 |
| STANDARD TIGHTENING TORQUE TABLE | 00-80 |
| CONVERSION TABLE | 00-87 |
| 01 SPECIFICATIONS | 01-1 |
| CONTENTS | 01-2 |
| ABBREVIATION LIST | 01-3 |
| SPECIFICATIONS | 01-9 |
| SPECIFICATION DRAWING | 01-9 |
| WORKING RANGE DRAWINGS | 01-12 |
| SPECIFICATIONS | 01-14 |
| WEIGHT TABLE | 01-20 |
| TABLE OF FUEL, COOLANT, AND LUBRICANTS | 01-23 |
| 10 STRUCTURE AND FUNCTION | 10-1 |
| CONTENTS | 10-2 |
| ABBREVIATION LIST | 10-5 |
| UREA SCR SYSTEM | 10-11 |
| LAYOUT DRAWING OF UREA SCR SYSTEM | 10-11 |
| UREA SCR SYSTEM DIAGRAM | 10-16 |
| FUNCTION OF UREA SCR SYSTEM | 10-17 |
| COMPONENT PARTS OF UREA SCR SYSTEM | 10-27 |
| BOOT-UP SYSTEM | 10-36 |
| LAYOUT DRAWING OF BOOT-UP SYSTEM | 10-36 |
| SYSTEM OPERATING LAMP SYSTEM | 10-37 |
| BATTERY DISCONNECT SWITCH | 10-39 |
| ENGINE SYSTEM | 10-40 |
| LAYOUT DRAWING OF ENGINE SYSTEM | 10-40 |
| ENGINE CONTROL SYSTEM | 10-42 |
| AUTO-DECELERATION SYSTEM | 10-45 |
| AUTOMATIC LOW IDLE SYSTEM | 10-47 |
| ENGINE AUTOMATIC WARM-UP SYSTEM | 10-49 |

| | |
|---|--------|
| OVERHEAT PREVENTION SYSTEM | 10-52 |
| TURBOCHARGER PROTECTION SYSTEM | 10-54 |
| AUTOMATIC IDLE STOP SYSTEM | 10-56 |
| COMPONENT PARTS OF ENGINE SYSTEM | 10-59 |
| COOLING SYSTEM..... | 10-77 |
| LAYOUT DRAWING OF COOLING SYSTEM | 10-77 |
| FAN SPEED CONTROL SYSTEM OF HYDRAULIC FAN..... | 10-79 |
| ENGINE OUTPUT CONTROL SYSTEM OF HYDRAULIC FAN..... | 10-81 |
| FAN REVERSE ROTATION SYSTEM OF HYDRAULIC FAN..... | 10-83 |
| COMPONENT PARTS OF COOLING SYSTEM..... | 10-84 |
| CONTROL SYSTEM..... | 10-99 |
| LAYOUT DRAWING OF CONTROL SYSTEM | 10-99 |
| MACHINE MONITOR SYSTEM | 10-101 |
| KomVision SYSTEM | 10-103 |
| KOMTRAX SYSTEM..... | 10-107 |
| COMPONENT PARTS OF CONTROL SYSTEM..... | 10-108 |
| HYDRAULIC SYSTEM..... | 10-144 |
| LAYOUT DRAWING OF HYDRAULIC SYSTEM | 10-144 |
| OLSS | 10-147 |
| ENGINE AND PUMP COMBINED CONTROL SYSTEM..... | 10-159 |
| COMPONENT PARTS OF HYDRAULIC SYSTEM | 10-164 |
| WORK EQUIPMENT SYSTEM | 10-216 |
| LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM | 10-216 |
| ONE-TOUCH POWER MAXIMIZING SYSTEM | 10-222 |
| MACHINE PUSH-UP SYSTEM..... | 10-224 |
| PPC LOCK SYSTEM | 10-226 |
| WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM | 10-227 |
| COMPONENT PARTS OF WORK EQUIPMENT SYSTEM..... | 10-229 |
| SWING SYSTEM..... | 10-248 |
| LAYOUT DRAWING OF SWING SYSTEM | 10-248 |
| SWING CONTROL SYSTEM DIAGRAM | 10-251 |
| COMPONENT PARTS OF SWING SYSTEM..... | 10-255 |
| TRAVEL SYSTEM..... | 10-269 |
| LAYOUT DRAWING OF TRAVEL SYSTEM..... | 10-269 |
| TRAVEL CONTROL SYSTEM DIAGRAM..... | 10-273 |
| COMPONENT PARTS OF TRAVEL SYSTEM | 10-276 |
| UNDERCARRIAGE AND FRAME..... | 10-294 |
| LAYOUT DRAWING OF UNDERCARRIAGE | 10-294 |
| WORK EQUIPMENT..... | 10-295 |
| STRUCTURE OF WORK EQUIPMENT | 10-295 |
| FUNCTION OF WORK EQUIPMENT | 10-296 |
| WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM..... | 10-297 |
| BUCKET CLEARANCE ADJUSTMENT SHIM | 10-298 |
| CAB AND ITS ATTACHMENTS | 10-299 |
| ROPS CAB | 10-299 |
| CAB MOUNT | 10-300 |
| CAB TIPPING STOPPER | 10-301 |
| 20 STANDARD VALUE TABLE | 20-1 |
| CONTENTS | 20-2 |
| ABBREVIATION LIST | 20-3 |
| STANDARD VALUE TABLE FOR ENGINE | 20-9 |
| STANDARD VALUE TABLE FOR ENGINE: PC700LC-11 | 20-9 |
| STANDARD VALUE TABLE FOR MACHINE..... | 20-14 |
| STANDARD VALUE TABLE FOR MACHINE: PC700LC-11 | 20-14 |
| MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE | 20-31 |
| 30 TESTING AND ADJUSTING | 30-1 |
| CONTENTS | 30-2 |
| ABBREVIATION LIST | 30-5 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$