

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC78UU-10***

SERIAL NUMBERS 30001 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-16
Foreword, Safety, Basic Information .....	00-22
How to Read the Shop Manual .....	00-22
Safety Notice for Operation .....	00-24
Precautions to Prevent Fire .....	00-32
Procedures If Fire Occurs .....	00-34
Precautions When You Discard Waste Materials .....	00-35
Procedures for Exhaust Gas Regulations .....	00-36
Precautions for DEF .....	00-37
Store DEF .....	00-38
Precautions When You Handle Hydraulic Equipment .....	00-39
Precautions When You Disconnect and Connect Pipings .....	00-42
Precautions When You Handle Electrical Equipment .....	00-49
Precautions When You Handle Fuel System Equipment .....	00-51
Precautions When You Handle Intake System Equipment .....	00-52
Practical Use of KOMTRAX .....	00-53
Disconnect and Connect Push-Pull Type Coupler .....	00-54
Precautions for Disconnection and Connection of Connectors .....	00-58
Disconnect and Connect Deutsch Connector .....	00-62
How to Disconnect and Connect Slide Lock Type Connector .....	00-63
Disconnect and Connect Connector with Lock to Pull .....	00-65
Disconnect and Connect Connector with Lock to Push .....	00-66
Disconnect and Connect Connector with Housing to Rotate .....	00-68
How to Read the Codes for Electric Cable .....	00-69
Explanation of Terms for Maintenance Standard .....	00-73
Standard Tightening Torque Table .....	00-76
Conversion Table .....	00-83
01 Specification .....	01-1
Table of Contents .....	01-2
Abbreviation List .....	01-3
Specifications .....	01-9
Specification Drawing .....	01-9
Working Range Drawings .....	01-10
Specifications .....	01-12
Weight Table .....	01-16
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Abbreviation List .....	10-5
Boot-up System .....	10-11
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal) .....	10-11
Layout Drawing of Boot-up System (Machine with Gateway Function Controller) .....	10-12
System Operating Lamp System .....	10-13
Battery Disconnect Switch .....	10-16
Engine System .....	10-18
Layout Drawing of Engine System .....	10-18
Engine Control System .....	10-20
Auto-Deceleration System .....	10-26
Engine Automatic Warm-up System .....	10-28
Overheat Prevention System .....	10-30
Turbocharger Protection System .....	10-31
Automatic Idle Stop System .....	10-32
Component Parts of Engine System .....	10-36
Cooling System .....	10-51
Layout Drawing of Cooling System .....	10-51
Control System .....	10-54

Layout Drawing of Control System .....	10-54
Machine Monitor System.....	10-57
KOMTRAX System .....	10-59
Component Parts of Control System .....	10-61
Hydraulic System .....	10-94
Layout Drawing of Hydraulic System.....	10-94
CLSS .....	10-98
Engine and Pump Combined Control System .....	10-101
Component Parts of Hydraulic System.....	10-105
Work Equipment System.....	10-172
Layout Drawing of Work Equipment System .....	10-172
Structure of Valve Control .....	10-176
PPC Lock System .....	10-177
Work Equipment and Travel Automatic Lock System .....	10-178
Interference Prevention Device .....	10-181
Automatic Control Device (UU Mode) .....	10-189
End Cushion Function.....	10-193
Resetting Function .....	10-194
Bucket DUMP Control Lock System.....	10-196
Component Parts of Work Equipment System .....	10-197
Swing System .....	10-228
Layout Drawing of Swing System.....	10-228
Swing Control System Diagram .....	10-231
Component Parts of Swing System.....	10-233
Travel System .....	10-245
Layout Drawing of Travel System.....	10-245
System Diagram of Travel Control System.....	10-247
Component Parts of Travel System.....	10-249
Undercarriage and Frame .....	10-265
Layout Drawing of Undercarriage.....	10-265
Idler Cushion.....	10-267
Work Equipment .....	10-268
Structure of Work Equipment .....	10-268
Function of Work Equipment.....	10-270
Work Equipment Clearance Adjustment Shim.....	10-271
Bucket Clearance Adjustment Shim .....	10-272
CAB Related Parts.....	10-273
ROPS CAB .....	10-273
CAB Mount .....	10-275
Remove Wiring Harness Out of Cab .....	10-277
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Abbreviation List .....	20-3
Standard Value Table for Engine .....	20-9
Standard Value Table for Engine: PC78UU-10 .....	20-9
Standard Value Table for Machine.....	20-12
Standard Value Table for Machine: PC78UU-10.....	20-12
Machine Posture and Procedures to Measure Performance .....	20-26
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-5
Abbreviation List .....	30-6
Related Information on Testing and Adjusting .....	30-12
Tools for Testing and Adjusting.....	30-12
Sketch of Tools for Testing and Adjusting .....	30-17
Engine and Cooling System .....	30-19
Examine Engine Speed.....	30-19
Examine Exhaust Gas Color .....	30-22

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$