

Shop Manual

HYDRAULIC
EXCAVATOR

PC800 -8R

PC800LC-8R

PC800SE-8R

PC850 -8R

PC850SE-8R

SERIAL NUMBERS

PC800- 60001

PC800LC- 60001

PC800SE- 60001

PC850- 60001

PC850SE- 60001

and up

KOMATSU

HYDRAULIC EXCAVATOR

PC800-8R

PC850-8R

PC800SE-8R

PC850SE-8R

PC800LC-8R

Machine model

Serial number

PC800-8R

60001 and up

PC800SE-8R

60001 and up

PC800LC-8R

60001 and up

PC850-8R

60001 and up

PC850SE-8R

60001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02316-15
00 Index and foreword	SEN02317-15
Index	SEN02318-15 ●
Foreword and general information	SEN02319-03
01 Specification	SEN02320-01
Specification and technical data	SEN02321-01
10 Structure, function and maintenance standard	SEN02322-07
Engine and cooling system	SEN02323-00
Power train	SEN02324-02
Undercarriage and frame	SEN02325-00
Hydraulic system, Part 1	SEN02326-02
Hydraulic system, Part 2	SEN02327-02
Work equipment	SEN02328-00
Cab and its attachments	SEN02329-00
Electrical system	SEN02330-03
20 Standard value table	SEN02331-00
Standard service value table	SEN02675-00
30 Testing and adjusting	SEN02332-04
Testing and adjusting, Part 1	SEN02676-03
Testing and adjusting, Part 2	SEN02677-03
Testing and adjusting, Part 3	SEN02678-01
Testing and adjusting, Part 4	SEN02679-02
Testing and adjusting, Part 5	SEN02680-01
40 Troubleshooting	SEN02333-04
Failure code table and fuse locations	SEN04110-02
General information on troubleshooting	SEN02681-03
Troubleshooting by failure code (Display of code), Part 1	SEN02682-03
Troubleshooting by failure code (Display of code), Part 2	SEN02683-01
Troubleshooting by failure code (Display of code), Part 3	SEN02684-01
Troubleshooting of electrical system (E-mode)	SEN02685-01
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02686-00

Troubleshooting of engine (S-mode)	SEN02687-01
50 Disassembly and assembly	SEN02334-07
General information on disassembly and assembly	SEN02767-03 ●
Engine and cooling system (SAA6D140E-5)	SEN02768-00
Engine (SAA6D140E-5)	SEN02769-00
Power train	SEN02770-03
Undercarriage and frame	SEN02771-05 ●
Hydraulic system	SEN02772-01
Work equipment	SEN02773-00
Cab and its attachments	SEN02774-00
Electrical system	SEN02775-00
90 Diagrams and drawings	SEN02335-02
Hydraulic diagrams and drawings	SEN02336-01
Electrical diagrams and drawings	SEN02337-01

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$