

Shop Manual

HYDRAULIC
EXCAVATOR

PC88MR-10

SERIAL NUMBERS PC88MR-10 F10003 and up

KOMATSU

HYDRAULIC EXCAVATOR PC88MR-10

Machine model	Serial number
PC88MR-10	F10003 and up

00 Index and foreword

Table of contents

00 Index and foreword

Table of contents.....	2
Foreword, safety and general information.....	14
Important safety notice.....	14
Fire prevention.....	19
Dispose of waste materials.....	20
How to read the shop manual.....	21
Explanation of terms for maintenance standard.....	23
Handling equipment of fuel system devices.....	25
Handling of intake system parts.....	26
Handling of hydraulic equipment.....	27
Method of disconnecting and connecting of push-pull type coupler.....	29
Handling of electrical equipment.....	32
How to read electric wire code.....	40
Precautions when performing operation.....	43
Practical use of KOMTRAX.....	48
Standard tightening torque table.....	49
List of abbreviation.....	55
Conversion table.....	60

01 Specification

Specifications.....	3
Specification drawing.....	3
Working range drawings.....	4
Specifications.....	5
Weight table.....	9
Table of fuel, coolant, and lubricants.....	11

10 Structure and function

Engine and cooling system.....	3
Engine related parts.....	3
PTO.....	5
Variable flow turbocharger.....	6
EGR system piping drawing.....	10
EGR system circuit diagram.....	12
EGR valve.....	13
EGR cooler.....	15
KCCV layout drawing.....	17
KCCV ventilator.....	20
KDOC muffler.....	22
Cooling system.....	24
Cooling system.....	24
Power train.....	27
Power train system.....	27
Swing circle.....	29
Swing machinery.....	31
Undercarriage and frame.....	33
Track frame.....	33
Idler cushion.....	35
Hydraulic system.....	36

Hydraulic component layout	36
Valve control	38
Hydraulic tank	40
CLSS	44
Main pump	48
Control valve	60
Swing motor	111
Travel motor	122
Work equipment and swing PPC valve	133
Travel PPC valve	140
Blade PPC valve	146
Boom swing PPC valve	148
Solenoid valve	150
Center swivel joint	154
Accumulator	155
Work equipment	157
Work equipment	157
Work equipment shim	158
Bucket play adjustment shim	159
Cab and its attachments	160
Cab mount and cab tipping stopper	160
ROPS cab	162
Electrical system	164
Electrical control system	164
Machine monitor system	210
KOMTRAX system	232
Sensor	234
20 Standard value tables	
Standard service value table	3
Standard value table for engine	3
Standard value table for machine	5
Standard value table for electrical system	22
30 Testing and adjusting	1
Table of contents	2
Related information on testing and adjusting	3
Tools for testing and adjusting	3
Sketch of tools for testing and adjusting	6
Engine and cooling system	8
Testing engine speed	8
Testing exhaust gas color	9
Testing and adjusting valve clearance	10
Testing compression pressure	12
Testing blowby pressure	14
Testing engine oil pressure	15
Testing fuel pressure	16
Testing fuel return rate and leakage	17
Bleeding air from fuel system	20
Testing fuel circuit for leakage	22
Handling cylinder cutout mode operation	23
Handling no-injection cranking operation	24
Testing and adjusting air conditioner compressor belt tension	25
Replacing fan belt	26
Writing compensation values at replacement of injector and engine controller	28

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$