

# Shop Manual

HYDRAULIC  
EXCAVATOR

# PW118MR-8

SERIAL NUMBERS PW118MR-8 F00003 and up

**KOMATSU**



# **HYDRAULIC EXCAVATOR PW118MR-8**

<b>Machine model</b>	<b>Serial number</b>
PW118MR-8	F00003 and up

---

## **00 Index and foreword**

---

---

## Table of contents

### 00 Index and foreword

Table of contents.....	2
Foreword and general information .....	10
Safety notice .....	10
How to read the shop manual .....	15
Explanation of terms for maintenance standard .....	17
Handling of hydraulic components.....	19
Method of disconnecting and connecting push-pull type coupler .....	21
Handling of electric equipment.....	24
How to read electric wire code.....	34
Precautions when performing work.....	37
Standard tightening torque table.....	40
List of abbreviation.....	44
Conversion table .....	48

### 01 Specification

Specifications.....	3
Specifications drawing .....	3
Specifications.....	5
Table of weight.....	8
Table of fuel, coolant and lubricants .....	10

### 10 Structure and function

Engine and cooling system .....	4
Engine mount.....	4
PTO.....	5
Cooling system .....	6
Power train .....	8
Power train overview.....	8
Front axle .....	9
Differential.....	9
Brakes.....	10
Final reduction .....	11
Steering cylinder .....	12
Transmission.....	13
Rear axle.....	15
Differential.....	15
Final reduction .....	16
Steering cylinder .....	17
Brakes and parking brake cylinder.....	18
Steering system .....	20
Steering unit.....	24
Priority valve .....	25
Swing circle.....	26
Swing machinery.....	27
Hydraulic system.....	28
Hydraulic tank and filter .....	28
Hydraulic pump .....	30
Blade specification .....	30
Control valve.....	42

Outline .....	42
11-spool valve.....	43
CLSS .....	54
Outline of CLSS .....	54
Basic principle.....	55
Function and operation by valve .....	58
PPC valve .....	75
Work equipment and swing PPC valve.....	75
Travel PPC valve .....	80
Blade, boom swing, 2-piece boom PPC valves .....	82
Brakes pump.....	86
Swing motor .....	87
Travel motor.....	93
Swivel joint.....	100
Solenoid valve .....	102
PPC accumulator.....	107
Holding valve .....	108
Work equipment.....	113
Work equipment.....	113
Dimensions of components .....	116
1,850 mm arm.....	116
2,000 mm arm.....	118
2,300 mm arm.....	120
Bucket.....	122
Work equipment cylinder .....	124
Boom cylinder .....	124
2-piece boom cylinder.....	124
Arm cylinder.....	124
Bucket cylinder .....	125
Boom swing cylinder.....	125
Blade/outrigger cylinder.....	125
20 Standard value table	
Standard value table for engine .....	3
Standard value table for chassis.....	4
30 Testing and adjusting	
Testing and adjusting.....	3
Testing engine speed .....	3
Testing exhaust temperature .....	4
Checking exhaust gas colour.....	5
Adjusting valve clearance .....	6
Testing compression pressure.....	8
Testing blow-by pressure.....	10
Testing engine oil pressure.....	11
Handling fuel system parts .....	12
Releasing residual pressure from fuel system .....	12
Testing fuel pressure .....	13
Testing fuel return rate and fuel leakage .....	14
Bleeding air from fuel circuit .....	16
Checking fuel circuit for leakage.....	18
Testing and adjusting alternator belt tension .....	19
Measuring the swing circle axial clearance.....	20

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$