

Shop Manual

WHEEL LOADER

WA320-7

SERIAL NUMBERS 80001 and up

KOMATSU

SHOP MANUAL

WHEEL LOADER

WA320-7

Model Serial Number

WA320-7 80001 and up

00 Index and foreword

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-17
Important safety notice	00-17
How to read the shop manual	00-24
Explanation of terms for maintenance standard	00-26
Handling equipment of fuel system devices	00-28
Handling of intake system parts	00-29
Handling of hydraulic equipment	00-30
Method of disconnecting and connecting of push-pull type coupler	00-32
Handling of electrical equipment	00-35
How to read electric wire code	00-43
Precautions when performing operation	00-46
Practical use of KOMTRAX	00-51
Standard tightening torque table	00-52
List of abbreviation	00-58
Conversion table	00-63
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Specifications	01-7
Weight table	01-17
Table of fuel, coolant, and lubricants	01-21
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-4
Engine related parts	10-4
KVTG	10-6
EGR system piping drawing	10-13
EGR system circuit diagram	10-15
EGR valve	10-17
EGR cooler	10-19
KCCV layout drawing	10-20
KCCV ventilator	10-22
KDPF	10-24
Cooling system	10-28
Cooling fan motor	10-30
Power train	10-40
Power train system	10-40
Layout of power train parts	10-42
Damper	10-43
HST pump	10-44
HST motor1	10-57
HST motor2	10-59
Transfer	10-64
Clutch solenoid valve	10-71
Drive shaft	10-73
Axle	10-74
Differential	10-76
Torque proportional differential	10-80
Limited slip differential	10-82
Final drive	10-87
Steering system	10-89
Layout of steering devices	10-89
Steering column	10-90
Priority valve	10-91
Cushion valve	10-95

Emergency steering valve.....	10-96
Orbitrol valve	10-99
Brake system	10-105
Layout of brake parts.....	10-105
Brake accumulator charge valve.....	10-107
Brake valve	10-112
Brake accumulator	10-116
Slack adjuster.....	10-117
Brake	10-119
Parking brake control	10-122
Parking brake	10-123
Parking brake solenoid valve	10-124
Undercarriage and frame.....	10-126
Axle mount	10-126
Center hinge pin	10-128
Tire	10-129
Hydraulic system	10-131
Hydraulic component layout.....	10-131
Work equipment control	10-133
Hydraulic tank.....	10-134
Double type gear pump	10-137
Steering and work equipment pump.....	10-138
Control valve	10-150
CLSS.....	10-160
Hydraulic circuit diagram and names of valves.....	10-164
Self-pressure reducing valve.....	10-177
Work equipment PPC valve	10-182
Work equipment lock solenoid valve	10-190
PPC circuit accumulator	10-191
ECSS accumulator.....	10-192
Work equipment	10-193
Work equipment linkage	10-193
Bucket	10-194
Cab and its attachments.....	10-195
ROPS cab.....	10-195
Cab mount	10-197
Electrical system	10-198
Engine control system	10-198
Preheating system	10-201
Engine output limit function	10-203
Automatic warm-up function.....	10-204
Parking brake control system.....	10-205
System operating lamp function.....	10-209
Battery disconnect switch function	10-210
HST controller system.....	10-212
Machine monitor system.....	10-252
Rearview monitor system.....	10-273
KOMTRAX system.....	10-276
System component parts	10-279
Sensor	10-302
20 Standard value tables.....	20-1
Table of contents	20-2
Standard service value table.....	20-3
Standard value table for engine	20-3
Standard value table for machine	20-5
Standard value table for electrical system.....	20-17
30 Testing and adjusting	30-1
Table of contents	30-2
Related information on testing and adjusting	30-4

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$