

Shop Manual

WHEEL LOADER

WA320-8

SERIAL NUMBERS H70051 and up
85001 and up

00 INDEX AND FOREWORD

INDEX

| | |
|--|-------|
| 00 INDEX AND FOREWORD | 00-1 |
| ABBREVIATION LIST | 00-21 |
| FOREWORD, SAFETY, BASIC INFORMATION | 00-27 |
| HOW TO READ THE SHOP MANUAL..... | 00-27 |
| SAFETY NOTICE FOR OPERATION..... | 00-29 |
| PRECAUTIONS TO PREVENT FIRE..... | 00-37 |
| ACTIONS IF FIRE OCCURS | 00-39 |
| PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS | 00-40 |
| ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS..... | 00-41 |
| PRECAUTIONS FOR DEF..... | 00-42 |
| STORE AdBlue/DEF | 00-43 |
| PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT | 00-44 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS..... | 00-47 |
| PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT..... | 00-53 |
| PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT | 00-55 |
| PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT | 00-56 |
| PRACTICAL USE OF KOMTRAX | 00-57 |
| DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER | 00-58 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS | 00-62 |
| METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR | 00-66 |
| METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR | 00-67 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ... | 00-69 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .. | 00-70 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE . | 00-72 |
| HOW TO READ ELECTRICAL WIRE CODE | 00-73 |
| EXPLANATION OF TERMS FOR MAINTENANCE STANDARD..... | 00-77 |
| STANDARD TIGHTENING TORQUE TABLE..... | 00-80 |
| CONVERSION TABLE | 00-87 |
| 01 SPECIFICATIONS | 01-1 |
| CONTENTS | 01-2 |
| ABBREVIATION LIST | 01-3 |
| SPECIFICATIONS | 01-9 |
| SPECIFICATION DRAWING | 01-9 |
| SPECIFICATIONS | 01-11 |
| WEIGHT TABLE | 01-16 |
| TABLE OF FUEL, COOLANT, AND LUBRICANTS | 01-18 |
| 10 STRUCTURE AND FUNCTION | 10-1 |
| CONTENTS | 10-2 |
| ABBREVIATION LIST | 10-6 |
| UREA SCR SYSTEM..... | 10-12 |
| LAYOUT DRAWING OF UREA SCR SYSTEM | 10-12 |
| UREA SCR SYSTEM DIAGRAM | 10-14 |
| FUNCTION OF UREA SCR SYSTEM..... | 10-15 |
| COMPONENT PARTS OF UREA SCR SYSTEM..... | 10-33 |
| BOOT-UP SYSTEM | 10-42 |
| LAYOUT DRAWING OF BOOT-UP SYSTEM..... | 10-42 |
| SYSTEM OPERATING LAMP SYSTEM | 10-44 |
| BATTERY DISCONNECT SWITCH | 10-45 |
| PREHEATING SYSTEM | 10-46 |
| ENGINE SYSTEM | 10-48 |
| LAYOUT DRAWING OF ENGINE SYSTEM..... | 10-48 |
| ENGINE CONTROL SYSTEM | 10-50 |
| AUTOMATIC IDLE STOP SYSTEM | 10-57 |
| COMPONENT PARTS OF ENGINE SYSTEM | 10-58 |
| COOLING SYSTEM..... | 10-77 |

| | |
|---|--------|
| LAYOUT DRAWING OF COOLING SYSTEM | 10-77 |
| COOLING FAN CONTROL SYSTEM..... | 10-79 |
| COMPONENT PARTS OF COOLING SYSTEM..... | 10-84 |
| CONTROL SYSTEM..... | 10-97 |
| LAYOUT DRAWING OF CONTROL SYSTEM | 10-97 |
| MACHINE MONITOR SYSTEM | 10-99 |
| REARVIEW MONITOR SYSTEM..... | 10-101 |
| KOMTRAX SYSTEM..... | 10-102 |
| COMPONENT PARTS OF CONTROL SYSTEM..... | 10-103 |
| HYDRAULIC SYSTEM..... | 10-146 |
| LAYOUT DRAWING OF HYDRAULIC SYSTEM | 10-146 |
| CLSS | 10-147 |
| COMPONENT PARTS OF HYDRAULIC SYSTEM | 10-150 |
| POWER TRAIN SYSTEM | 10-198 |
| LAYOUT DRAWING OF POWER TRAIN SYSTEM..... | 10-198 |
| OPERATION OF POWER TRAIN SYSTEM..... | 10-200 |
| DIRECTIONAL SELECTOR SWITCH CONTROL FUNCTION..... | 10-201 |
| HST CONTROL SYSTEM..... | 10-203 |
| HST CHARGE SYSTEM..... | 10-205 |
| HST PUMP CONTROL SYSTEM..... | 10-206 |
| HST CONTROLLER GEAR SHIFT CONTROL FUNCTION..... | 10-208 |
| TRANSFER CLUTCH CONTROL FUNCTION..... | 10-211 |
| HST SYSTEM PROTECTION FUNCTION..... | 10-212 |
| MAXIMUM SPEED LOW FUEL CONSUMPTION CONTROL..... | 10-215 |
| KOMATSU TRACTION CONTROL SYSTEM (KTCS)..... | 10-218 |
| COMPONENT PARTS OF POWER TRAIN SYSTEM..... | 10-223 |
| WORK EQUIPMENT SYSTEM | 10-270 |
| LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM | 10-270 |
| WORK EQUIPMENT CONTROL SYSTEM..... | 10-272 |
| WORK EQUIPMENT LOCK SYSTEM..... | 10-273 |
| BUCKET POSITIONER SYSTEM..... | 10-275 |
| FORK POSITIONER SYSTEM | 10-279 |
| REMOTE POSITIONER SYSTEM | 10-283 |
| ECSS..... | 10-286 |
| COMPONENT PARTS OF WORK EQUIPMENT SYSTEM..... | 10-288 |
| STEERING SYSTEM..... | 10-303 |
| LAYOUT DRAWING OF STEERING SYSTEM | 10-303 |
| STEERING COLUMN | 10-304 |
| COMPONENT PARTS OF STEERING SYSTEM..... | 10-305 |
| BRAKE SYSTEM..... | 10-318 |
| LAYOUT DRAWING OF BRAKE SYSTEM | 10-318 |
| PARKING BRAKE CONTROL SYSTEM | 10-320 |
| COMPONENT PARTS OF BRAKE SYSTEM..... | 10-324 |
| AUTO-GREASING SYSTEM | 10-342 |
| LAYOUT DRAWING OF AUTO-GREASING SYSTEM..... | 10-342 |
| SPECIFICATIONS OF AUTO-GREASING SYSTEM | 10-343 |
| FUNCTION OF AUTO-GREASING SYSTEM | 10-345 |
| COMPONENT PARTS OF AUTO-GREASING SYSTEM | 10-346 |
| UNDERCARRIAGE AND FRAME..... | 10-347 |
| FRAME, AXLE MOUNT AND CENTER HINGE PIN | 10-347 |
| TIRE | 10-350 |
| WORK EQUIPMENT..... | 10-352 |
| STRUCTURE OF WORK EQUIPMENT | 10-352 |
| STRUCTURE OF BUCKET..... | 10-353 |
| CAB AND ITS ATTACHMENTS | 10-354 |
| ROPS CAB | 10-354 |
| CAB MOUNT | 10-355 |
| 20 STANDARD VALUE TABLE | 20-1 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$