

Shop Manual

WHEEL LOADER

WA470-6R

WA480-6R

SERIAL NUMBERS

WA470-10001

WA480-10001

and up

KOMATSU

00 Index and foreword

Table of contents

00 Index and foreword	
Table of contents	00-2
Foreword and general information	00-15
Safety notice	00-15
How to read the shop manual	00-20
Explanation of terms for maintenance standard	00-22
Handling of electric equipment and hydraulic component	00-24
Handling of connectors newly used for engines	00-33
How to read electric wire code	00-36
Precautions when carrying out operation	00-39
Method of disassembling and connecting push-pull type coupler	00-42
Standard tightening torque table	00-45
Conversion table	00-49
01 Specification	
Specification and technical data	01-3
Specification dimension drawing	01-3
Specifications	01-4
Weight table	01-8
Table of fuel, coolant and lubricants	01-10
10 Structure, function and maintenance standard	
Engine and cooling system	10-4
Engine mount and transmission mount	10-4
Cooling system	10-5
Cooling fan pump	10-6
Cooling fan motor	10-14
Power train	10-21
Power train	10-21
Power train system diagram	10-22
Drive shaft	10-24
Power train piping diagram	10-25
Torque converter	10-26
Transmission	10-34
Transmission control valve	10-52
ECMV	10-56
Main relief valve and torque converter relief valve	10-68
Axle	10-70
Differential	10-74
Limited slip differential	10-79
Final drive	10-86
Steering system	10-92
Steering component layout drawing	10-92
Steering column	10-93
Steering pump	10-94
Steering valve	10-107
Orbit-roll valve	10-124
Stop valve	10-132
Steering relief valve	10-133
Steering cylinder	10-134
Emergency steering motor	10-136
Emergency steering pump	10-137

Joystick steering lever linkage	10-138
Electrical steering lever.....	10-139
Joystick EPC valve	10-140
Brake system	10-142
Brake component layout drawing	10-142
Component layout of brake cooling system.....	10-142-1
Brake cooling control system.....	10-142-2
Charge valve.....	10-143
Brake valve	10-150
Accumulator (for brake)	10-155
Slack adjuster	10-156
Brake	10-158
Parking brake control.....	10-163
Parking brake.....	10-164
Parking brake solenoid valve.....	10-166
Emergency parking brake release valve.....	10-168
Brake cooling oil cooler.....	10-169
Brake cooling pump motor	10-169-1
Brake cooling fan	10-169-2
Undercarriage and frame	10-170
Axle mount and center hinge pin	10-170
Tires.....	10-174
Hydraulic system	10-176
Hydraulic component layout drawing.....	10-176
Work equipment control lever linkage.....	10-179
Hydraulic tank	10-182
Power train pump.....	10-184
Work equipment pump.....	10-186
Work equipment control valve	10-206
CLSS	10-217
Each function and operation of each valve.....	10-222
PPC valve	10-236
Accumulator (for PPC circuit)	10-244
Accumulator (for power train circuit)	10-245
Accumulator (for ECSS)	10-246
Work equipment PPC cut-off solenoid valve	10-247
Work equipment.....	10-250
Work equipment linkage	10-250
Bucket.....	10-253
Bucket positioner and boom kick-out.....	10-254
Work equipment cylinder	10-260
Cab and its attachments	10-261
Cab	10-261
Air conditioner.....	10-262
Electrical system.....	10-280
Machine monitor system.....	10-280
Machine monitor	10-284
Electrical system (Transmission controller system).....	10-316
Transmission controller.....	10-356
Electrical system (Work equipment controller system)	10-358
Work equipment controller.....	10-364
Electric transmission control	10-366
Kickdown switch and hold switch.....	10-370
Load meter cancel switch and load meter subtotal switch.....	10-370

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$