

# Shop Manual

**WHEEL LOADER**

**WA500-7**

**SERIAL NUMBERS**

**10001 and up**

**H62051 and up**



# WHEEL LOADER

## WA500-7

Model	Serial Number
WA500-7	10001 and up
WA500-7	H62051 and up

---

# 00 Index and foreword

---

---

**Index** (ALL-0310-001-A-00-A)

00 Index and foreword .....	00-1
Index .....	00-2
Foreword, safety and general information .....	00-18
Important safety notice .....	00-18
How to read the shop manual .....	00-25
Explanation of terms for maintenance standard .....	00-27
Handling equipment of fuel system devices .....	00-29
Handling of intake system parts .....	00-30
Handling of hydraulic equipment .....	00-31
Method of disconnecting and connecting of push-pull type coupler .....	00-33
Handling of electrical equipment .....	00-36
How to read electric wire code .....	00-44
Precautions when performing operation .....	00-47
Practical use of KOMTRAX .....	00-51
Standard tightening torque table .....	00-52
List of abbreviation .....	00-56
Conversion table .....	00-61
01 Specification .....	01-1
Table of contents .....	01-2
Specifications .....	01-3
Specification drawing .....	01-3
Specification .....	01-5
Weight table .....	01-12
Table of fuel, coolant, and lubricants .....	01-14
10 Structure and function .....	10-1
Table of contents .....	10-2
Engine and cooling system .....	10-4
Engine related parts .....	10-4
KVTG .....	10-6
EGR system piping drawing .....	10-12
EGR system circuit diagram .....	10-14
EGR valve .....	10-15
EGR cooler .....	10-17
KCCV layout drawing .....	10-19
KCCV ventilator .....	10-21
KDPF .....	10-23
Engine mount and transmission mount .....	10-27
Joint .....	10-28
Cooling system .....	10-29
Cooling fan pump .....	10-33
Cooling fan motor .....	10-42
Power train .....	10-49
Power train system .....	10-49
Drive shaft .....	10-52
Power train piping drawing .....	10-53
Transmission control .....	10-54
Torque converter .....	10-56
Torque converter regulator valve .....	10-63
Transmission .....	10-65
Transfer .....	10-82
Transmission control valve .....	10-84
Forward and reverse clutch ECMV and gear speed clutch ECMV .....	10-87
Lockup clutch ECMV .....	10-94
Main relief valve, torque converter relief valve, and main flow selector valve .....	10-98
Torque converter oil cooler .....	10-103
Center support .....	10-104
Lubricating oil relief valve .....	10-105
Axle .....	10-106

Differential .....	10-110
Final drive .....	10-120
Steering system .....	10-122
Layout of steering parts .....	10-122
Steering column .....	10-123
Joystick steering lever linkage .....	10-124
Steering pump .....	10-125
Steering control valve .....	10-137
Orbitrol valve .....	10-147
Stop valve .....	10-153
Emergency steering piping diagram .....	10-154
Diverter valve .....	10-155
Emergency steering pump .....	10-159
Brake system .....	10-160
Layout of brake parts .....	10-160
Charge valve .....	10-162
Brake valve .....	10-168
Slack adjuster .....	10-173
Accumulator (for brake) .....	10-176
Brake .....	10-177
Parking brake control .....	10-179
Parking brake .....	10-180
Parking brake solenoid valve .....	10-182
Parking brake emergency release valve .....	10-185
Undercarriage and frame .....	10-186
Axle mount .....	10-186
Center hinge pin .....	10-187
Tire .....	10-189
Hydraulic system .....	10-191
Hydraulic component layout .....	10-191
Work equipment control .....	10-193
Hydraulic tank .....	10-195
Double type gear pump .....	10-198
Work equipment pump .....	10-199
Control valve .....	10-220
CLSS .....	10-229
Hydraulic circuit diagram and names of valves .....	10-233
Accumulator charge valve .....	10-245
Work equipment lock solenoid valve .....	10-249
Accumulator (for PPC circuit) .....	10-250
Accumulator (for ECSS) .....	10-251
Work equipment .....	10-252
Work equipment linkage .....	10-252
Bucket .....	10-253
Bucket positioner and boom positioner .....	10-255
Lubrication of machine .....	10-256
Cab and its attachments .....	10-258
ROPS cab .....	10-258
Electrical system .....	10-259
Engine control system .....	10-259
Preheating system .....	10-261
Power mode selector circuit .....	10-263
Engine output limit function .....	10-264
Automatic warm-up function .....	10-265
Parking brake control system .....	10-266
System operating lamp function .....	10-268
Battery disconnect switch function .....	10-270
Backup lamp and brake lamp .....	10-272
Clearance lamp and headlamp .....	10-274

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$