

# Shop Manual

WHEEL LOADER

**WA800-8**  
**WA900-8**

SERIAL NUMBERS

WA800-80001  
WA900-90001

and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Foreword, Safety, Basic Information .....	00-25
How to Read the Shop Manual .....	00-25
Safety Notice for Operation .....	00-27
Precautions to Prevent Fire .....	00-35
Procedures If Fire Occurs .....	00-37
Precautions When You Dispose of Waste Materials .....	00-38
Engine Technology to Conform Exhaust Gas Emission .....	00-39
Precautions When You Handle Hydraulic Equipment .....	00-40
Precautions When You Disconnect and Connect Pipings .....	00-43
Precautions When You Handle Electrical Equipment .....	00-50
Precautions When You Handle Fuel System Equipment .....	00-52
Precautions When You Handle Intake System Equipment .....	00-53
Practical Use of KOMTRAX .....	00-54
Disconnect and Connect Push-Pull Type Coupler .....	00-55
Precautions for Disconnection and Connection of Connectors .....	00-59
How to Disconnect and Connect Deutsch Connector .....	00-63
How to Disconnect and Connect Slide Lock Type Connector .....	00-64
How to Disconnect and Connect Connector with Lock to Pull .....	00-66
How to Disconnect and Connect Connector with Lock to Push .....	00-67
How to Disconnect and Connect Connector with Housing to Rotate .....	00-69
Standard Tightening Torque Table .....	00-70
Conversion Table .....	00-77
Abbreviation List .....	00-82
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Specifications .....	01-7
Weight Table .....	01-17
Fuel, Coolant, Lubricant .....	01-21
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Boot-up System .....	10-8
Layout Drawing of Boot-up System .....	10-8
Pre-lubrication System .....	10-10
System Operating Lamp System .....	10-14
Battery Disconnect Switch .....	10-15
Starting Motor Disconnect Switch .....	10-16
Preheating System .....	10-17
Engine Shutdown Secondary Switch .....	10-19
Emergency Engine Stop Switch .....	10-20
External Power Supply Engine Preheater .....	10-21
Engine System .....	10-22
Layout Drawing of Engine System .....	10-22
Engine Control System .....	10-24
Engine Power Mode Selector System .....	10-27
Automatic Idle Stop System .....	10-28
RPM Set .....	10-29
Component Parts of Engine System .....	10-31
Cooling System .....	10-53
Layout Drawing of Cooling System .....	10-53
Cooling Fan Control System .....	10-56
Component Parts of Cooling System .....	10-60
Control System .....	10-75
Layout Drawing of Control System .....	10-75

Machine Monitor System.....	10-77
Rearview Monitor System .....	10-79
KOMTRAX Plus System .....	10-80
Load Meter System.....	10-82
Machine Lock-out System.....	10-88
Component Parts of Control System .....	10-90
Hydraulic System .....	10-152
Layout Drawing of Hydraulic System.....	10-152
CLSS .....	10-153
Work Equipment Pump Control System .....	10-156
Steering Pump Control System.....	10-158
Component Parts of Hydraulic System.....	10-159
Power Train System.....	10-240
Layout Drawing of Power Train System .....	10-240
Transmission Control System.....	10-244
Transmission Gear Shift Control System.....	10-246
Transmission Protection Function .....	10-251
Tire Slip Control System.....	10-255
Component Parts of Power Train System.....	10-257
Work Equipment System.....	10-315
Layout Drawing of Work Equipment System .....	10-315
Work Equipment System Diagram .....	10-317
Work Equipment Control System .....	10-319
Work Equipment Neutral Lock System .....	10-326
Remote Positioner System.....	10-328
Bucket Positioner and Boom Positioner .....	10-333
Auto-Digging System .....	10-334
Semi-Auto Approach System .....	10-336
Semi-Auto Dump System .....	10-337
ECSS.....	10-339
Wall Digging Prevention Control System .....	10-341
Component Parts of Work Equipment System .....	10-343
Steering System.....	10-349
Layout Drawing of Steering System .....	10-349
Secondary Steering System.....	10-350
AJSS.....	10-351
Steering Lock System .....	10-358
Component Parts of Steering System .....	10-359
Brake System.....	10-387
Layout Drawing of Brake System .....	10-387
Parking Brake Control System .....	10-390
Component Parts of Brake System .....	10-392
Auto-Greasing System .....	10-412
Layout Drawing of Auto-Greasing System.....	10-412
Auto-Greasing System Diagram.....	10-415
Specifications of Auto-Greasing System .....	10-416
Function of Auto-Greasing System.....	10-417
Auto-Greasing System .....	10-418
Lifting System .....	10-423
Power Ladder System.....	10-423
Power Ladder System.....	10-427
Undercarriage and Frame .....	10-432
Frame, Axle Mount and Hinge Pin.....	10-432
Structure of Lubrication System for Undercarriage.....	10-435
Service Center .....	10-436
Tires.....	10-440
Work Equipment .....	10-441
Structure of Work Equipment .....	10-441

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$