

Shop Manual

BACKHOE LOADER

WB97S-8

SERIAL NUMBERS WB97S-8 F40001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

| | |
|--|--------|
| 00 INDEX AND FOREWORD | 00-1 |
| FOREWORD, SAFETY, BASIC INFORMATION | 00-5 |
| HOW TO READ THE SHOP MANUAL | 00-5 |
| SAFETY NOTICE FOR OPERATION | 00-7 |
| PRECAUTIONS TO PREVENT FIRE | 00-15 |
| ACTIONS IF FIRE OCCURS | 00-17 |
| PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS | 00-18 |
| ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS | 00-19 |
| PRECAUTIONS FOR DEF | 00-20 |
| STORE AdBlue/DEF | 00-21 |
| PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT | 00-22 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS | 00-25 |
| PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT | 00-32 |
| PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT | 00-34 |
| PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT | 00-35 |
| PRACTICAL USE OF KOMTRAX | 00-36 |
| DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER | 00-37 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS | 00-41 |
| METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR | 00-45 |
| METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR | 00-46 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL .. | 00-48 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .. | 00-49 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE . | 00-51 |
| HOW TO READ ELECTRICAL WIRE CODE | 00-52 |
| EXPLANATION OF TERMS FOR MAINTENANCE STANDARD | 00-56 |
| STANDARD TIGHTENING TORQUE TABLE | 00-59 |
| CONVERSION TABLE | 00-66 |
| ABBREVIATION LIST | 00-71 |
| 01 SPECIFICATIONS | 01-1 |
| CONTENTS | 01-2 |
| SPECIFICATIONS | 01-3 |
| SPECIFICATION DRAWING | 01-3 |
| SPECIFICATIONS | 01-6 |
| WEIGHT TABLE | 01-12 |
| FUEL, COOLANT, LUBRICANTS | 01-14 |
| 10 STRUCTURE AND FUNCTION | 10-1 |
| CONTENTS | 10-2 |
| UREA SCR SYSTEM | 10-4 |
| LAYOUT DRAWING OF UREA SCR SYSTEM | 10-4 |
| UREA SCR SYSTEM DIAGRAM | 10-7 |
| FUNCTION OF UREA SCR SYSTEM | 10-8 |
| COMPONENT PARTS OF UREA SCR SYSTEM | 10-16 |
| HYDRAULIC SYSTEM | 10-26 |
| LAYOUT DRAWING OF HYDRAULIC SYSTEM | 10-26 |
| CLSS | 10-28 |
| COMPONENT PARTS OF HYDRAULIC SYSTEM | 10-31 |
| POWER TRAIN SYSTEM | 10-76 |
| LAYOUT DRAWING OF POWER TRAIN SYSTEM | 10-76 |
| OPERATION OF POWER TRAIN SYSTEM | 10-78 |
| COMPONENT PARTS OF POWER TRAIN SYSTEM | 10-79 |
| OPERATION OF STEERING SYSTEM | 10-106 |
| WORK EQUIPMENT SYSTEM | 10-110 |
| LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM | 10-110 |
| LOADER WORK EQUIPMENT PPC VALVE | 10-113 |
| BACKHOE PPC VALVE | 10-126 |

| | |
|---|--------|
| OUTRIGGER PPC VALVE | 10-130 |
| STEERING UNIT | 10-135 |
| BRAKE PUMP | 10-136 |
| SOLENOID VALVES | 10-137 |
| PPC CIRCUIT ACCUMULATOR | 10-143 |
| SAFETY VALVES | 10-144 |
| WORK EQUIPMENT | 10-149 |
| STRUCTURE OF LOADER WORK EQUIPMENT | 10-149 |
| STRUCTURE OF BACKHOE WORK EQUIPMENT | 10-150 |
| FUNCTION OF WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM | 10-151 |
| 20 STANDARD VALUE TABLE | 20-1 |
| CONTENTS | 20-2 |
| STANDARD VALUE TABLE FOR ENGINE | 20-3 |
| STANDARD VALUE TABLE FOR ENGINE: WB97S-8 | 20-3 |
| STANDARD VALUE TABLE FOR MACHINE | 20-6 |
| STANDARD VALUE TABLE FOR MACHINE: WB97S-8 | 20-6 |
| MACHINE POSTURE AND PROCEDURES TO MEASURE PERFORMANCE | 20-24 |
| 40 TROUBLESHOOTING | 40-1 |
| CONTENTS | 40-2 |
| RELATED INFORMATION TO TROUBLESHOOT | 40-7 |
| PRECAUTIONS FOR TROUBLESHOOTING | 40-7 |
| SEQUENCE OF EVENTS IN TROUBLESHOOTING | 40-8 |
| GENERAL TROUBLESHOOTING POINTS | 40-10 |
| TROUBLESHOOTING POINTS FOR UREA SCR SYSTEM | 40-11 |
| CHECKS BEFORE TROUBLESHOOTING | 40-12 |
| INSPECTION PROCEDURE BEFORE TROUBLESHOOTING | 40-14 |
| TESTING IN ACCORDANCE WITH TESTING PROCEDURE | 40-16 |
| CONNECTOR CONTACT IDENTIFICATION | 40-37 |
| T-BRANCH BOX AND T-BRANCH ADAPTER TABLE | 40-79 |
| FUSE LOCATION TABLE | 40-85 |
| FAILURE CODE TABLE | 40-89 |
| TROUBLESHOOTING BY FAILURE CODE (DISPLAY OF CODE) | 40-107 |
| TROUBLESHOOTING OF ENGINE FAILURE | 40-107 |
| 60 MAINTENANCE STANDARD | 60-1 |
| CONTENTS | 60-2 |
| ENGINE AND COOLING SYSTEM | 60-3 |
| MAINTENANCE STANDARD OF ENGINE MOUNT | 60-3 |
| MAINTENANCE STANDARD OF COOLING SYSTEM | 60-5 |
| POWER TRAIN | 60-6 |
| MAINTENANCE STANDARD OF TRANSMISSION | 60-6 |
| MAINTENANCE STANDARD OF FRONT AXLE | 60-9 |
| MAINTENANCE STANDARD OF REAR AXLE | 60-15 |
| HYDRAULIC SYSTEM | 60-25 |
| MAINTENANCE STANDARD OF MAIN PUMP | 60-25 |
| MAINTENANCE STANDARD OF CONTROL VALVE | 60-27 |
| WORK EQUIPMENT | 60-37 |
| MAINTENANCE STANDARD OF LOADER WORK EQUIPMENT PPC VALVE | 60-37 |
| MAINTENANCE STANDARD OF SWING BRACKET | 60-43 |
| MAINTENANCE STANDARD OF LOADER WORK EQUIPMENT | 60-45 |
| MAINTENANCE STANDARD OF BACKHOE WORK EQUIPMENT | 60-47 |
| MAINTENANCE STANDARD OF WORK EQUIPMENT CYLINDERS | 60-49 |
| 90 CIRCUIT DIAGRAMS | 90-1 |
| CONTENTS | 90-2 |
| HOW TO READ THE CODES FOR ELECTRIC CABLE | 90-3 |
| HYDRAULIC CIRCUIT DIAGRAM | 90-7 |
| SYMBOLS USED IN HYDRAULIC CIRCUIT DIAGRAM | 90-7 |
| HYDRAULIC CIRCUIT DIAGRAM FOR WORK EQUIPMENT (1/2) | 90-11 |
| HYDRAULIC CIRCUIT DIAGRAM FOR WORK EQUIPMENT (2/2) | 90-13 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$