

- 1: General Information
  - 100: Service Information
    - 100-00: General Information
      - Description and Operation
      - About This Manual
      - Application and Use of Specifications
      - Brake System Health and Safety Precautions
      - First Responder
      - Fluid Leaks
      - General Service Information
      - Health and Safety Precautions
      - How To Use This Manual
      - Important Safety Instructions
      - Road Test
      - Smart Key Transmission Frequency
      - Solvents, Sealants and Adhesives
      - Standard Workshop Practices
      - Supplementary Restraint System Health and Safety Precautions
      - Window Glass Health and Safety Precautions
      - Special Tool Glossary
      - Vehicle Inspection
      - Diagnostic Trouble Code IndexDTC: Anti-Lock Brake System Control Module (ABS)
      - Diagnostic Trouble Code IndexDTC: Audio Amplifier Module (AAM)
      - Diagnostic Trouble Code IndexDTC: HVAC Control Module (HVAC)
      - Diagnostic Trouble Code IndexDTC: On-Board Charger / Battery Charger Control Module (BCCM)
      - Diagnostic Trouble Code IndexDTC: Battery Energy Control Module (BECM)
      - Diagnostic Trouble Code IndexDTC: Brake System Control Module (BSCM)
      - Diagnostic Trouble Code IndexDTC: Body Control Module (BCM)
      - Diagnostic Trouble Code IndexDTC: Chassis Control Module (CHCM)
      - Diagnostic Trouble Code IndexDTC: Direct Current to Direct Current Converter (DC/DC)
      - Diagnostic Trouble Code IndexDTC: Driver Assistance Domain Controller (DADC)
      - Diagnostic Trouble Code IndexDTC: Driver/Passenger/Rear - Left/Right Door Module (DDM/PDM/RDM)
      - Diagnostic Trouble Code IndexDTC: Electric Steering Column Lock Control Module (ESCL)
      - Diagnostic Trouble Code IndexDTC: Inverter / Electric Power Inverter Converter Module (EPIC)
      - Diagnostic Trouble Code Index: Gateway Module (GWM)
      - Diagnostic Trouble Code IndexDTC: Gear Shift Control Module (GSM)
      - Diagnostic Trouble Code IndexDTC: Headlamp Control Module (HCM)
      - Diagnostic Trouble Code IndexDTC: Head-Up Display (HUD)
      - Diagnostic Trouble Code IndexDTC: High Voltage Charging Contactor Module (HVCCM)
      - Diagnostic Trouble Code IndexDTC: Infotainment Compute Control Module (ICCM)
      - Diagnostic Trouble Code IndexDTC: Infotainment Gateway Module (IGM)
      - Diagnostic Trouble Code IndexDTC: Instrument Panel Cluster Control Module (IPC)
      - Diagnostic Trouble Code IndexDTC: Interactive Display Module A (IDMA)
      - Diagnostic Trouble Code IndexDTC: Image Processing Module (IPMA)
      - Diagnostic Trouble Code IndexDTC: JaguarDrive Switchpack (JDS)
      - Diagnostic Trouble Code IndexDTC: Near Field Sensing Module (NFSM)

Diagnostic Trouble Code IndexDTC: Near Field Sensing Module B (NFSMB) 1 Camera System

- Diagnostic Trouble Code IndexDTC: Powertrain Control Module (PCM)
- Diagnostic Trouble Code IndexDTC: Rear Integrated Control Panel (RICP)
- Diagnostic Trouble Code IndexDTC: Rear Integrated Control Panel (RICP) - Without Rear Air Conditioning
- Diagnostic Trouble Code IndexDTC: Restraints Control Module (RCM)
- Diagnostic Trouble Code IndexDTC: Remote Function Actuator (RFA)
- Diagnostic Trouble Code IndexDTC: Seat Module - Driver/Passenger/Rear - left/right (DSM/PSM/RSM)
- Diagnostic Trouble Code IndexDTC: Steering Angle Sensor Module (SASM)
- Diagnostic Trouble Code IndexDTC: Side Obstacle Detection Control Module - Left/Right (SODL/SODR)
- Diagnostic Trouble Code IndexDTC: Tailgate Control Module (TGCM)
- Diagnostic Trouble Code IndexDTC: Tire Pressure Monitoring System Control Module (TPMSCM)
- Diagnostic Trouble Code IndexDTC: Telematic Control Module (TCU)
- Diagnostic Trouble Code IndexDTC: Trailer Control Module (TRM)
- Diagnostic Trouble Code IndexDTC: Wireless Device Charger Module (WDCM)
- Diagnostic Trouble Code IndexDTC: Power Steering Control Module (PSCM)
- 100-01: Identification Codes
  - Description and Operation
  - Identification Codes
- 100-02: Jacking and Lifting
  - Description and Operation
  - Vehicle Recovery
  - Jacking and Lifting
- 100-11: Vehicle Transportation Aids and Vehicle Storage
  - Description and Operation
  - New Vehicle Storage
  - New Vehicle Storage Form
- 100-12: Software Over The Air
  - Description and Operation
  - Software Over The Air Update - Vehicles With: Electrical Vehicle Architecture (EVA) 2
- 101: Pre-Delivery Information
  - 101-01A: Pre-Delivery Inspection Manual - [+] Non Self-Driving System
    - Description and Operation
    - Introduction
    - Preliminary
    - Vehicle Interior
    - Vehicle Exterior
    - Road Test
    - Quality Assurance Checks
  - 101-02: Showroom Preparation
    - Description and Operation
    - Showroom Preparation
  - 101-03: Exterior Body & Paint Pre-Delivery Inspection (PDI) Standards
    - Description and Operation
    - Introduction
    - Cosmetic Acceptance Standards
    - Exterior Surface Zone Identification
    - Exterior Pre-Delivery Inspection Process
    - General Requirements
    - Identification Of Exceptions
    - Paint Exceptions And Associated Repair Procedures
- 102: Accessory Information
  - 102-02: Interior

Removal and Installation

- Front Illuminated Treadplates/Personalised Treadplates
- Full Height Loadspace Partition
- Loadspace Premium Carpet Mat
- Loadspace Rubber Mat
- Sports Pedal Kit
- Premium Carpet Mats
- Rigid Loadspace Organiser
- Rubber Mats
- Windshield Sunshade - T4K13761
- Loadspace Floor Net
- Luggage Retention Kit
- Docking Station – iPhone
- Ski Bag
- Smoker's Pack
- Second Row Seat - Protective Cover
- Loadspace Collapsible Organizer
- Click & Go System Base Unit
- Click & Hang Coat Hanger
- Click & Hang Universal Hook
- Click & Play Tablet Holder - iPad 2-4
- Click & Play Tablet Holder - iPad air
- Click & Play Tablet Holder - iPad mini
- Click & Play Tablet Holder - Samsung
- Soft Cargo Barrier
- Loadspace Rails
- Foldable Pet Carrier
- Small Pet Access Ramp
- Portable Rinse System
- Spill Resistant Bowl
- Roof Sunshade
- Click & Play Tablet Holder
- 102-03: Exterior
  - Removal and Installation
  - Carbon Fiber Front Grille Surround
  - Illuminated Jaguar Front Grille Badge
  - Rear Mudflaps
  - Front Mudflaps
  - Rear Mounted Bicycle Carrier
  - Vehicle Cover
  - Door Mirror Cover
  - Bumper Protector
  - Fork Mounted Cycle Carrier
  - Wheel Mounted Cycle Carrier
  - Raised Towbar Mounted Carrier - 2 and 3 Cycle - T4N31495/T4N31496/T4N31497/T4N31498
- 102-04: Safety
  - Removal and Installation
  - First Aid Kit
  - Child Seat – Infant Carrier (0kg-13kg)
  - Child Seat – (9kg-18kg)
  - Child Seat - Group 1 i-size
  - ISOFIX Base
  - Warning Triangle
  - Fire Extinguisher
  - Snow Chains
  - Snow Traction Tire Cover

Child Seat – (15kg-36kg)

- 102-05: Towing
  - Removal and Installation
  - Bike Carrier Harness
  - Detachable Towbar - T4K8031
  - Detachable Towbar - T4K11416
- 102-06: Roof Options
  - Removal and Installation
  - Roof Cross Bars
  - Ski and Snowboard Carrier
  - Large Roof Box
  - Lift and Load System
  - Roof Box Ski/Snowboard Inserts
  - Sports Roof Box
  - Water Sports Carrier
  - Medium Roof Box
  - Ski and Snowboard Carrier - VPLZR0187/T2H45726
  - Roof Box
- 2: Chassis
  - 204: Suspension
    - 204-00: Suspension System - General Information
      - Specification
      - Diagnosis and Testing
      - Suspension System
      - Wheel Bearings
      - General Procedures
      - Front Wheel Bearing and Wheel Hub Runout Check
      - Rear Wheel Bearing and Wheel Hub Runout Check
      - Steering Wheel Vibration/Shimmy While Driving
      - Wheel and Tire Assembly Balancing
      - Wheel Alignment
    - 204-01: Front Suspension
      - Specification
      - Description and Operation
      - Front Suspension
      - Diagnosis and Testing
      - Front Suspension
      - Repairs
      - Front Wheel Bearing And Wheel Hub - AWD
      - Removal and Installation
      - Front Lower Control Arm
      - Rear Lower Control Arm
      - Front Stabilizer Bar
      - Front Stabilizer Bar Link
      - Left Upper Control Arm
      - Right Upper Control Arm
      - Shock Absorber and Spring Assembly - [+] Air Suspension
      - Wheel Knuckle
      - Spring
      - Front Wheel Bearing and Wheel Hub
    - 204-02: Rear Suspension
      - Specification
      - Description and Operation
      - Rear Suspension
      - Diagnosis and Testing
      - Rear Suspension
      - Removal and Installation

- Lower Control Arm
  - Rear Stabilizer Bar
  - Rear Stabilizer Bar Link
  - Rear Shock Absorber
  - Spring
  - Rear Upper Control Arm
  - Wheel Knuckle - [+] Air Suspension
  - Wheel Hub
  - Wheel Bearing
  - Tie Rod
- 204-04: Wheels and Tires
  - Specification
  - Diagnosis and Testing
  - Wheels and Tires
  - Tire Pressure Monitoring System
  - Removal and Installation
  - Wheel and Tire
  - Tire Pressure Monitoring System Receiver
  - Tire Pressure Sensor
- 204-05: Vehicle Dynamic Suspension
  - Specification
  - Description and Operation
  - Vehicle Dynamic Suspension
  - Diagnosis and Testing
  - Vehicle Dynamic Suspension
  - General Procedures
  - Air Suspension System Depressurize and Pressurize
  - Air Line Connector - [+] Air Suspension
  - Air Suspension - Manual Control Procedure - [+] Air Suspension
  - Air Suspension Manual Tight Tolerance Setting Mode - [+] Air Suspension
  - Removal and Installation
  - Air Reservoir
  - Front Suspension Height Sensor
  - Rear Suspension Height Sensor
  - Air Suspension Control Module
  - Air Suspension Compressor
  - Front Suspension Vertical Accelerometer
  - Rear Suspension Vertical Accelerometer
  - Front Air Reservoir Valve Block
  - Rear Air Reservoir Valve Block
  - Rear Air Spring
  - Suspension Air Supply Unit Expansion Chamber
- 204-06: Ride and Handling Optimization
  - Diagnosis and Testing
  - Ride and Handling Optimization
- 205: Driveline
  - 205-00: Driveline System - General Information
  - Diagnosis and Testing
  - Driveline System
  - 205-04: Front Drive Halfshafts
    - Specification
    - Description and Operation
    - Front Drive Halfshafts
    - Diagnosis and Testing
    - Front Drive Halfshafts
    - Removal and Installation
    - Inner Constant Velocity Joint Boot

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$