

# Shop Manual

# 980E-4

## DUMP TRUCK

**SERIAL NUMBERS 980E-4 A40003 – A40051**

**ENGINE 18V170**

This material is proprietary to Komatsu and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

# KOMATSU

© Copyright 2023 Komatsu Ltd.  
or one of its subsidiaries  
All Rights Reserved  
Printed in the U.S.A.



---

# DUMP TRUCK

## 980E

Machine model	Serial number
980E-4	A40003 - A40051

---

# 00 Index and foreword

## Index

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

□: New module (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

<u>Section Title</u>	<u>Form Number</u>
Shop Manual, contents binder, binder label and tabs	CEBM031007
00 Index and foreword	
Index	CEN00023-07 ●
Foreword, safety and general information	CEN00002-15 ●
01 Specification	
Specification and technical data	CEN01014-05
10 Structure, function and maintenance standard	
Steering circuit	CEN10062-02
Hoist circuit	CEN10067-02 ●
Brake circuits	CEN10068-02
Electrical system, 24 volt	CEN10070-00
Electrical system, AC drive	CEN10055-02
Cab air conditioning	CEN10008-04 ●
Reserve engine oil system	CEN10071-01 ●
20 Standard value table	
Standard service value table	CEN20005-03 ●
30 Testing and adjusting	
Steering, brake cooling and hoist hydraulic system	CEN30071-06 ●
Brake system	CEN30072-06 ●
Accumulators and suspensions	CEN30098-15 ●
Interface module 1 (IM1)	CEN30068-01
Interface module 2 (IM2)	CEN30125-01 ●
KOMTRAX Plus II	CEN30091-01
Payload meter IV	CEN30070-05 ●
Komatsu Wireless Bridge (KWB)	CEN30074-00
Electrical system, AC Drive	CEN30053-02
Cab air conditioning	CEN30029-01

40 Troubleshooting	
Fuse, diode and relay locations	CEN40161-01
AC drive system fault codes	CEN40114-02
Troubleshooting by failure code, Part 1	CEN40163-04
Troubleshooting by failure code, Part 2	CEN40164-02
Troubleshooting by failure code, Part 3	CEN40165-02
Troubleshooting by failure code, Part 4	CEN40166-02
Troubleshooting by failure code, Part 5	CEN40167-05 ●
Troubleshooting by failure code, Part 6	CEN40168-02
Orbcomm	CEN40162-00
Cab air conditioning	CEN40008-02
Steering system	CEN40104-07 ●
Automatic lubrication (auto lube) system	CEN40202-01 ●
50 Disassembly and assembly	
Service tools	CEN50046-09 ●
Wheels, spindles and rear axle	CEN50047-12 ●
Brake system	CEN50048-06
Steering system	CEN50050-04 ●
Suspensions	CEN50049-03 ●
Hoist circuit	CEN50051-05
Body and structures	CEN50052-03
Operator cab	CEN50053-02
Cab air conditioning	CEN50028-03
Power module	CEN50054-04
90 Diagrams and drawings	
Hydraulic circuit diagrams	CEN90014-03
Electrical circuit diagrams	CEN90015-01

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$