

# SERVICE MANUAL

## CX50 Forklift Trucks

### Dual Fuel/LPG

S/N 133001 - 134755 (EPA Tier 2)  
S/N 134756~ (EPA/CARB 2010)

### FG40ZTU-10

FG40TU/45TU/50ATU-10

### Diesel

S/N 133001~ (EPA Tier 3)

### FD40ZTU-10

FD40TU/45TU/50ATU-10

# CX50



## **WARNING**

Read and observe all warnings on this unit before operating it.

**DO NOT** operate this equipment unless all factory-installed guards and shields are properly secured in place.

# **KOMATSU**<sup>®</sup>

**REVISED: MARCH 2014**

The information and specifications contained herein were accurate at the time of publication, but may change without notice as required for product improvements. Neither Komatsu Forklift U.S.A. nor its parent company nor any of its subsidiaries will be held responsible for damages due to misuse or inappropriate use of its products. Requests for information, comments and other inquiries should be sent to:

© Copyright 2013, Komatsu Forklift U.S.A., LLC. No part of this document may be photocopied or reproduced in any way without prior written consent of Komatsu Forklift U.S.A.

# CONTENTS

Page No.

## 1. Foreword and general information

1.1	Safety notice	1-3
1.2	How to read the shop manual	1-14
1.3	Explanation of terms for maintenance standard.	1-16
1.4	Handling of electric equipment and hydraulic components	1-18
1.5	Handling of new types of connectors used on engines	1-26
1.6	How to read electric wire code	1-29
1.7	Precautions when carrying out operation.	1-32
1.8	Standard tightening torque tables	1-35
1.9	Conversion tables	1-39

## 2. Specifications

2.1	Dimensional diagram	2-3
2.2	Diesel engine lift truck with SAA4D95LE-5-A engine (UL spec)	2-4
2.3	Gasoline engine lift truck with EBT-TB45-2A/3A (UL spec)	2-5
2.4	Weight table	2-6
2.5	Lubricants.	2-7

## 3. Structure, function and maintenance standard

### Engine and cooling system

3.1	Cooling system - diesel engine	3-2
3.2	Cooling system - gasoline engine	3-4
3.3	Brake cooling system hydraulic piping diagram	3-6

### Power train

3.4	Power train overview	3-9
3.5	Power train system diagram	3-10
3.6	Torque converter	3-12
3.7	Hydraulic port locations - torque converter	3-14
3.8	Transmission	3-19
3.9	Forward (F) clutch	3-24
3.10	Reverse (R) clutch	3-26
3.11	Forward 2nd (F2) clutch	3-28
3.12	Power transmission route	3-31
3.13	Transmission control valve	3-33
3.14	Hydraulic port locations - transmission	3-35
3.15	Hydraulic system diagram	3-36
3.16	Relief valve	3-37
3.17	Drive shaft	3-38
3.18	Front axle	3-39
3.19	Differential	3-40

3.20	Final drive . . . . .	3-44
<b>Steering system</b>		
3.21	Steering piping diagram . . . . .	3-49
3.22	Orbital valve . . . . .	3-50
3.23	Power steering cylinder . . . . .	3-51
<b>Brake system</b>		
3.24	Brake control . . . . .	3-55
3.25	Brake piping diagram . . . . .	3-56
3.26	Service brake . . . . .	3-57
3.27	Accumulator charge valve . . . . .	3-59
3.28	Brake valve . . . . .	3-64
3.29	Slack adjuster . . . . .	3-67
3.30	Accumulator (for brake) . . . . .	3-70
3.31	Parking brake . . . . .	3-71
<b>Undercarriage and frame</b>		
3.32	Rear axle . . . . .	3-75
3.33	Hydraulic tank piping diagram . . . . .	3-76
3.34	Frame . . . . .	3-77
<b>Hydraulic system</b>		
3.35	Control valve piping diagram . . . . .	3-81
3.36	Work equipment piping diagram . . . . .	3-82
3.37	Attachment piping diagram . . . . .	3-83
3.38	Hydraulic pump . . . . .	3-84
3.39	LS valve . . . . .	3-89
3.40	Unload valve . . . . .	3-90
3.41	Control valve . . . . .	3-91
3.42	3-spool valve . . . . .	3-92
3.43	Closed center Load Sensing System (CLSS) . . . . .	3-97
3.44	Function and operation of each valve . . . . .	3-99
<b>Work equipment</b>		
3.45	Tilt cylinder . . . . .	3-115
3.46	Lift cylinder - Japan manufacture . . . . .	3-116
3.47	Mast - Japan manufacture . . . . .	3-117
3.48	Fork carriage - Japan manufacture . . . . .	3-124
3.49	Fork - Japan manufacture . . . . .	3-125
<b>Electric devices Part 1</b>		
3.50	Accelerator pedal sensor . . . . .	3-129
3.51	ISO controller - Operator Presence Sensing (OPS) system . . . . .	3-131
3.52	Instrument panel . . . . .	3-138
3.53	Engine starting circuit . . . . .	3-140
3.54	Engine stopping circuit . . . . .	3-142
3.55	Electrical system wiring diagram . . . . .	3-143

## Electric devices Part 2

3.56	Sensors .....	3-147
3.57	Switches .....	3-149
3.58	Lamps .....	3-155
3.59	Horn and buzzer .....	3-157
3.60	Flasher .....	3-160
3.61	F/R solenoid valve and F2 solenoid valve .....	3-161
3.62	Relay box .....	3-162
3.63	Resistor .....	3-168
3.64	Diode .....	3-169
3.65	Fuse .....	3-180
3.66	Battery .....	3-182

## 4. Standard value table

4.1	Lift truck with SAA4D95LE-5-A engine (UL spec) .....	4-3
4.2	Lift truck with EBT-TB45-2A/3A engine (UL spec) .....	4-5

## 5. Testing and adjusting

5.1	Check of troubleshooting software functions and failure codes .....	5-3
5.2	Hydraulic piping pressure release procedure .....	5-6
5.3	Replacement of engine oil and engine oil filter .....	5-7
5.4	Replacement of fuel filter .....	5-8
5.5	Cleaning of radiator .....	5-11
5.6	Check of air cleaner and replacement of cleaner element .....	5-12
5.7	Oil level check and oil replacement of differential case .....	5-13
5.8	Oil replacement and strainer cleaning of Torqflow transmission .....	5-14
5.9	Testing power train oil pressure .....	5-15
5.10	Check of hydraulic tank .....	5-18
5.11	Measurement of wear amount of service brake disc .....	5-20
5.12	Check of parking brake .....	5-21
5.13	Air bleeding procedure .....	5-22
5.14	Adjustment of brake pedal .....	5-23
5.15	Adjustment of inching pedal .....	5-24
5.16	Measurement of cylinder hydraulic drift and hydraulic forward drift .....	5-25
5.17	Adjustment of mast - Japan manufacture .....	5-26
5.18	Adjustment of fork carriage - Japan manufacture .....	5-29
5.19	Check of drive shaft for looseness, play and damage .....	5-31
5.20	Check of diode .....	5-32

## 6. Troubleshooting

### General information on troubleshooting

6.1	Points to remember when troubleshooting .....	6-3
6.2	Sequence of events in troubleshooting .....	6-4

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$