

# Shop Manual

BULLDOZER

**D61EX-15E0**  
**D61PX-15E0**

SERIAL NUMBERS      D61EX-      B45001      and up  
                                 D61PX-      B45001

**ecot3**

**KOMATSU**



# BULLDOZER

## D61EX-15E0

## D61PX-15E0

**Machine Model      Serial number**

D61EX-15E0

B45001 and up

D61PX-15E0

B45001 and up

---

## 00 Index and foreword

### Index

---

---

Composition of shop manual.....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02387-05 ●
00 Index and foreword	SEN02388-04
Index	SEN02396-05 ●
Foreword and general information	SEN02397-00
01 Specification	SEN02389-00
Specification and technical data	SEN02398-00
10 Structure, function and maintenance standard	SEN02390-02
Engine and cooling system	SEN02473-00
Power train, Part 1	SEN02474-00
Power train, Part 2	SEN02475-00
Undercarriage and frame	SEN02476-01
Hydraulic system, Part 1	SEN02477-00
Hydraulic system, Part 2	SEN02478-00
Hydraulic system, Part 3	SEN02479-00
Work equipment	SEN02480-00
Cab and its attachments	SEN02481-00
Electrical system	SEN02482-01
20 Standard value table	SEN02391-00
Standard service value table	SEN02554-00
30 Testing and adjusting	SEN02392-01
Testing and adjusting, Part 1	SEN02555-01
Testing and adjusting, Part 2	SEN02556-00
Testing and adjusting, Part 3	SEN02558-02 ●
Testing and adjusting, Part 4	SEN02558-01

---

40 Troubleshooting	SEN02393-00
Failure code table and fuse locations	SEN02559-00
General information on troubleshooting	SEN02560-00
Troubleshooting by failure code (Display of code), Part 1	SEN02561-00
Troubleshooting by failure code (Display of code), Part 2	SEN02563-00
Troubleshooting by failure code (Display of code), Part 3	SEN02564-00
Troubleshooting by failure code (Display of code), Part 4	SEN02565-00
Troubleshooting of electrical system (E-mode)	SEN02566-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02567-00
Troubleshooting of engine (S-mode)	SEN02568-00
50 Disassembly and assembly	SEN02394-01
General information on disassembly and assembly	SEN02569-01
Engine and cooling system (SAA6D107E-1)	SEN02570-00
Engine (SAA6D170E-1)	SEN02571-00
Power train, Part 1	SEN02572-00
Power train, Part 2	SEN02573-00
Undercarriage and frame, Part 1	SEN02574-01
Undercarriage and frame, Part 2	SEN02575-01
Hydraulic system	SEN02576-00
Work equipment	SEN02577-00
Cab and its attachments	SEN02578-00
Electrical system	SEN02579-00
90 Diagrams and drawings	SEN02395-02
Hydraulic diagrams and drawings	SEN02399-00
Electrical diagrams and drawings	SEN02400-02

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$