

# Shop Manual

ENGINE

**140E -5 SERIES**

**KOMATSU**



# ENGINE

## 140E-5 Series

---

### 00 Index and foreword

#### Index

---

---

Composition of shop manual .....	2
Table of contents .....	3

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs .....	SEN00074-20
00 Index and foreword .....	SEN00075-20
Index .....	SEN00076-20
Foreword and general information .....	SEN00077-08
01 Specification .....	SEN00078-10
Specification and technical data .....	SEN00079-10
10 Structure, function and maintenance standard .....	SEN00080-12
Structure, function and maintenance standard, Part 1 .....	SEN00081-12
Structure, function and maintenance standard, Part 2 .....	SEN00082-09
20 Standard value table .....	SEN00083-10
Standard service value table .....	SEN00147-10
30 Testing and adjusting .....	SEN00148-05
Testing and adjusting .....	SEN00149-05
40 Troubleshooting .....	SEN00150-06
General information on troubleshooting .....	SEN00151-04
Troubleshooting of mechanical system (S-mode) .....	SEN00152-03
Troubleshooting of electrical system (E-mode), Part 1 .....	SEN00153-03
Troubleshooting of electrical system (E-mode), Part 2 .....	SEN00154-02
50 Disassembly and assembly .....	SEN00155-08
General information on disassembly and assembly .....	SEN00156-05
Disassembly and assembly, Part 1 (with EGR) .....	SEN00157-06
Disassembly and assembly, Part 2 (EGR-less) .....	SEN00158-06
Disassembly and assembly, Part 3 .....	SEN00159-04
90 Repair and replacement of parts .....	SEN05197-03
Information related to repair and replacement .....	SEN05198-01
Cylinder head .....	SEN05199-03
Cylinder block .....	SEN05200-01

## Table of contents

00 Index and foreword	
Index	SEN00076-20
Composition of shop manual .....	2
Table of contents .....	3
Foreword and general information	SEN00077-08
Safety notice .....	2
How to read the shop manual.....	7
Explanation of terms for maintenance standard .....	9
Handling of electric equipment and hydraulic component .....	11
Handling of connectors newly used for engines .....	20
How to read electric wire code .....	23
Precautions when carrying out operation .....	26
Method of disassembling and connecting push-pull type coupler .....	29
Standard tightening torque table.....	32
Conversion table.....	36
01 Specification	
Specification and technical data	SEN00079-10
Outline .....	2
Specifications.....	6
General view.....	25
Weight table.....	66
Engine performance curves.....	70
10 Structure, function and maintenance standard	
Structure, function and maintenance standard, Part 1	SEN00081-12
Air intake and exhaust unit .....	3
Air cleaner .....	5
Turbocharger .....	8
Aftercooler .....	19
Muffler.....	20
EGR system .....	25
Cylinder head .....	32
Cylinder block .....	36
Cylinder liner.....	39
Main moving parts .....	40
Crankshaft .....	42
Camshaft .....	43
Cam follower and push rod.....	44
Piston, piston ring and piston pin.....	46
Connecting rod .....	48
Flywheel and flywheel housing.....	49
Vibration damper .....	52
Timing gear.....	54
Valve system .....	58
Valve and valve guide.....	60
Rocker arm and shaft .....	62
Crosshead and guide .....	63
Structure, function and maintenance standard, Part 2	SEN00082-09
Lubrication system .....	4
Lubrication system diagram.....	4
Oil pump .....	8
EGR oil pump .....	9
Oil filter .....	10
Oil cooler .....	12

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$