

Shop Manual

FORKLIFT TRUCK

FH40-1

FH45-1

FH50-1

SERIAL NUMBERS 138001 and up

KOMATSU

FORKLIFT TRUCK

FH40-1

FH45-1

FH50-1

Applicable model	Serial number
------------------	---------------

FH40-1	138001 and up
FH45-1	138001 and up
FH50-1	138001 and up

00 Index and foreword

Table of contents

Table of contents

00 Index and foreword

Table of contents	00-2
Table of contents	00-2
Foreword and general information	00-9
Safety notice	00-9
How to read the shop manual	00-20
Explanation of terms for maintenance standard	00-22
Handling of electric equipment and hydraulic component	00-24
Handling of connectors newly used for engines	00-33
How to read electric wire code	00-36
Precautions when carrying out operation	00-39
Standard tightening torque table	00-42
Conversion table	00-46

01 General Information

Specifications	01-3
Specification dimensions drawing	01-3
Weight table	01-5
Lubricant list	01-6
List of specified fuel and lubricant	01-7

10 Structure, function and maintenance standard

Engine and cooling system	10-4
Engine mount and transfer mount	10-4
Cooling system	10-6
Power train	10-8
Power train	10-8
Power train system diagram	10-9
PTO	10-10
HST piping diagram	10-13
HST pump	10-14
HST motor	10-26
Axle	10-36
Differential	10-37
Steering system	10-43
Steering piping diagram (control valve - power steering cylinder)	10-43
Orbitrol valve	10-44
Power steering cylinder	10-46
Brake system	10-47
Brake control	10-47
Brake piping diagram (control valve - accumulator)	10-48
Service brake	10-50
Accumulator charge valve	10-52
Brake valve	10-58
Slack adjuster	10-61
Accumulator (for brake)	10-65
Parking brake	10-66
Undercarriage and frame	10-67
Rear axle	10-67
Hydraulic tank piping diagram	10-68
Frame	10-69
Hydraulic system	10-70
Control valve piping diagram (tank - control valve)	10-70
Work equipment piping diagram (control valve - tilt cylinder/lift cylinder)	10-71

Attachment piping diagram	10-72
Work equipment control lever linkage	10-73
Work equipment and steering pump	10-74
Control valve	10-82
CLSS	10-88
Each function and operation of each valve	10-90
Work equipment	10-105
Tilt cylinder	10-105
Lift cylinder	10-106
Mast	10-107
Finger board	10-114
Fork	10-115
Electrical system	10-116
Electrical control system	10-116
HST controller	10-138
Engine controller	10-140
Accelerator pedal sensor	10-142
EPACS controller	10-144
Instrument panel	10-146
Pilot box	10-148
DC/DC converter	10-149
KOMTRAX system	10-150
Sensor	10-153
Combination switch	10-163
Seat switch	10-164
Service switch/Preheater lamp	10-165
Flasher unit	10-166
Relay box	10-167
Relay	10-168
20 Standard value table	
Standard value table	20-3
Standard value table	20-3
30 Testing and adjusting	
Testing and adjusting	30-3
Check of failure code of engine controller	30-3
Displaying, setting, checking by using HST controller	30-6
Travel speed control function for general operator (description in Operation and Maintenance Manual of the lift truck)	30-8
Setting controlled travel speed	30-9
Maximum travel speed control function	30-11
Banning function of changing controlled travel speed	30-14
Electrical-system abnormality record display function (only for HST controller system)	30-16
Mechanical-system abnormality record display function	30-22
Adjusting function	30-23
Memory clear function	30-30
Automatic engine stop set interval changing function	30-33
Releasing pressure from hydraulic piping	30-35
Replacement of engine oil and engine oil filter	30-36
Replacement of fuel filter	30-38
Fuel pre-filter water drain	30-40
Fuel filter air bleeding	30-41
Cleaning of water separator strainer	30-42
Radiator cleaning	30-43
Air cleaner inspection and element replacement	30-44
Testing and adjusting engine speed	30-45
Testing and adjusting HST oil pressure	30-47

Testing work equipment and steering pump oil pressure	30-50
Oil level check and changing oil in differential case	30-51
Changing PTO oil and cleaning strainer	30-52
Inspection of hydraulic tank	30-53
Measuring brake performance	30-55
Measurement of wear of service brake disc	30-56
Checking parking brake	30-57
Bleeding air	30-58
Adjusting brake pedal	30-59
Testing and adjusting brake pedal angle sensor linkage	30-60
Initial setting of Orbitrol valve	30-62
Measurement of hydraulic drift and forward tilt down by hydraulic drift of cylinder	30-63
Adjustment of mast	30-64
Adjustment of fork carriage	30-67
Lamp display of KOMTRAX terminal	30-69
KOMTRAX terminal start-up procedure	30-72

40 Troubleshooting

Information related to troubleshooting	40-5
Points to remember when troubleshooting	40-5
How to proceed in troubleshooting	40-6
Checks before troubleshooting	40-7
Classification and procedures of troubleshooting	40-8
Phenomena seemed to be failures and troubleshooting Nos.	40-9
Information described in troubleshooting table	40-12
Locations of fuses	40-17
Connector pin connection by pin No.	40-20
T-branch box and T-branch adapter table	40-60
Troubleshooting by failure code (HST controller system)	40-63
Failure code list	40-63
Failure code [--/AB00MA] Alternator: Malfunction	40-66
Failure code [--/B@CRNS] HST Oil: Overheating	40-67
Failure code [--/2G40ZG] Brake accumulator: Dropped hydraulic pressure	40-68
Failure code [--/6091NX] Hst oil filter: Clogging	40-69
Failure code [12/DDK6KA] FNR lever: Open circuit	40-70
Failure code [12/DDK6KY] FNR lever: Hot short circuit	40-74
Failure code [14/DLT4KZ] Travel speed sensor A: Open circuit, ground fault, or hot short circuit	40-76
Failure code [14/DLT6KZ] Travel speed sensor B: Open circuit, ground fault, or hot short circuit	40-78
Failure code [14/DLT4KZ+DLT6KZ] Travel speed sensors A and B: Open circuit, ground fault, or hot short circuit	40-80
Failure code [14/DLT4MA] Travel speed sensors A and B: Malfunction	40-82
Failure code [14/DLT4LC] Travel speed sensors A and B: Mismatch of rotation speed signals	40-83
Failure code [15/7REXKA] Seat switch: Open circuit	40-84
Failure code [15/7REXKB] Seat switch: Ground fault	40-86
Failure code [18/D5ZTKZ] Pump EPC valve ground return signal: Open circuit or hot short circuit	40-88
Failure code [22/DHHBKX] HST pump A-port pressure sensor: Open circuit or ground fault	40-90
Failure code [22/DHHBKY] HST pump A-port pressure sensor: Hot short circuit	40-92
Failure code [23/DHHCKX] HST pump B-port pressure sensor: Open circuit or ground fault	40-94
Failure code [23/DHHCKY] HST pump B-port pressure sensor: Hot short circuit	40-96
Failure code [25/DK70KZ] Brake pedal angle sensor: Open circuit or ground fault	40-98
Failure code [25/DK70KY] Brake pedal angle sensor: Hot short circuit	40-100
Failure code [26/DGS1KA] HST oil temperature sensor: Open circuit	40-102
Failure code [26/DGS1KB] HST oil temperature sensor: Ground fault	40-104
Failure code [27/AB00KZ] Alternator R signal circuit: Open circuit or ground fault	40-106
Failure code [27/AB00KY] Alternator R signal circuit: Hot short circuit	40-108

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$