

Shop Manual



KOMATSU

PC160LC-7E0

PC180LC-7E0

PC180NLC-7E0

	PC160LC-7E0	K45001	
SERIAL NUMBERS	PC180LC-7E0	K45001	and up
	PC180NLC-7E0	K45001	

KOMATSU

HYDRAULIC EXCAVATOR

PC160LC-7E0

PC180LC-7E0

PC180NLC-7E0

Machine model	Serial number
---------------	---------------

PC160LC-7E0	K45001 and up
PC180LC-7E0	K45001 and up
PC180NLC-7E0	K45001 and up

00 Index and foreword

Index

Composition of shop manual.....	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	UEN01892-04 ●
00 Index and foreword	
Index	UEN01894-04 ●
Foreword and general information	UEN01895-01
01 Specification	
Specification and technical data	UEN01897-00
10 Structure, function and maintenance standard	
Engine and cooling system	UEN01899-00
Power train system	UEN01900-00
Undercarriage and frame	UEN01901-00
Hydraulic system, Part 1	UEN01902-00
Hydraulic system, Part 2	UEN01903-00
Hydraulic system, Part 3	UEN01967-01
Work equipment	UEN01904-01
Cab and its attachments	UEN01905-00
Electrical system	UEN01906-00
20 Standard value table	
Standard service value table	UEN02107-00
30 Testing and adjusting	
Testing and adjusting, Part 1	UEN02108-00
Testing and adjusting, Part 2	UEN02109-01
Testing and adjusting, Part 3	UEN02110-00
40 Troubleshooting	
Failure code table and fuse locations	UEN02111-00
General information on troubleshooting	UEN02112-00
Troubleshooting by failure code, Part 1	UEN02113-00
Troubleshooting by failure code, Part 2	UEN02114-00
Troubleshooting by failure code, Part 3	UEN02115-00
Troubleshooting by failure code, Part 4	UEN02116-00
Troubleshooting of electrical system (E-mode)	UEN02117-00

Troubleshooting of hydraulic and mechanical system (H-mode)	UEN02118-01
Troubleshooting of engine (S-mode)	UEN02119-00
50 Disassembly and assembly	
General information on disassembly and assembly	UEN02447-00
Engine and cooling system	UEN02448-00
Power train	UEN02449-00
Undercarriage and frame	UEN02450-00
Hydraulic system	UEN02451-01
Work equipment Body	UEN02452-00
Cab and its attachments	UEN02453-00
Electrical system	UEN02454-00
90 Diagrams and drawings	
Hydraulic circuit diagram	UEN01912-01
Electrical circuit diagram	UEN01913-02 ●

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$