

Shop Manual

HYDRAULIC
EXCAVATOR

PC170LC-10

SERIAL NUMBERS 30001 and up

KOMATSU

SHOP MANUAL

HYDRAULIC EXCAVATOR

PC170LC-10

Model Serial Number

PC170LC-10 30001 and up

00 Index and foreword

00 Index and foreword

Index

Index

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-13
Important safety notice	00-13
How to read the shop manual.....	00-20
Explanation of terms for maintenance standard	00-22
Handling equipment of fuel system devices	00-24
Handling of intake system parts.....	00-25
Handling of hydraulic equipment.....	00-26
Method of disconnecting and connecting of push-pull type coupler	00-28
Handling of electrical equipment.....	00-31
How to read electric wire code.....	00-39
Precautions when performing operation	00-42
Practical use of KOMTRAX.....	00-47
Standard tightening torque table.....	00-48
List of abbreviation	00-54
Conversion table.....	00-59
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Working range drawings	01-4
Specifications	01-5
Weight table	01-8
Table of fuel, coolant, and lubricants	01-9
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system.....	10-3
Engine related parts	10-3
Variable flow turbocharger	10-5
EGR system piping drawing.....	10-9
EGR system circuit diagram.....	10-11
EGR valve.....	10-12
EGR cooler.....	10-14
KCCV layout drawing	10-16
KCCV ventilator	10-19
KDOC muffler	10-21
Cooling system	10-23
Power train.....	10-25
Power train system.....	10-25
Swing circle	10-27
Swing machinery	10-28
Final drive	10-30
Undercarriage and frame.....	10-32
Track frame and idler cushion	10-32
Hydraulic system	10-34
Hydraulic component layout.....	10-34
Valve control.....	10-37
Hydraulic tank.....	10-39
CLSS.....	10-41
Main pump	10-45
Control valve	10-71
Swing motor	10-119
Travel motor	10-121
PPC valve	10-136
Solenoid valve	10-158
Attachment circuit selector valve (for high pressure circuit)	10-162
Attachment circuit selector valve (for low pressure circuit).....	10-164
Anti-drop valve.....	10-166-1

Center swivel joint.....	10-167
Accumulator.....	10-169
Work equipment	10-170
Work equipment.....	10-170
Work equipment shim.....	10-171
Bucket play adjustment shim.....	10-172
Cab and its attachments	10-173
Cab mount and cab tipping stopper	10-173
ROPS cab	10-174
Electrical system	10-175
Electrical control system	10-175
Machine monitor system.....	10-220
KOMTRAX system.....	10-242
Sensor	10-245
20 Standard value tables.....	20-1
Table of contents	20-2
Standard service value table.....	20-3
Standard value table for engine	20-3
Standard value table for machine	20-5
Standard value table for electrical system.....	20-19
30 Testing and adjusting	30-1
Table of contents	30-2
Related information on testing and adjusting	30-3
Tools for testing and adjusting	30-3
Sketch of tools for testing and adjusting	30-6
Engine and cooling system.....	30-7
Testing engine speed	30-7
Testing boost pressure	30-8
Testing exhaust gas color	30-10
Testing and adjusting valve clearance	30-11
Testing compression pressure.....	30-14
Testing blowby pressure	30-18
Testing engine oil pressure	30-19
Testing fuel pressure	30-20
Testing fuel discharge, return and leakage.....	30-25
Bleeding air from fuel system	30-30
Testing fuel circuit for leakage	30-32
Handling cylinder cutout mode operation.....	30-33
Handling no-injection cranking operation.....	30-34
Testing and adjusting air conditioner compressor belt tension	30-35
Replacing fan belt	30-36
Power train.....	30-37
Testing swing circle bearing clearance	30-37
Undercarriage and frame.....	30-38
Testing and adjusting track tension	30-38
Hydraulic system	30-39
Releasing remaining pressure from hydraulic circuit.....	30-39
Testing oil pressure of control circuit	30-40
Testing and adjusting oil pressure in work equipment, swing, and travel circuits.....	30-41
Testing and adjusting oil pressure in pump PC control circuit.....	30-45
Testing and adjusting oil pressure in pump LS control circuit	30-48
Testing outlet pressure of solenoid valve	30-52
Testing PPC valve outlet pressure	30-55
Adjusting play of work equipment and swing PPC valves.....	30-57
Testing pump swash plate sensor	30-58
Isolating the parts causing hydraulic drift in work equipment.....	30-59
Testing and adjusting travel deviation.....	30-61
Testing oil leakage	30-63
Bleeding air from hydraulic circuit	30-66
Testing and charging accumulator (manufactured by NOK) nitrogen gas pressure for attachment (low pressure side)	30-67-1

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$