

Shop Manual

HYDRAULIC
EXCAVATOR

PC290LC-8

SERIAL NUMBERS 30471 and up

ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC290LC-8

Machine model	Serial number
PC290LC-8	30471 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN06525-00
00 Index and foreword	SEN06527-00
Index	SEN06528-00
Foreword and general information	SEN06529-00
01 Specification	SEN06530-00
Specification and technical data	SEN06531-00
10 Structure, function and maintenance standard	SEN06532-00
Engine and cooling system	SEN06533-00
Power train	SEN06534-00
Undercarriage and frame	SEN06535-00
Hydraulic system, Part 1	SEN06536-00
Hydraulic system, Part 2	SEN06537-00
Hydraulic system, Part 3	SEN06538-00
Work equipment	SEN06539-00
Cab and its attachments	SEN06540-00
Electrical system	SEN06541-00
20 Standard value table	SEN06542-00
Standard service value table	SEN06543-00
30 Testing and adjusting	SEN06544-00
Testing and adjusting, Part 1	SEN06545-00
Testing and adjusting, Part 2	SEN06546-00
Testing and adjusting, Part 3	SEN06547-00

40 Troubleshooting	SEN06548-00
General Information on troubleshooting	SEN06550-00
Failure code table and fuse locations	SEN06549-00
Troubleshooting by failure code (Display of code), Part 1	SEN06551-00
Troubleshooting by failure code (Display of code), Part 2	SEN06552-00
Troubleshooting by failure code (Display of code), Part 3	SEN06553-00
Troubleshooting by failure code (Display of code), Part 4	SEN06554-00
Troubleshooting of electrical system (E-mode).....	SEN06555-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN06556-00
Troubleshooting of engine (S-mode)	SEN06557-00
50 Disassembly and assembly	SEN06558-00
General information on disassembly and assembly	SEN06559-00
Engine and cooling system.....	SEN06560-00
Power train.....	SEN06561-00
Undercarriage and frame.....	SEN06562-00
Hydraulic system	SEN06563-00
Work equipment.....	SEN06564-00
Cab and its attachments	SEN06565-00
Electrical system.....	SEN06566-00
90 Diagrams and drawings	SEN06567-00
Hydraulic diagrams and drawings.....	SEN06568-00
Electrical diagrams and drawings	SEN06569-00

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$