

Shop Manual

**HYDRAULIC
EXCAVATOR**

**PC3000-6
Diesel**

Serial numbers 46151 and up
06208 and up

KOMATSU

HYDRAULIC EXCAVATOR

PC3000-6 Diesel

Machine model	Serial number
PC3000-6	46151 and up 06208 and up

00 Foreword

1.1 CONTENTS OF THE BINDER

Assembled in this file are the Operation- and Maintenance Manuals for your KOMATSU Mining Shovel.

1.2 DIVISION OF THE BINDER

Part 1:

Operation Manual

Part 2:

Maintenance Manual

Part 3:

Depending on the volume of Part 3 a second Binder "Volume 2" is being delivered with the Shovel. This Binder contains the General Assembly Procedure Manual for the Shovel, Specification Booklet, Service Literature for the Power Unit (Diesel Engine or Electric Motor) and for Special Equipment. The Electrical- and Hydraulic Diagrams are attached in the pocket of the front cover.

Refer to the -TABLE OF CONTENTS VOLUME 2 BINDER- for details.

Read the Manuals before You Start the Engine.

Before operating the machine, familiarize yourself with its instruments and controls.

Observe the instructions in these manuals for:

- your Personal SAFETY
- Operating SAFETY, and
- READY and EFFICIENT PERFORMANCE of your KOMATSU Shovel.

Periodic preventive inspections and maintenance are the surest means of keeping the machine in proper working order. Prompt detection and correction of minor irregularities, and immediate replacement of worn out or broken parts will prevent failures and avoid expenses.

Replace damaged graphics and symbols.

Observe safety precautions to prevent injury and damage.

If you have any questions concerning this literature please contact

Komatsu Mining Germany GmbH

Service Information
Department 8151.30
P.O. Box 18 03 61
D - 40570 Düsseldorf
GERMANY

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$