

# Shop Manual

COMPACT  
HYDRAULIC  
EXCAVATOR

***PC30MR-5***  
***PC35MR-5***

SERIAL NUMBERS

PC30MR-50001  
PC35MR-30001

and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-13
FOREWORD, SAFETY, BASIC INFORMATION .....	00-19
HOW TO READ THE SHOP MANUAL.....	00-19
SAFETY NOTICE FOR OPERATION.....	00-21
PRECAUTIONS TO PREVENT FIRE.....	00-29
ACTIONS IF FIRE OCCURS .....	00-31
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-32
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-33
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-36
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-43
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-45
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-46
PRACTICAL USE OF KOMTRAX .....	00-47
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-48
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-52
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-56
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-57
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-59
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-60
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE ..	00-62
HOW TO READ ELECTRICAL WIRE CODE .....	00-63
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-67
STANDARD TIGHTENING TORQUE TABLE.....	00-70
CONVERSION TABLE .....	00-77
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING.....	01-9
WORKING RANGE DRAWINGS .....	01-12
SPECIFICATIONS .....	01-14
WEIGHT TABLE .....	01-22
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-26
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-4
BOOT-UP SYSTEM.....	10-10
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-10
SYSTEM OPERATING LAMP SYSTEM .....	10-11
QUICK RELEASE BATTERY TERMINAL (-).....	10-13
ENGINE SYSTEM .....	10-14
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-14
ENGINE CONTROL SYSTEM .....	10-15
AUTO-DECELERATION SYSTEM.....	10-23
OVERHEAT PREVENTION SYSTEM.....	10-25
AUTOMATIC IDLE STOP SYSTEM .....	10-27
COMPONENT PARTS OF ENGINE SYSTEM .....	10-29
COOLING SYSTEM.....	10-30
LAYOUT DRAWING OF COOLING SYSTEM .....	10-30
CONTROL SYSTEM.....	10-32
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-32
MACHINE MONITOR SYSTEM .....	10-33
KOMTRAX SYSTEM.....	10-34
COMPONENT PARTS OF CONTROL SYSTEM.....	10-35

HYDRAULIC SYSTEM.....	10-52
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-52
CLSS .....	10-55
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-58
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-61
WORK EQUIPMENT SYSTEM .....	10-117
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-117
STRUCTURE OF VALVE CONTROL.....	10-120
PPC LOCK SYSTEM .....	10-122
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-124
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-125
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-127
SWING SYSTEM .....	10-143
LAYOUT DRAWING OF SWING SYSTEM .....	10-143
COMPONENT PARTS OF SWING SYSTEM.....	10-144
TRAVEL SYSTEM.....	10-152
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-152
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-154
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-156
UNDERCARRIAGE AND FRAME.....	10-167
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-167
IDLER CUSHION.....	10-168
WORK EQUIPMENT.....	10-169
STRUCTURE OF WORK EQUIPMENT .....	10-169
FUNCTION OF WORK EQUIPMENT .....	10-170
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-171
CAB AND ITS ATTACHMENTS .....	10-172
ROPS CAB .....	10-172
TILT TYPE FLOOR .....	10-173
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
ABBREVIATION LIST .....	20-3
STANDARD VALUE TABLE FOR ENGINE .....	20-9
STANDARD VALUE TABLE FOR ENGINE: PC30MR-5.....	20-9
STANDARD VALUE TABLE FOR ENGINE: PC35MR-5.....	20-11
STANDARD VALUE TABLE FOR MACHINE.....	20-13
STANDARD VALUE TABLE FOR MACHINE: PC30MR-5 .....	20-13
STANDARD VALUE TABLE FOR MACHINE: PC35MR-5 .....	20-27
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE .....	20-41
30 TESTING AND ADJUSTING .....	30-1
CONTENTS .....	30-2
ABBREVIATION LIST .....	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING .....	30-11
TOOLS FOR TESTING AND ADJUSTING.....	30-11
SKETCH OF TOOLS FOR TESTING AND ADJUSTING .....	30-15
ENGINE AND COOLING SYSTEM.....	30-17
TEST ENGINE SPEED .....	30-17
TEST EXHAUST GAS COLOR.....	30-20
TEST AND ADJUST VALVE CLEARANCE .....	30-22
TEST COMPRESSION PRESSURE.....	30-25
TEST ENGINE OIL PRESSURE .....	30-28
TEST AND ADJUST FUEL INJECTION TIMING .....	30-30
BLEED AIR FROM FUEL SYSTEM .....	30-35
TEST FUEL CIRCUIT FOR LEAKAGE .....	30-36
TEST AND ADJUST ALTERNATOR BELT TENSION .....	30-37
TEST AND ADJUST AIR CONDITIONER COMPRESSOR BELT TENSION .....	30-38
POWER TRAIN.....	30-39
TEST SWING CIRCLE BEARING CLEARANCE .....	30-39

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$