

Shop Manual

COMPACT
HYDRAULIC
EXCAVATOR

PC30MR-5
PC35MR-5

SERIAL NUMBERS

PC30MR-50001
PC35MR-30001

and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-13
Foreword, Safety, Basic Information	00-19
How to Read the Shop Manual	00-19
Safety Notice for Operation	00-21
Precautions to Prevent Fire	00-29
Procedures If Fire Occurs	00-31
Precautions When You Discard Waste Materials	00-32
Precautions When You Handle Hydraulic Equipment	00-33
Precautions When You Disconnect and Connect Pippings	00-36
Precautions When You Handle Electrical Equipment	00-43
Precautions When You Handle Fuel System Equipment	00-45
Precautions When You Handle Intake System Equipment	00-46
Practical Use of KOMTRAX	00-47
Disconnect and Connect Push-Pull Type Coupler	00-48
Precautions for Disconnection and Connection of Connectors	00-52
Disconnect and Connect Deutsch Connector	00-56
How to Disconnect and Connect Slide Lock Type Connector	00-57
Disconnect and Connect Connector with Lock to Pull	00-59
Disconnect and Connect Connector with Lock to Push	00-60
Disconnect and Connect Connector with Housing to Rotate	00-62
How to Read the Codes for Electric Cable	00-63
Explanation of Terms for Maintenance Standard	00-67
Standard Tightening Torque Table	00-70
Conversion Table	00-77
01 Specification	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing	01-9
Working Range Drawings	01-13
Specifications	01-15
Weight Table	01-24
Table of Fuel, Coolant, and Lubricants	01-28
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-4
Boot-up System	10-10
Layout Drawing of Boot-up System	10-10
System Operating Lamp System	10-11
Quick Release Battery Terminal (-)	10-13
Engine System	10-14
Layout Drawing of Engine System	10-14
Engine Control System	10-15
Auto-Deceleration System	10-23
Overheat Prevention System	10-25
Automatic Idle Stop System	10-27
Component Parts of Engine System	10-29
Cooling System	10-30
Layout Drawing of Cooling System	10-30
Control System	10-32
Layout Drawing of Control System	10-32
Machine Monitor System	10-33
KOMTRAX System	10-34
Component Parts of Control System	10-35
Hydraulic System	10-52

Layout Drawing of Hydraulic System.....	10-52
CLSS	10-55
Engine and Pump Combined Control System	10-58
Component Parts of Hydraulic System.....	10-61
Work Equipment System.....	10-117
Layout Drawing of Work Equipment System	10-117
Structure of Valve Control	10-120
PPC Lock System	10-122
Work Equipment and Travel Automatic Lock System	10-124
Attachment Oil Flow Adjuster System	10-125
Component Parts of Work Equipment System	10-127
Swing System	10-143
Layout Drawing of Swing System.....	10-143
Component Parts of Swing System.....	10-144
Travel System	10-152
Layout Drawing of Travel System.....	10-152
System Diagram of Travel Control System.....	10-154
Component Parts of Travel System.....	10-156
Undercarriage and Frame	10-167
Layout Drawing of Undercarriage.....	10-167
Idler Cushion.....	10-168
Work Equipment	10-169
Structure of Work Equipment	10-169
Function of Work Equipment.....	10-170
Work Equipment Clearance Adjustment Shim.....	10-171
CAB Related Parts.....	10-172
ROPS CAB	10-172
Tilt Type Floor	10-174
20 Standard Value Table	20-1
Table of Contents	20-2
Abbreviation List	20-3
Standard Value Table for Engine	20-9
Standard Value Table for Engine: PC30MR-5.....	20-9
Standard Value Table for Engine: PC35MR-5.....	20-11
Standard Value Table for Machine.....	20-13
Standard Value Table for Machine: PC30MR-5	20-13
Standard Value Table for Machine: PC35MR-5	20-28
Machine Posture and Procedures to Measure Performance	20-43
30 Testing and Adjusting	30-1
Table of Contents	30-2
Abbreviation List	30-5
Related Information on Testing and Adjusting	30-11
Tools for Testing and Adjusting.....	30-11
Sketch of Tools for Testing and Adjusting	30-15
Engine and Cooling System	30-17
Examine Engine Speed.....	30-17
Examine Exhaust Gas Color	30-20
Examine and Adjust Valve Clearance.....	30-22
Examine Compression Pressure	30-25
Examine Engine Oil Pressure	30-28
Examine and Adjust Fuel Injection Timing.....	30-30
Bleed Air from Fuel System.....	30-35
Examine Fuel Circuit for Leakage	30-36
Examine and Adjust Alternator Belt Tension.....	30-37
Examine and Adjust Air Conditioner Compressor Belt Tension	30-38
Power Train.....	30-39
Examine Swing Circle Bearing Clearance	30-39
Undercarriage and Frame	30-40

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$