

# Shop Manual

MINI  
EXCAVATOR

**PC33E-6**

SERIAL NUMBERS 2001 and up

***Electric***

**KOMATSU**



---

## **00 Index and Foreword**

---

# Index

00 Index and Foreword .....	00-1
Foreword, Safety, Basic Information.....	00-12
How to Read the Shop Manual .....	00-12
Safety Notice for Operation .....	00-14
Precautions for Battery Type Mini Excavator .....	00-22
Precautions to Prevent Fire.....	00-25
Procedures If Fire Occurs .....	00-26
Precautions When You Dispose of Waste Materials .....	00-27
Precautions When You Handle Hydraulic Equipment .....	00-28
Precautions When You Disconnect and Connect Pipings.....	00-31
Precautions When You Handle Electrical Equipment .....	00-37
Precautions Against High Voltage and High Temperature .....	00-39
Procedure for Inspection and Maintenance of High Voltage Parts .....	00-40
Procedure to Restore High Voltage Parts.....	00-45
Precautions When Machine Falls over and Power Electronics Components Have Damage .....	00-47
Precautions for Machine Not to be Put in Water.....	00-48
In Cold Weather .....	00-49
Practical Use of KOMTRAX .....	00-50
Disconnect and Connect Push-Pull Type Coupler .....	00-51
Precautions for Disconnection and Connection of Connectors .....	00-55
How to Disconnect and Connect Deutsch Connector .....	00-59
How to Disconnect and Connect Slide Lock Type Connector .....	00-60
How to Disconnect and Connect Connector with Lock to Pull .....	00-62
How to Disconnect and Connect Connector with Lock to Push .....	00-63
How to Disconnect and Connect Connector with Housing to Rotate .....	00-66
Standard Tightening Torque Table.....	00-67
Conversion Table .....	00-74
Abbreviation List .....	00-79
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing.....	01-3
Working Range Drawings.....	01-4
Specifications .....	01-5
Weight Table .....	01-9
Lubricant .....	01-11
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Boot-up System .....	10-5
Layout Drawing of Boot-up System .....	10-5
System Operating Lamp System.....	10-6
Special Power Supply for Battery .....	10-8
Electric Motor Shutdown Secondary Switch .....	10-9
ID Key System .....	10-10
Component Parts of Boot-Up System .....	10-12
Electric Drive System .....	10-15
Layout Drawing of Electric Drive System.....	10-15
Worker Protection System When You Disassemble Power Electronics Components .....	10-16
High Voltage Wiring (Power Cable) .....	10-17
Component Parts of Electric Drive System.....	10-18
Electric Motor System .....	10-32
Layout Drawing of Electric Motor System.....	10-32
Electric Motor Control System .....	10-33
Auto-Deceleration System.....	10-35
Overheat Prevention System .....	10-37
Automatic Idle Stop System .....	10-39

Cooling System.....	10-41
Layout Drawing of Cooling System .....	10-41
Control System .....	10-42
Layout Drawing of Control System.....	10-42
Machine Monitor System.....	10-43
KOMTRAX System .....	10-45
Component Parts of Control System .....	10-46
Hydraulic System .....	10-65
Layout Drawing of Hydraulic System.....	10-65
CLSS .....	10-67
Electric Motor and Pump Combined Control System.....	10-70
Component Parts of Hydraulic System.....	10-73
Work Equipment System.....	10-136
Layout Drawing of Work Equipment System .....	10-136
Structure of Valve Control .....	10-139
PPC Lock System .....	10-141
Work Equipment and Travel Automatic Lock System .....	10-144
Component Parts of Work Equipment System .....	10-145
Swing System .....	10-170
Layout Drawing of Swing System.....	10-170
Component Parts of Swing System.....	10-171
Travel System .....	10-181
Layout Drawing of Travel System.....	10-181
System Diagram of Travel Control System.....	10-183
Component Parts of Travel System.....	10-185
Undercarriage and Frame .....	10-198
Layout Drawing of Undercarriage .....	10-198
Specifications of Undercarriage .....	10-199
Idler Cushion.....	10-200
Work Equipment .....	10-201
Structure of Work Equipment .....	10-201
Function of Work Equipment .....	10-202
Work Equipment Clearance Adjustment Shim.....	10-203
CAB Related Parts .....	10-204
Tilt Type Floor .....	10-204
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Electric Motor .....	20-3
Standard Value Table for Electric Motor: PC33E-6 .....	20-3
Standard Value Table for Machine.....	20-4
Standard Value Table for Machine: PC33E-6 .....	20-4
Machine Posture and Procedures to Measure Performance .....	20-15
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-4
Related Information on Testing and Adjusting .....	30-5
Tools for Examination and Adjustment .....	30-5
Sketch of Tools for Testing and Adjusting .....	30-8
Motor and Cooling System .....	30-9
Examine Electric Motor Speed .....	30-9
Electric Drive System .....	30-13
Power Train.....	30-14
Examine Swing Circle Bearing Clearance .....	30-14
Undercarriage and Frame .....	30-16
Examine and Adjust Track Tension .....	30-16
Hydraulic System .....	30-18
Release Remained Pressure from Hydraulic Circuit.....	30-18
Examine and Adjust Oil Pressure in Work Equipment, Travel, and Boom Swing Circuits .....	30-24

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$