

Shop Manual

HYDRAULIC
EXCAVATOR

PC40MR-3

SERIAL NUMBERS 15001 and up

★ Arm crane cannot be used on this machine.

KOMATSU

HYDRAULIC EXCAVATOR PC40MR-3

Machine model Serial number

PC40MR-3

15001 and up

00 Index and foreword

Index

Table of contents

00 Index and foreword	
Index	00-2
Table of contents	00-2
Foreword and general information	00-7
Safety notice	00-7
How to read the shop manual	00-12
Explanation of terms for maintenance standard	00-14
Handling of electric equipment and hydraulic component	00-16
Handling of connectors newly used for engines	00-25
How to read electric wire code	00-28
Precautions when carrying out operation	00-31
Method of disassembling and connecting push-pull type coupler	00-34
Standard tightening torque table	00-37
Conversion table	00-41
01 Specification	
Specification and technical data	01-3
Specification dimension drawing	01-3
Working range drawing	01-4
Specifications	01-5
Weight table	01-8
Table of fuel, coolant and lubricants	01-10
10 Structure, function and maintenance standard	
Engine and cooling system	10-3
PTO	10-3
Cooling system	10-4
Power train	10-6
Power train	10-6
Swing circle	10-7
Swing machinery	10-8
Undercarriage and frame	10-10
Track frame	10-10
Idler cushion	10-11
Idler	10-12
Track roller	10-14
Carrier roller	10-15
Sprocket	10-16
Track shoe	10-17
Hydraulic system	10-20
Hydraulic components layout drawing	10-20
Hydraulic tank, filter	10-21
Center swivel joint	10-23
Travel motor	10-24
Hydraulic cylinder	10-32
Solenoid valve	10-35
Multi-control valve (If equipped)	10-38
Hydraulic pump	10-40
Control valve	10-48
CLSS	10-60
Operation for each function and valve	10-64
Swing motor	10-84
PPC valve	10-91

Work equipment.....	10-104
Work equipment	10-104
Dimensions of each part of work equipment	10-108
Cab and its attachments	10-111
Floor	10-111
Electrical system.....	10-112
Engine control system	10-112
Electric control system	10-114
KOMTRAX system	10-119
Component parts of system	10-122
Monitor system	10-123
Sensors	10-126
20 Standard value table	
Standard service value table.....	20-3
Standard service value table for engine related parts	20-3
Standard service value table for chassis related parts.....	20-4
30 Testing and adjusting	
Related information on testing and adjusting.....	30-3
Tools for testing, adjusting, and troubleshooting.....	30-3
Engine and cooling system.....	30-6
Testing engine speed	30-6
Testing exhaust gas color	30-7
Testing and adjusting valve clearance	30-8
Testing compression pressure	30-10
Testing engine oil pressure	30-11
Testing and adjusting fuel injection timing.....	30-12
Testing and adjusting alternator belt tension.....	30-16
Testing and adjusting air conditioner compressor belt tension	30-17
Adjusting fuel control lever	30-18
Power train.....	30-19
Testing clearance in swing circle bearings.....	30-19
Undercarriage and frame	30-20
Testing and adjusting track shoe tension	30-20
Hydraulic system.....	30-21
Testing and adjusting oil pressures in work equipment, travel, boom swing, swing, and blade circuits	30-21
Testing and adjusting LS differential pressure	30-26
Adjusting PC valve	30-29
Testing and adjusting control pump circuit oil pressure	30-30
Testing solenoid valve output pressure	30-32
Testing PPC valve output pressure.....	30-33
Adjusting PPC valve.....	30-35
Testing swing holding brake release pressure	30-36
Testing and adjusting travel deviation	30-37
Testing oil leakage from work equipment cylinder	30-39
Bleeding air from each part	30-41
Releasing residual pressure from hydraulic circuit.....	30-43
Releasing residual pressure from hydraulic tank	30-44
Pressurizing hydraulic tank	30-44
Cab and its attachments	30-45
How to open and close (tilt) floor.....	30-45
Electrical system.....	30-50
How to start operation of KOMTRAX terminal.....	30-50
Lamp display of KOMTRAX terminal.....	30-54

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$