

Shop Manual

COMPACT
HYDRAULIC
EXCAVATOR

PC45MR-5
PC55MR-5

SERIAL NUMBERS

PC45MR-30001
PC55MR-20001

and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-11
Foreword, Safety, Basic Information	00-17
How to Read the Shop Manual	00-17
Safety Notice for Operation	00-19
Precautions to Prevent Fire	00-28
Procedures If Fire Occurs	00-30
Precautions When You Discard Waste Materials	00-31
Precautions When You Handle Hydraulic Equipment	00-32
Precautions When You Disconnect and Connect Pipings	00-35
Precautions When You Handle Electrical Equipment	00-42
Precautions When You Handle Fuel System Equipment	00-44
Precautions When You Handle Intake System Equipment	00-45
Practical Use of KOMTRAX	00-46
Disconnect and Connect Push-Pull Type Coupler	00-47
Precautions for Disconnection and Connection of Connectors	00-51
Disconnect and Connect Deutsch Connector	00-55
How to Disconnect and Connect Slide Lock Type Connector	00-56
Disconnect and Connect Connector with Lock to Pull	00-58
Disconnect and Connect Connector with Lock to Push	00-59
Disconnect and Connect Connector with Housing to Rotate	00-61
How to Read the Codes for Electric Cable	00-62
Explanation of Terms for Maintenance Standard	00-66
Standard Tightening Torque Table	00-69
Conversion Table	00-76
01 Specification	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing	01-9
Working Range Drawings	01-13
Specifications	01-15
Weight Table	01-23
Table of Fuel, Coolant, and Lubricants	01-27
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-4
Boot-up System	10-10
Layout Drawing of Boot-up System	10-10
System Operating Lamp System	10-12
Battery Disconnect Switch	10-14
Engine System	10-15
Layout Drawing of Engine System	10-15
Engine Control System	10-16
Auto-Deceleration System	10-20
Overheat Prevention System	10-22
Automatic Idle Stop System	10-24
Component Parts of Engine System	10-26
Cooling System	10-27
Layout Drawing of Cooling System	10-27
Control System	10-29
Layout Drawing of Control System	10-29
Machine Monitor System	10-30
KOMTRAX System	10-31
Component Parts of Control System	10-32
Hydraulic System	10-48

Layout Drawing of Hydraulic System.....	10-48
CLSS	10-50
Engine and Pump Combined Control System	10-53
Component Parts of Hydraulic System.....	10-56
Work Equipment System.....	10-116
Layout Drawing of Work Equipment System	10-116
Structure of Valve Control	10-120
PPC Lock System	10-122
Work Equipment and Travel Automatic Lock System	10-124
Attachment Oil Flow Adjuster System	10-125
Component Parts of Work Equipment System	10-127
Swing System	10-143
Layout Drawing of Swing System.....	10-143
Component Parts of Swing System.....	10-144
Travel System	10-154
Layout Drawing of Travel System.....	10-154
System Diagram of Travel Control System.....	10-156
Component Parts of Travel System.....	10-158
Undercarriage and Frame	10-169
Layout Drawing of Undercarriage.....	10-169
Idle Cushion.....	10-170
Work Equipment	10-171
Structure of Work Equipment	10-171
Function of Work Equipment.....	10-172
Work Equipment Clearance Adjustment Shim.....	10-173
CAB Related Parts.....	10-174
ROPS CAB	10-174
Tilt Type Floor	10-175
20 Standard Value Table	20-1
Table of Contents	20-2
Abbreviation List	20-3
Standard Value Table for Engine	20-9
Standard Value Table for Engine: PC45MR-5.....	20-9
Standard Value Table for Engine: PC55MR-5.....	20-11
Standard Value Table for Machine.....	20-13
Standard Value Table for Machine: PC45MR-5	20-13
Standard Value Table for Machine: PC55MR-5	20-25
Machine Posture and Procedures to Measure Performance	20-37
30 Testing and Adjusting	30-1
Table of Contents	30-2
Abbreviation List	30-5
Precautions Before Work	30-11
Related Information on Testing and Adjusting	30-12
Tools for Testing and Adjusting.....	30-12
Sketch of Tools for Testing and Adjusting	30-16
Engine and Cooling System	30-18
Examine Engine Speed.....	30-18
Examine Exhaust Gas Color	30-20
Examine and Adjust Valve Clearance.....	30-22
Examine Compression Pressure	30-24
Examine Engine Oil Pressure	30-26
Bleed Air from Fuel System.....	30-28
Examine Fuel Circuit for Leakage	30-30
Handle Cylinder Cut-out Mode Operation.....	30-31
Examine and Adjust Alternator Belt Tension.....	30-32
Examine and Adjust Air Conditioner Compressor Belt Tension	30-33
Power Train.....	30-35
Examine Swing Circle Bearing Clearance	30-35

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$