

Shop Manual

HYDRAULIC
EXCAVATOR

PC45MR-5M0

PC55MR-5M0

SERIAL NUMBERS PC45MR-5M0 F50001 and up
PC55MR-5M0 F60001

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-11
FOREWORD, SAFETY, BASIC INFORMATION	00-17
HOW TO READ THE SHOP MANUAL	00-17
SAFETY NOTICE FOR OPERATION	00-19
PRECAUTIONS TO PREVENT FIRE	00-27
ACTIONS IF FIRE OCCURS	00-29
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-30
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-31
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-34
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-41
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-43
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-44
PRACTICAL USE OF KOMTRAX	00-45
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-50
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-54
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-55
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-57
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-58
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-60
HOW TO READ ELECTRICAL WIRE CODE	00-61
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-65
STANDARD TIGHTENING TORQUE TABLE	00-68
CONVERSION TABLE	00-75
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
WORKING RANGE DRAWINGS	01-12
SPECIFICATIONS	01-14
WEIGHT TABLE	01-21
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-24
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-4
BOOT-UP SYSTEM	10-10
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-10
SYSTEM OPERATING LAMP SYSTEM	10-12
BATTERY DISCONNECT SWITCH	10-14
ENGINE SYSTEM	10-15
LAYOUT DRAWING OF ENGINE SYSTEM	10-15
ENGINE CONTROL SYSTEM	10-16
AUTO-DECELERATION SYSTEM	10-20
OVERHEAT PREVENTION SYSTEM	10-22
AUTOMATIC IDLE STOP SYSTEM	10-24
COMPONENT PARTS OF ENGINE SYSTEM	10-26
COOLING SYSTEM	10-27
LAYOUT DRAWING OF COOLING SYSTEM	10-27
CONTROL SYSTEM	10-29
LAYOUT DRAWING OF CONTROL SYSTEM	10-29
MACHINE MONITOR SYSTEM	10-30
KOMTRAX SYSTEM	10-31
COMPONENT PARTS OF CONTROL SYSTEM	10-32

HYDRAULIC SYSTEM.....	10-47
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-47
CLSS	10-49
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-52
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-55
WORK EQUIPMENT SYSTEM	10-115
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-115
STRUCTURE OF VALVE CONTROL.....	10-119
PPC LOCK SYSTEM	10-121
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-123
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-124
HYDRAULIC QUICK COUPLER WORKING SYSTEM	10-126
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-128
SWING SYSTEM	10-143
LAYOUT DRAWING OF SWING SYSTEM	10-143
COMPONENT PARTS OF SWING SYSTEM.....	10-144
TRAVEL SYSTEM.....	10-153
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-153
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-155
COMPONENT PARTS OF TRAVEL SYSTEM	10-157
UNDERCARRIAGE AND FRAME.....	10-168
LAYOUT DRAWING OF UNDERCARRIAGE	10-168
IDLER CUSHION.....	10-169
WORK EQUIPMENT.....	10-170
STRUCTURE OF WORK EQUIPMENT	10-170
FUNCTION OF WORK EQUIPMENT	10-171
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-172
CAB AND ITS ATTACHMENTS	10-173
ROPS CAB	10-173
TILT TYPE FLOOR	10-174
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: PC45MR-5M0	20-9
STANDARD VALUE TABLE FOR ENGINE: PC55MR-5M0	20-11
STANDARD VALUE TABLE FOR MACHINE.....	20-13
STANDARD VALUE TABLE FOR MACHINE: PC45MR-5M0	20-13
STANDARD VALUE TABLE FOR MACHINE: PC55MR-5M0	20-25
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-37
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING	30-11
TOOLS FOR TESTING AND ADJUSTING.....	30-11
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-14
ENGINE AND COOLING SYSTEM.....	30-16
TEST ENGINE SPEED	30-16
TEST EXHAUST GAS COLOR.....	30-17
TEST AND ADJUST VALVE CLEARANCE	30-19
TEST COMPRESSION PRESSURE.....	30-21
TEST ENGINE OIL PRESSURE	30-23
BLEED AIR FROM FUEL SYSTEM	30-25
TEST FUEL CIRCUIT FOR LEAKAGE	30-26
TEST AND ADJUST ALTERNATOR BELT TENSION	30-27
TEST AND ADJUST AIR CONDITIONER COMPRESSOR BELT TENSION	30-28
POWER TRAIN.....	30-30
TEST SWING CIRCLE BEARING CLEARANCE	30-30

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$