

Shop Manual

HYDRAULIC
EXCAVATOR

PC550LC-8

SERIAL NUMBERS 70458 and up

ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC550LC-8

Machine model Serial number

PC550LC-8 70458 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN06368-00
00 Index and foreword	SEN06369-00
Index	SEN06370-00
Foreword and general information	SEN06371-00
01 Specification	SEN06372-00
Specification and technical data	SEN06373-00
10 Structure, function and maintenance standard	SEN06374-00
Engine and cooling system	SEN06375-00
Power train	SEN06376-00
Undercarriage and frame	SEN06377-00
Hydraulic system, Part 1	SEN06378-00
Hydraulic system, Part 2	SEN06379-00
Hydraulic system, Part 3	SEN06380-00
Work equipment	SEN06381-00
Cab and its attachments	SEN06382-00
Electrical system	SEN06383-00
20 Standard value table	SEN06384-00
Standard service value table	SEN06385-00
30 Testing and adjusting	SEN06386-00
Testing and adjusting, Part 1	SEN06387-00
Testing and adjusting, Part 2	SEN06388-00
Testing and adjusting, Part 3	SEN06389-00
40 Troubleshooting	SEN06390-00
Failure code table and fuse locations	SEN06391-00
General information on troubleshooting	SEN06392-00
Troubleshooting by failure code (Display of code), Part 1	SEN06393-00
Troubleshooting by failure code (Display of code), Part 2	SEN06394-00
Troubleshooting by failure code (Display of code), Part 3	SEN06395-00
Troubleshooting of electrical system (E-mode)	SEN06396-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN06397-00

Troubleshooting of engine (S-mode)	SEN06398-00
50 Disassembly and assembly	SEN06399-00
General information on disassembly and assembly	SEN06400-00
Engine and cooling system	SEN06401-00
Power train	SEN06402-00
Undercarriage and frame	SEN06403-00
Hydraulic system	SEN06404-00
Work equipment	SEN06405-00
Cab and its attachments	SEN06406-00
Electrical system	SEN06407-00
90 Diagrams and drawings	SEN06408-00
Hydraulic diagrams and drawings	SEN06409-00
Electrical diagrams and drawings	SEN06410-00

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$