



PW200-7E0

PW220-7E0

MACHINE MODEL	SERIAL NUMBER
PW200-7E0	H55051 AND UP
PW220-7E0	H65051 AND UP

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require.
- Materials and specifications are subject to change without notice.
- PW200/PW220-7E0 mount the SAA6D107E-1 engine.
- For details of the engine, see the 107 Series Engine Shop Manual.

CONTENTS

No. of page

00	FOREWORD	00-1
01	GENERAL	01-1
10	STRUCTURE, FUNCTION AND MAINTENANCE STANDARD.....	10-1
20	TESTING AND ADJUSTING.....	20-1
20	TESTING AND ADJUSTING.....	20-101
20	TESTING AND ADJUSTING Troubleshooting	20-301
20	TESTING AND ADJUSTING Troubleshooting when service code "Electrical system" and failure code "Mechanical system"are indicated	20-401
20	TESTING AND ADJUSTING Troubleshooting of electrical system (E-Mode)	20-701
20	TESTING AND ADJUSTING Troubleshooting of electrical system (Error checking of items without monitor codes).....	20-801
20	TESTING AND ADJUSTING Troubleshooting of hydraulic and mechanical system (H-Mode).....	20-901
30	DISASSEMBLY AND ASSEMBLY.....	30-1
90	OTHER	90-1



Blank for technical reason

00 FOREWORD

Safety	00-3
Safety notice	00-3
General precautions	00-3
Preparations for work	00-4
Precautions during work	00-4
List of revised pages	00-7
General	00-13
General	00-13
Structure and function	00-13
Testing, adjusting and troubleshooting	00-13
Disassembly and assembly	00-13
Maintenance standard	00-13
How to read the shop manual	00-14
Volumes	00-14
Distribution and updating	00-14
Filing method	00-14
Revised edition mark	00-14
Revisions	00-15
Symbols	00-15
Hoisting instructions	00-16
Hoisting	00-16
Coating materials	00-18
Standard tightening torque	00-20
Standard tightening torque of bolts and nuts	00-20
Tightening torque of hose nuts	00-21
Tightening torque of split flange bolts	00-21
Tightening torques for hoses (taper seal type and face seal type)	00-22
Tightening torque for 107 engine series (bolts and nuts)	00-22
Tightening torque for 107 engine series (eye joints)	00-23
Tightening torque for 107 engine series (tapered screws)	00-23
Electric wire code	00-24
Classification by thickness	00-24
Classification by color and code	00-24
Conversion tables	00-25
Method of using the conversion table	00-25
Temperature	00-30
Units	00-31

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$