

SHOP

MANUAL

WA320-6

WA320PZ-6

MACHINE MODEL

SERIAL NUMBER

WA320-6

70001 and up

WA320PZ-6

**70092 and up
H00051 and up**

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- WA320-6 and WA320PZ-6 mounts the SAA6D107E-1 engine.

WHEEL LOADER

WA320-6

WA320PZ-6

Machine model Serial number

WA320-6 70001 and up

WA320PZ-6 70092 and up
 H00051 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual	VEBM620100
00 Index and foreword	SEN04163-00
100 Index	SEN04171-00
200 Foreword and general information	SEN04172-00
01 Specification	SEN04164-00
100 Specification and technical data	SEN04173-00
10 Structure, function and maintenance standard	SEN04165-00
100 Engine and cooling system	SEN04174-00
200 Power train	SEN04175-00
300 Steering system	SEN04176-00
400 Brake system	SEN04177-00
500 Undercarriage and frame	SEN04178-00
600 Hydraulic system	SEN04179-00
700 Work equipment	SEN04180-00
800 Cab and its attachments	SEN04181-00
910 Electrical system, Part 1	SEN04182-00
920 Electrical system, Part 2	SEN04183-00
20 Standard value table	SEN04166-00
100 Standard service value table	SEN04184-00
30 Testing and adjusting	SEN04167-00
110 Testing and adjusting, Part 1	SEN04185-00
120 Testing and adjusting, Part 2	SEN04186-00
130 Testing and adjusting, Part 3	SEN04187-00
40 Troubleshooting	SEN04168-00
100 Failure code table and fuse locations	SEN04188-00
200 General information on troubleshooting	SEN04189-00
310 Troubleshooting by failure code (Display of code), Part 1	SEN04190-00
320 Troubleshooting by failure code (Display of code), Part 2	SEN04191-00
330 Troubleshooting by failure code (Display of code), Part 3	SEN04192-00
340 Troubleshooting by failure code (Display of code), Part 4	SEN04193-00

350	Troubleshooting by failure code (Display of code), Part 5.....	SEN04194-00
360	Troubleshooting by failure code (Display of code), Part 6.....	SEN04195-00
370	Troubleshooting by failure code (Display of code), Part 7.....	SEN04196-00
400	Troubleshooting of electrical system (E-mode)	SEN04197-00
500	Troubleshooting of hydraulic and mechanical system (H-mode).....	SEN04198-00
600	Troubleshooting of engine (S-mode).....	SEN04199-00
50	Disassembly and assembly	SEN04169-00
100	General information on disassembly and assembly.....	SEN04200-00
200	Engine and cooling system	SEN04201-00
310	Power train, Part 1.....	SEN04202-00
320	Power train, Part 2.....	SEN04203-00
400	Undercarriage and frame	SEN04204-00
500	Hydraulic system	SEN04205-00
600	Work equipment	SEN04206-00
700	Cab and its attachments.....	SEN04207-00
800	Electrical system	SEN04208-00
90	Diagrams and drawings.....	SEN04170-00
100	Hydraulic diagrams and drawings	SEN04209-00
200	Electrical diagrams and drawings.....	SEN04210-00

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$