

SHOP MANUAL KOMATSU WA450-2 WHEEL LOADER

MACHINE MODEL	SERIAL NUMBERS
WA450-2	A25001 and up

This material is proprietary to Komatsu Dresser Company and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu Dresser Company.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, periodic revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

PRODUCT PUBLICATIONS INFORMATION

VARIOUS PRODUCT PARTS & SERVICE PUBLICATIONS ARE AVAILABLE TO ALL **KOMATSU** CONSTRUCTION EQUIPMENT OWNERS, INCLUDING OPERATION & MAINTENANCE MANUALS, PARTS BOOKS AND SHOP MANUALS.

SPECIAL PUBLICATIONS SUCH AS SERVICE TOOL, AIR CONDITIONING, AND TURBOCHARGER SHOP MANUALS ARE ALSO AVAILABLE AS WELL AS SELECTED OPERATION & MAINTENANCE AND SHOP MANUALS IN FOREIGN LANGUAGES.

THE PUBLICATIONS LISTED BELOW ARE AVAILABLE FOR THIS PARTICULAR MACHINE(S).

DESCRIPTION	FORM NUMBER
PARTS BOOK - PAPER:	
Engine and Chassis	BEPBW21021
PARTS BOOK - MICROFICHE:	
Engine and Chassis	BEPMW21021
OPERATION & MAINTENANCE MANUAL:	
Chassis	SEAM0421KD200
Engine	3810492-00
SHOP MANUAL:	
Chassis	CEBMW21020
Engine:	
Shop Manual	3379347
Alternative Repair Manual	3810310
Trouble Shooting & Repair	3810246
SAFETY MANUAL	1085 883 R3

PARTS AND SERVICE PUBLICATIONS CAN ONLY BE ACQUIRED BY AUTHORIZED KOMATSU DISTRIBUTORS, USING THE KDC PARTS INVENTORY PROCESSING SYSTEM (PIPS).

IF THE PIPS SYSTEM IS NOT AVAILABLE AT THE DISTRIBUTOR LOCATION, THEN THE FOLLOWING REQUISITION FOR LITERATURE FORM CAN BE USED: FORM KDC-EPS-05, SHOWN ON THE REVERSE SIDE OF THIS PAGE.

CONTENTS

No. of page

10 ENGINE

12 TESTING AND ADJUSTING	12-1
13 DISASSEMBLY AND ASSEMBLY	13-1
14 MAINTENANCE STANDARD	14-1

20 POWER TRAIN

21 STRUCTURE AND FUNCTION	21-1
22 TESTING AND ADJUSTING	22-1
23 DISASSEMBLY AND ASSEMBLY	23-1
24 MAINTENANCE STANDARD	24-1

40 STEERING SYSTEM

41 STRUCTURE AND FUNCTION	41-1
42 TESTING AND ADJUSTING	42-1
43 DISASSEMBLY AND ASSEMBLY	43-1
44 MAINTENANCE STANDARD	44-1

50 BRAKE AND AIR SYSTEM

51 STRUCTURE AND FUNCTION	51-1
52 TESTING AND ADJUSTING	52-1
53 DISASSEMBLY AND ASSEMBLY	53-1
54 MAINTENANCE STANDARD	54-1

60 WORK EQUIPMENT SYSTEM

61 STRUCTURE AND FUNCTION	61-1
62 TESTING AND ADJUSTING	62-1
63 DISASSEMBLY AND ASSEMBLY	63-1
64 MAINTENANCE STANDARD	64-1

80 ELECTRIC AND ELECTRONIC SYSTEM

81 STRUCTURE AND FUNCTION	81-1
82 TESTING AND ADJUSTING	82-1
83 DISASSEMBLY AND ASSEMBLY	83-1

90 OTHERS

91 LOGGING SPECIFICATIONS	91-1
93 DISASSEMBLY AND ASSEMBLY	93-1
97 GEAR PUMP	97-1
99 METRIC CONVERSION TABLE	99-1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$