

SHOP

MANUAL

WA470-6

WA480-6

MACHINE MODEL

SERIAL NUMBER

WA470-6

H50051 and up

WA480-6

H60051 and up

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- WA470-6 and WA480-6 mounts the SAA6D125E-5 engine.

WHEEL LOADER

WA470-6

WA480-6

Machine model Serial number

WA470-6

H50051 and up

WA480-6

H60051 and up

00 Index and foreword

Index

Composition of shop manual.....	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	VEBM946101
00 Index and foreword	SEN01315-01
Index	SEN01323-01 ●
Foreword and general information	SEN01324-00
01 Specification	SEN01316-00
Specification and technical data	SEN01325-00
10 Structure, function and maintenance standard	SEN01317-00
Engine and cooling system	SEN01326-00
Power train	SEN01327-00
Steering system	SEN01328-00
Brake system	SEN01329-00
Undercarriage and frame	SEN01330-00
Hydraulic system, Part 1	SEN01331-00
Hydraulic system, Part 2	SEN01332-00
Work equipment	SEN01333-00
Cab and its attachments	SEN01334-00
Electrical system, Part 1	SEN01335-00
Electrical system, Part 2	SEN01336-00
Electrical system, Part 3	SEN01337-00
20 Standard value table	SEN01318-00
Standard service value table	SEN01338-01 ●
30 Testing and adjusting	SEN01319-00
Testing and adjusting, Part 1	SEN01592-00
Testing and adjusting, Part 2	SEN01593-00
Testing and adjusting, Part 3	SEN01594-00
40 Troubleshooting	SEN01320-00
Failure code table and fuse locations	SEN01706-00
General information on troubleshooting	SEN01707-00
Troubleshooting by failure code (Display of code), Part 1	SEN01708-00
Troubleshooting by failure code (Display of code), Part 2	SEN01709-00
Troubleshooting by failure code (Display of code), Part 3	SEN01710-00
Troubleshooting by failure code (Display of code), Part 4	SEN01711-00

Troubleshooting by failure code (Display of code), Part 5	SEN01712-00
Troubleshooting by failure code (Display of code), Part 6	SEN01713-00
Troubleshooting by failure code (Display of code), Part 7	SEN01714-00
Troubleshooting by failure code (Display of code), Part 8	SEN01715-00
Troubleshooting by failure code (Display of code), Part 9	SEN01716-00
Troubleshooting by failure code (Display of code), Part 10	SEN01717-00
Troubleshooting of electrical system (E-mode)	SEN01718-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01719-00
Troubleshooting of engine (S-mode)	SEN01720-00
50 Disassembly and assembly	SEN01321-00
General information on disassembly and assembly	SEN02503-00 ○
Engine and cooling system	SEN02504-00 ○
Power train, Part 1	SEN02505-00 ○
Power train, Part 2	SEN02506-00 ○
Undercarriage and frame	SEN02507-00 ○
Hydraulic system	SEN02508-00 ○
Work equipment	SEN02509-00 ○
Cab and its attachments	SEN02510-00 ○
Electrical system	SEN02511-00 ○
90 Diagrams and drawings	SEN01322-00
Hydraulic diagrams and drawings	SEN01339-01 ●
Electrical diagrams and drawings	SEN01340-00

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$