

Shop Manual

150A/FA

HYDRAULIC CRANE

SERIAL NUMBERS **150A** **10828**
 150FA **10828** and UP

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, periodic revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

BOOK SECTIONS

00	INTRODUCTION	00-1
01	GENERAL	01-1
10	STRUCTURE, FUNCTION AND MAINTENANCE STANDARD	10-1
20	TESTING, ADJUSTING AND TROUBLESHOOTING	20-1
30	DISASSEMBLY AND ASSEMBLY	30-1
90	OTHER	90-1

PRODUCT PUBLICATIONS INFORMATION

Various product Parts and Service Publications are available to all **KOMATSU** construction equipment owners, including operation and maintenance manuals, parts books and service manuals.

Special publications, such as service tool, air conditioning and turbocharger service manuals are also available as well as selected Operation and Service manuals in foreign languages.

The Publications listed below are available for this particular machine(s).

DESCRIPTION	FORM NUMBER
PARTS BOOK - PAPER:	
Chassis and Engine	BEPB003601
OPERATION AND MAINTENANCE MANUAL:	
Chassis and Engine	CEAMC20081
SHOP MANUAL	
Chassis	CEBM001400
Engine 102E-2 Series	SEBM010019
SAFETY MANUAL	
CIMA Crane machine specific	1085 961 R2

Parts and Service Publications can *only* be acquired by authorized **KOMATSU** distributors using the Komatsu America Corp. Extranet Literature Ordering System.



If the Extranet Literature Ordering System is not available at the distributor location, then the following Requisition for Technical Service Publications and Service Forms can be used. Form KDC91E is shown on the reverse side of this page. Komatsu America Corp. reserves the right to add a surcharge to all fax orders.

SAFETY

SAFETY NOTICE

IMPORTANT SAFETY NOTICE

Proper service and repair is extremely important for the safe operation of your machine. The service and repair techniques recommended and described in this manual are both effective and safe methods of operation. Some of these operations require the use of tools specially designed for the purpose.

To prevent injury to workers, the symbols  and  are used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

GENERAL PRECAUTIONS

Mistakes in operation are extremely dangerous. Read the OPERATION & MAINTENANCE MANUAL carefully BEFORE operating the machine.

1. Before carrying out any greasing or repairs, read all the precautions given on the decals which are fixed to the machine.
2. When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
3. If welding repairs are needed, always have a trained, experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, glasses, cap and other clothes suited for welding work.
4. When carrying out any operation with two or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR signs on the controls in the operator's compartment.
5. Keep all tools in good condition and learn the correct way to use them.
6. Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.

PREPARATIONS FOR WORK

1. Before adding oil or making repairs, park the machine on hard, level ground, and block the wheels or tracks to prevent the machine from moving.
2. Before starting work, lower blade, ripper, bucket or any other work equipment to the ground. If this is not possible, insert the safety pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
3. When disassembling or assembling, support the machine with blocks, jacks or stands before starting work.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$