

Shop Manual

730E-10

DUMP TRUCK

SERIAL NUMBERS 730E-10 A50002 - A50021

ENGINE 16V159

This material is proprietary to Komatsu and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

KOMATSU

© Copyright 2023 Komatsu Ltd.
or one of its subsidiaries
All Rights Reserved
Printed in the U.S.A.

DUMP TRUCK

730E

Machine model	Serial number
730E-10	A50002 to A50021

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

□: New module (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

<u>Section Title</u>	<u>Form Number</u>
Shop Manual, contents binder, binder label and tabs	CEBM033407
00 Index and foreword	
Index	CEN00048-07 ●
Foreword, safety and general information	CEN00050-04
01 Specification	
Specification and technical data	CEN01021-00
10 Structure, function and maintenance standard	
Steering circuit	CEN10092-00
Hoist circuit	CEN10093-00
Brake circuits	CEN10094-00
Electrical system, 24 volt	CEN10087-02
Cab air conditioning	CEN10088-01
Automatic lubrication (auto lube) system	CEN10080-00
Engine emissions aftertreatment system	CEN10083-03
02 Standard value table	
Standard value table	CEN20009-00
30 Testing and adjusting	
Steering, hoist and auxiliary hydraulic systems	CEN30111-01
Brake system	CEN30112-00
Accumulators and suspension	CEN30098-15 ●
Electrical systems	CEN30113-01
Interface module 1 (IM1)	CEN30099-01
Interface module 2 (IM2)	CEN30125-01
Payload meter IV	CEN30070-04 ●
KOMTRAX Plus II	CEN30091-01
Komatsu wireless bridge (KWB)	CEN30110-01

Cab air conditioning	CEN30029-01
Automatic lubrication (auto lube) system	CEN30089-02 ●
KomVision	CEN30105-02
Tire monitoring system	CEN30114-00
40 Troubleshooting	
Fuse and circuit breaker locations	CEN40203-01 ●
Troubleshooting by failure code, Part 1	CEN40178-02
Troubleshooting by failure code, Part 2	CEN40179-02
Troubleshooting by failure code, Part 3	CEN40180-03
Troubleshooting by failure code, Part 4	CEN40181-04
Troubleshooting by failure code, Part 5	CEN40182-01
Aftertreatment system fault codes	CEN40222-02
Steering system	CEN40185-01
KomVision	CEN40200-01
Automatic lubrication (auto lube) system	CEN40202-01 ●
Heating/air conditioning (HVAC) system	CEN40226-00
50 Disassembly and assembly	
Service tools	CEN50112-05 ●
Wheels, spindles and rear axle	CEN50113-05 ●
Brake system	CEN50114-02
Steering system	CEN50111-01 ●
Suspensions	CEN50040-01 ●
Hoist circuit	CEN50116-00
Body and structures	CEN50117-01
Operator cab	CEN50079-02
Power module	CEN50115-02
90 Diagrams and drawings	
Hydraulic circuit diagrams	CEN90031-02
Electrical circuit diagrams	CEN90030-04

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$