

Shop Manual

830

850

870

MOTOR GRADER

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2013 Komatsu
Printed in U.S.A.
Komatsu America Corp.

July 1992

Shop Manual Set CEBMG58102

(Replaces CEBMG58101)

Covers Model 830, 850 & 870

S/N 200000 thru 200987, 200997 thru 200416

Contains the sections listed below:

1	A-01.40	ARTICULATION JOINT ASSEMBLY
2	A-10.10	CHAR-LYNN ORBITROL UNIT
3	A-12.40	TILT STEERING CONSOLE
4	C-11.30	TRANSMISSION, POWER SHIFT (FUNK 2263E130B)
5	E-01.10	ALL WHEEL DRIVE PUMP (REXROTH)
6	E-03.90	CIRCLE REVERSE MOTOR (DANFOSS)
7	E-04.60	STEERING & BRAKE PUMP (EATON MODEL 70422 RDU)
8	E-12.90	HYDRAULIC MOTOR (VICKERS) (DRUM DRIVE & ALL WHEEL DRIVE)
9	E-30.00	HYDRAULIC OIL SWIVEL BLOCK (2-WAY & 4-WAY)
10	E-32.30	CONTROL VALVE MANIFOLDS (HUSCO)
11	E-32.40	MAIN SYSTEM PUMP (CESSNA)
12	E-32.90	ALL WHEEL DRIVE (AWD) H.I.C. VALVE
13	E-33.00	HYDRAULIC CYLINDERS
14	E-33.10	ACCUMULATORS (P/N 1285 352 H91, 1279 537 H1 & 1233 789 H91)
15	E-33.30	TROUBLESHOOTING AND ADJUSTMENT MANUAL
16	E-34.00	REAR AXLE COOLING AND LOCK/UNLOCK DIFFERENTIAL PUMP
17	F-01.10	CIRCLE REVERSE GEAR CASE
18	F-11.80	TANDEM CASE (SINGLE AND DOUBLE STRAND CHAINS)
19	G-01.13	GEARBOX ASSEMBLY (AWD)
20	G-01.14	FRONT AXLE ASSEMBLY
21	G-09.30	FINAL DRIVE ASSEMBLY WITH PLANETARY AND NON-PLANETARY REDUCTION
22	H-03.00	CIRCLE ADJUSTMENT (FOUR SHOE)
23	K-04.20	PARKING BRAKE CALIPER (PERROT P/N 40 023 002)
24	K-11.10	BRAKE VALVE (REXROTH MODEL MB 08 HMD-1X/70-19H)
25	L-01.45	WIRING DIAGRAMS
26	X-01.00	SUSPENSION SEAT
27	Y-01.00	GENERAL TORQUE VALUES
28	Y-02.00	METRIC CONVERSIONS



MATERIAL LIFT []
 GRADER [X]
 PLANER []
 ROLLER []
 CRANE []

SHOP MANUAL

A-01.40
C3

ARTICULATION JOINT ASSEMBLY

APPLICABLE MODELS

830
 850
 870
 A-400-E
 A-400-E (USA BUILT)
 A-450-E
 A-500
 A-525
 A-500-E
 A-550
 A-556
 A-560-E
 A-566-E
 A-600
 A-606
 S-450-E
 S-500-E
 S-560-E

SERIAL NUMBERS

100496 & Up
 100477 & Up
 100481 & Up
 N10605 thru N11886
 U100262 thru U100419
 10605 & Up
 10605 & Up
 100059 & Up
 10605 & Up
 10605 & Up
 10605 & Up
 10893 & Up
 10893 & Up
 10605 & Up
 10605 & Up
 10605 & Up
 10605 & Up
 10605 & Up

CAUTION

- ALL COMPONENTS MUST BE PROPERLY SUPPORTED DURING DISASSEMBLY AND REASSEMBLY.
- ALL JACKING HOISTING AND GENERAL WORKSHOP EQUIPMENT REQUIRED FOR THIS OPERATION MUST BE IN GOOD WORKING ORDER.
- EXTREME CAUTION TO BE OBSERVED AT ALL TIMES TO PREVENT INJURY.
- SAFE WORKSHOP PRACTICES ARE A MUST.

FOR TABLE OF CONTENTS SEE BACK OF COVER

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$