

# Shop Manual

# 960E-1K

**DUMP TRUCK**

SERIAL NUMBERS **A50003 - A50010**

**KOMATSU**<sup>®</sup>



---

# DUMP TRUCK

## 960E

Machine model	Serial number
960E-1K	A50003 - A50010

---

## 00 Index and foreword

### Index

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

□: New module (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

<u>Section Title</u>	<u>Form Number</u>
Shop Manual, contents binder, binder label and tabs	CEBM022602
00 Index and foreword	
Index	CEN00008-02 ●
Foreword, safety and general information	CEN00005-05
Operating instructions	CEN00009-01
01 Specification	
Specification and technical data	CEN01004-02 ●
10 Structure, function and maintenance standard	
Steering circuit	CEN10001-02
Hoist circuit	CEN10002-01
Brake circuits	CEN10003-02
Suspensions	CEN10004-01
Electrical system, 24 volt	CEN10013-02
Interface module (IM)	CEN10027-00
Drive system	CEN10023-01
Cab air conditioning	CEN10008-02 ●
Reserve engine oil system	CEN10022-00
SIBAS® IGBT rack components	CEN10016-01
Structure and maintenance standard	CEN10037-00 □
20 Standard value table	
Standard value table	CEN20003-00
30 Testing and adjusting	
General information	CEN30001-01
Steering, brake cooling and hoist hydraulic system	CEN30002-02 ●
Brake system	CEN30015-03 ●
Accumulators and suspensions	CEN30004-03 ●
Cab air conditioning	CEN30007-01
Interface module (IM)	CEN30026-01

IGBT haul truck SIBAS® user manual, part 1	CEN30021-02
IGBT haul truck SIBAS® user manual, part 2	CEN30022-02
Installing ZR / DSP software	CEN30023-02
<b>40 Troubleshooting</b>	
Fuse and circuit breaker locations	CEN40009-01
Troubleshooting by failure code, Part 1	CEN40011-01
Troubleshooting by failure code, Part 2	CEN40049-00
Troubleshooting by failure code, Part 3	CEN40050-00
Troubleshooting by failure code, Part 4	CEN40051-00
Troubleshooting by failure code, Part 5	CEN40052-00
Drive system fault code table, Part 1	CEN40041-00
Drive system fault code table, Part 2	CEN40042-00
Drive system fault code table, Part 3	CEN40043-00
Drive system fault code table, Part 4	CEN40044-00
Drive system fault code table, Part 5	CEN40045-00
Drive system fault code table, Part 6	CEN40046-00
Drive system fault code table, Part 7	CEN40047-00
Cab air conditioning	CEN40008-01
Reserve engine oil system	CEN40010-00
Steering system	CEN40104-00 □
<b>50 Disassembly and assembly</b>	
General information	CEN50001-03
Wheels, spindle and rear axle	CEN50022-03 ●
Brake system	CEN50030-01 ●
Steering system	CEN50004-06 ●
Suspensions	CEN50005-07 ●
Hoist circuit	CEN50006-03
Operator cab	CEN50007-04 ●
Body and structures	CEN50024-01
Cab air conditioning	CEN50009-02
Power module	CEN50021-03 ●
Auto lubrication system	CEN50025-02 ●
Three phase wheel motor	CEN50026-01
Main blower	CEN50031-00
Retarding grid	CEN50032-00
Control cabinet	CEN50033-00
<b>90 Diagrams and drawings</b>	
Hydraulic circuit diagrams	CEN90001-01 ●
Electrical circuit diagrams	CEN90006-00
Electrical circuit diagrams - drive system	CEN90007-00

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$