

Shop Manual

960E-2

DUMP TRUCK

SERIAL NUMBERS 960E-2 A30074 and up

ENGINE 18V170

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2021 Komatsu
Printed in U.S.A.
Komatsu America Corp.

August 2021

DUMP TRUCK

960E

Machine model	Serial number
960E-2	A30074 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

□: New module (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

<u>Section Title</u>	<u>Form Number</u>
Shop Manual, contents binder, binder label and tabs	CEBM028701
00 Index and foreword	
Index	CEN00028-01 ●
Foreword, safety and general information	CEN00002-11 ●
Operating instructions	CEN00012-02
01 Specification	
Specification and technical data	CEN01001-05 ●
10 Structure and function	
Steering circuit	CEN10001-06
Hoist circuit	CEN10002-03
Brake circuits	CEN10003-03
Suspensions	CEN10004-01
Electrical system, 24 volt	CEN10028-01
Interface module (IM)	CEN10006-01
Electrical system, AC drive	CEN10055-00
Cab air conditioning	CEN10008-03 ●
Reserve engine oil system	CEN10022-03 ●
20 Standard value table	
Standard service value table	CEN20001-01 ●
30 Testing and adjusting	
General information	CEN30001-04 ●
Steering, brake cooling and hoist hydraulic system	CEN30002-03 ●
Brake system	CEN30003-04 ●
Accumulators and suspensions	CEN30098-09 □
Payload meter IV	CEN30070-03 □
KOMTRAX plus II	CEN30091-00 □
Interface module (IM)	CEN30006-04
Electrical System, AD Drive	CEN30053-02 ●

Cab air conditioning	CEN30029-01 ●
Automatic lubrication (auto lube) system	CEN30089-00 □
40 Troubleshooting	
Fuse and circuit breaker locations	CEN40053-01 ●
AC drive system fault codes	CEN40114-02 ●
Troubleshooting by failure code, Part 1	CEN40003-03
Troubleshooting by failure code, Part 2	CEN40004-02
Troubleshooting by failure code, Part 3	CEN40005-04
Troubleshooting by failure code, Part 4	CEN40006-04
Troubleshooting by failure code, Part 5	CEN40007-04 ●
Troubleshooting by failure code, Part 6	CEN40016-01
Cab air conditioning	CEN40008-02 ●
Reserve engine oil system	CEN40010-00
Auto lubrication (auto lube) system	CEN40202-00 □
Steering system	CEN40104-05 □
50 Disassembly and assembly	
General information	CEN50001-06 ●
Wheels, spindle and rear axle	CEN50002-06 ●
Brake system	CEN50003-07 ●
Steering system	CEN50034-04 ●
Suspensions	CEN50005-08 ●
Hoist circuit	CEN50006-04
Operator cab	CEN50035-00
Body and structures	CEN50008-04 ●
Cab air conditioning	CEN50028-03 ●
Power module	CEN50019-05 ●
90 Diagrams and drawings	
Hydraulic circuit diagrams	CEN90001-02
Electrical circuit diagrams	CEN90010-00

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$