

SHOP

MANUAL

KOMATSU

CD110R-1

MACHINE MODEL
CD110R-1

SERIAL NUMBER
1317 and UP

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require.
Materials and specifications are subject to change without notice
- CD110R-1 mounts the SAA6D108E-2 engine.
For details of the engine, see the 108-2 Series Engine Shop Manual.

CONTENTS

	No. of page
01 GENERAL	01-1
10 STRUCTURE, FUNCTION AND MAINTENANCE STANDARD	10-1
20 TESTING, ADJUSTING AND TROUBLESHOOTING ..	20-1
30 DISASSEMBLY AND ASSEMBLY	30-1
90 OTHERS	90-1

The affected pages are indicated by using the following marks. It is requested that necessary actions be taken to these pages according to the table below.

Mark	Indication	Action Required
○	New page to be added	Add
●	Page to be replaced	Replace
()	Page to be deleted	Discard

Pages having no marks are not revised at this time.

LIST OF REVISED PAGES

Mark	Pages	Revision number	Mark	Pages	Revision number	Mark	Pages	Revision number	Mark	Pages	Revision number	Mark	Pages	Revision number
●	00-1	②		01-12			10-38			10-76			10-115	
●	00-2	②					10-39			10-77			10-116	
●	00-2-1	②		10-1			10-40			10-79			10-117	
●	00-2-2	②		10-2			10-41			10-80			10-118	
				10-3			10-42			10-81				
	00-3			10-4			10-43			10-82			20-1	①
	00-4			10-5			10-44			10-83			20-2	①
	00-5			10-6			10-45			10-84			20-3	①
	00-6			10-7			10-46			10-85			20-4	①
	00-7			10-8			10-47			10-86			20-5	①
	00-8			10-9			10-48			10-87			20-6	①
	00-9			10-10			10-49			10-88			20-7	①
	00-10			10-11			10-50			10-89			20-8	①
	00-11			10-12			10-51			10-90			20-9	①
	00-12			10-13			10-52			10-91			20-10	①
	00-13			10-14			10-53			10-92			20-11	①
	00-14			10-15			10-54			10-93			20-101	①
	00-15			10-16			10-55			10-94			20-102	①
	00-16			10-17			10-56			10-95			20-103	①
	00-17			10-18			10-57			10-96			20-104	①
	00-18			10-19			10-58			10-97			20-105	①
	00-19			10-20			10-59			10-98			20-106	①
	00-20			10-21			10-60			10-99			20-107	①
	00-21			10-22			10-61			10-100			20-108	①
	00-22			10-23			10-62			10-101			20-109	①
				10-24			10-63			10-102			20-110	①
	01-1			10-26			10-64			10-103			20-111	①
	01-2			10-27			10-65			10-104			20-112	①
	01-3			10-28			10-66			10-105			20-113	①
	01-4			10-29			10-67			10-106			20-114	①
	01-5			10-30			10-68			10-107			20-115	①
	01-6			10-31			10-69			10-108			20-116	①
	01-7			10-32			10-70			10-110			20-117	①
	01-8			10-34			10-71			10-111			20-118	①
	01-9			10-35			10-73			10-112			20-119	①
	01-10			10-36			10-74			10-113			20-120	①
	01-11			10-37			10-75			10-114			20-121	①


Mark	Pages	Revision number	Mark	Pages	Revision number	Mark	Pages	Revision number	Mark	Pages	Revision number	Mark	Pages	Revision number
	20-122	①		20-301	①		20-506	①	●	30-36	②	●	30-83	②
	20-123	①		20-302	①		20-507	①	●	30-37	②	●	30-84	②
	20-124	①		20-303	①		20-508	①	●	30-38	②	●	30-85	②
	20-125	①		20-304	①		20-509	①	●	30-39	②			
	20-126	①		20-305	①		20-510	①	●	30-40	②		90-1	
	20-127	①		20-306	①		20-511	①	●	30-41	②		90-3	
	20-128	①		20-307	①		20-512	①	●	30-42	②		90-5	
	20-129	①		20-308	①		20-513	①	●	30-43	②			
	20-130	①		20-309	①		20-514	①	●	30-44	②			
	20-131	①		20-310	①		20-515	①	●	30-45	②			
	20-132	①		20-311	①		20-516	①	●	30-46	②			
	20-133	①		20-312	①		20-517	①	●	30-47	②			
	20-134	①		20-313	①				●	30-48	②			
	20-135	①		20-314	①	●	30-1	②	●	30-49	②			
	20-136	①		20-316	①	●	30-3	②	●	30-50	②			
	20-201	①		20-317	①	●	30-4	②	●	30-51	②			
	20-202	①		20-318	①	●	30-5	②	●	30-52	②			
	20-203	①		20-319	①	●	30-6	②	●	30-53	②			
	20-204	①		20-320	①	●	30-7	②	●	30-54	②			
	20-205	①		20-321	①	●	30-8	②	●	30-55	②			
	20-206	①		20-322	①	●	30-9	②	●	30-56	②			
	20-207	①		20-401	①	●	30-10	②	●	30-57	②			
	20-208	①		20-402	①	●	30-11	②	●	30-58	②			
	20-209	①		20-403	①	●	30-12	②	●	30-59	②			
	20-210	①		20-404	①	●	30-13	②	●	30-60	②			
	20-211	①		20-405	①	●	30-14	②	●	30-61	②			
	20-212	①		20-406	①	●	30-15	②	●	30-62	②			
	20-213	①		20-407	①	●	30-16	②	●	30-63	②			
	20-214	①		20-408	①	●	30-17	②	●	30-64	②			
	20-215	①		20-409	①	●	30-18	②	●	30-65	②			
	20-216	①		20-410	①	●	30-19	②	●	30-66	②			
	20-217	①		20-411	①	●	30-20	②	●	30-67	②			
	20-218	①		20-412	①	●	30-21	②	●	30-68	②			
	20-219	①		20-413	①	●	30-22	②	●	30-69	②			
	20-220	①		20-414	①	●	30-23	②	●	30-70	②			
	20-221	①		20-415	①	●	30-24	②	●	30-71	②			
	20-222	①		20-416	①	●	30-25	②	●	30-72	②			
	20-223	①		20-417	①	●	30-26	②	●	30-73	②			
	20-224	①		20-418	①	●	30-27	②	●	30-74	②			
	20-225	①		20-419	①	●	30-28	②	●	30-75	②			
	20-226	①		20-420	①	●	30-29	②	●	30-76	②			
	20-227	①		20-421	①	●	30-30	②	●	30-77	②			
	20-228	①		20-501	①	●	30-31	②	●	30-78	②			
	20-229	①		20-502	①	●	30-32	②	●	30-79	②			
	20-230	①		20-503	①	●	30-33	②	●	30-80	②			
	20-231	①		20-504	①	●	30-34	②	●	30-81	②			
	20-232	①		20-505	①	●	30-35	②	●	30-82	②			

SAFETY

SAFETY NOTICE

IMPORTANT SAFETY NOTICE

Proper service and repair is extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol  is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

GENERAL PRECAUTIONS

Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully BEFORE operating the machine.

1. Before carrying out any greasing or repairs, read all the precautions given on the decals which are fixed to the machine.
2. When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
3. If welding repairs are needed, always have a trained, experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, hand shield, cap and other clothes suited for welding work.
4. When carrying out any operation with two or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR signs on the controls in the operator's compartment.
5. Keep all tools in good condition and learn the correct way to use them.

6. Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.

PREPARATIONS FOR WORK

7. Before adding oil or making any repairs, park the machine on hard, level ground, and block the wheels or tracks to prevent the machine from moving.
8. Before starting work, lower blade, ripper, bucket or any other work equipment to the ground. If this is not possible, insert the safety pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
9. When disassembling or assembling, support the machine with blocks, jacks or stands before starting work.
10. Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$