

Shop Manual

BULLDOZER

D31PLL-21

SERIAL NUMBERS 55226 and up

KOMATSU

00 INDEX AND FOREWORD

TABLE OF CONTENTS

00 INDEX AND FOREWORD	
TABLE OF CONTENTS	00-2
ACRONYMS	00-8
SAFETY NOTICE	00-13
HOW TO READ THE SHOP MANUAL	00-18
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-20
HOW TO READ ELECTRIC WIRE CODE	00-22
PRECAUTIONS WHEN CARRYING OUT OPERATION	00-25
METHOD OF DISASSEMBLING AND CONNECTING PUSH-PULL TYPE COUPLER	00-28
STANDARD TIGHTENING TORQUE TABLE	00-31
CONVERSION TABLE	00-35
01 GENERAL	
SPECIFICATION DRAWING	01-3
SPECIFICATIONS	01-5
WEIGHT TABLE	01-9
TABLE OF FUEL, COOLANT AND LUBRICANTS	01-11
10 STRUCTURE AND FUNCTION, MAINTENANCE STANDARD	
ENGINE AND COOLING SYSTEM	10-3
COOLING SYSTEM	10-3
ENGINE CONTROL	10-4
POWER TRAIN	10-5
POWER TRAIN	10-5
POWER TRAIN SYSTEM	10-6
DAMPER	10-7
HST HYDRAULIC EQUIPMENT ARRANGEMENT DIAGRAM	10-8
STEERING, BRAKE CONTROL	10-10
SOLENOID VALVE	10-12
TOWING VALVE	10-14
FINAL DRIVE	10-15
HST PUMP	10-18
SAFETY-SUCTION VALVE	10-26
CHARGE SAFETY VALVE	10-30
CHARGE PUMP	10-32
TOWING VALVE	10-33
HST MOTOR	10-34
ELECTRIC LEVER (FOR STEERING)	10-46
UNDERCARRIAGE AND FRAME	10-49
FRAME ASSEMBLY	10-49
TRACK FRAME, RECOIL SPRING	10-50
IDLER	10-52
TRACK ROLLER	10-54
CARRIER ROLLER	10-56
SPROCKET	10-58
TRACK SHOE	10-60
HYDRAULIC SYSTEM	10-64
ARRANGEMENT OF HYDRAULIC EQUIPMENT FOR WORK EQUIPMENT	10-64
WORK EQUIPMENT CONTROL	10-66
HYDRAULIC TANK, FILTER	10-68
PPC LOCK VALVE	10-69
HYDRAULIC PUMP	10-70
HYDRAULIC CYLINDER	10-72
CONTROL VALVE	10-76
CLSS	10-84
PPC VALVE	10-94

WORK EQUIPMENT 10-106

 WORK EQUIPMENT 10-106

 CUTTING EDGE, END BIT..... 10-109

 RPTO 10-110

 CONTROL VALVE 10-114

 3-POINT HITCH..... 10-116

CAB AND ITS ATTACHMENTS 10-118

 AIR CONDITIONER PIPING..... 10-118

ELECTRICAL SYSTEM 10-120

 ENGINE CONTROL 10-120

 HST CONTROL SYSTEM 10-121

 GEAR SHIFT CONTROL SYSTEM..... 10-122

 PARKING BRAKE CONTROL SYSTEM 10-126

 COMPONENT EQUIPMENT OF SYSTEM 10-128

 MONITOR SYSTEM 10-132

 MONITOR PANEL 10-134

 SENSORS 10-138

20 STANDARD VALUE TABLE 20-3

 STANDARD VALUE TABLE 20-3

 STANDARD VALUE TABLE FOR ENGINE 20-3

 STANDARD VALUE TABLE FOR CHASSIS 20-4

30 TESTING AND ADJUSTING 30-3

 GENERAL INFORMATION ON TESTING AND ADJUSTING 30-3

 LIST OF TOOLS FOR TESTING, ADJUSTING, AND TROUBLESHOOTING 30-3

 SKETCH OF SPECIAL TOOL 30-6

 ENGINE AND COOLING SYSTEM 30-7

 MEASURING ENGINE SPEED 30-7

 MEASURING INTAKE AIR PRESSURE (BOOST PRESSURE)..... 30-8

 MEASURING EXHAUST TEMPERATURE 30-10

 MEASURING EXHAUST GAS COLOR..... 30-12

 ADJUSTING VALVE CLEARANCE 30-13

 MEASURING COMPRESSION PRESSURE 30-15

 MEASURING BLOW-BY PRESSURE 30-16

 MEASURING ENGINE OIL PRESSURE 30-17

 TESTING AND ADJUSTING FUEL INJECTION TIMING..... 30-18

 BLEEDING AIR FROM FUEL CIRCUIT 30-20

 ADJUSTING ENGINE STOP SOLENOID LINKAGE 30-21

 ADJUSTING ENGINE SPEED SENSOR 30-22

 REPLACEMENT OF FAN BELT 30-22

 TESTING AND ADJUSTING AIR CONDITIONER COMPRESSOR BELT TENSION (WITH CAB) ... 30-23

 ADJUSTING FUEL CONTROL LEVER AND DECELERATOR PEDAL 30-24

 POWER TRAIN..... 30-27

 TESTING AND ADJUSTING HST OIL PRESSURE..... 30-27

 MEASURING HST SOLENOID VALVE OUTLET PRESSURE 30-31

 TESTING TRAVEL DEVIATION 30-33

 ADJUSTING HST MOTOR SPEED SENSOR..... 30-34

 ADJUSTING PARKING BRAKE LEVER..... 30-37

 PROCEDURE OF SIMPLE TEST OF BRAKE PERFORMANCE 30-38

 ADJUSTING BRAKE PEDAL LINKAGE 30-39

 METHOD OF RELEASING PARKING BRAKE (PROCEDURE FOR EMERGENCY ESCAPE) 30-40

 UNDERCARRIAGE AND FRAME 30-42

 TESTING AND ADJUSTING IDLER CLEARANCE 30-42

 TESTING AND ADJUSTING TRACK SHOE TENSION 30-43

 HYDRAULIC SYSTEM 30-44

 TESTING AND ADJUSTING WORK EQUIPMENT OIL PRESSURE 30-44

 MEASURING WORK EQUIPMENT PPC VALVE OUTPUT PRESSURE 30-46

 ADJUSTING PLAY OF WORK EQUIPMENT PPC VALVE..... 30-48

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$