

Shop Manual

BULLDOZER

GALEO

D475A-5E0

D475ASD-5E0

SERIAL NUMBERS D475A- 3001 and up
D475ASD-3001

ecot3

KOMATSU

BULLDOZER

D475A-5E0

D475ASD-5E0

Machine model Serial number

D475A-5E0 30001 and up
D475ASD-5E0 30001 and up

00 Index and foreword

Index

Composition of shop manual.....	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00203-02
00 Index and foreword	SEN00204-02
Index	SEN00205-02 ●
Foreword and general information	SEN00206-01 ●
01 Specification	SEN00207-00
Specification and technical data	SEN00208-00
10 Structure, function and maintenance standard	SEN00209-00
Engine and cooling system	SEN00210-00
Power train, Part 1	SEN00211-00
Power train, Part 2	SEN00212-00
Undercarriage and frame	SEN00213-00
Hydraulic system, Part 1	SEN00214-00
Hydraulic system, Part 2	SEN00215-00
Hydraulic system, Part 3	SEN00216-00
Work equipment	SEN00217-00
Cab and its attachments	SEN00218-00
Electrical system	SEN00219-00
20 Standard value table	SEN00220-00
Standard service value table	SEN01816-00
30 Testing and adjusting	SEN00221-00
Testing and adjusting, Part 1	SEN01817-00
Testing and adjusting, Part 2	SEN01818-00
Testing and adjusting, Part 3	SEN01819-00
Testing and adjusting, Part 4	SEN01820-00
40 Troubleshooting	SEN00222-00
Failure code table and fuse locations	SEN01821-00
General information on troubleshooting	SEN01822-00
Troubleshooting by failure code (Display of code), Part 1	SEN01823-00
Troubleshooting by failure code (Display of code), Part 2	SEN01824-00
Troubleshooting by failure code (Display of code), Part 3	SEN01825-00

Troubleshooting by failure code (Display of code), Part 4	SEN01826-00
Troubleshooting by failure code (Display of code), Part 5	SEN01827-00
Troubleshooting by failure code (Display of code), Part 6	SEN01828-00
Troubleshooting by failure code (Display of code), Part 7	SEN01829-00
Troubleshooting by failure code (Display of code), Part 8	SEN01830-00
Troubleshooting of electrical system (E-mode)	SEN01831-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01832-00
Troubleshooting of engine (S-mode)	SEN01833-00
50 Disassembly and assembly	SEN00223-00
General information on disassembly and assembly	SEN02013-00 ○
Engine and cooling system (SAA12V140E-3)	SEN02014-00 ○
Engine (SAA12V140E-3)	SEN02338-00 ○
Power train, Part 1	SEN02015-00 ○
Power train, Part 2	SEN02016-00 ○
Undercarriage and frame, Part 1	SEN02017-00 ○
Undercarriage and frame, Part 2	SEN02018-00 ○
Hydraulic system	SEN02019-00 ○
Work equipment	SEN02020-00 ○
Cab and its attachments	SEN02021-00 ○
Electrical system	SEN02339-00 ○
90 Diagrams and drawings	SEN00224-01
Hydraulic diagrams and drawings	SEN00225-00
Electrical diagrams and drawings	SEN00226-01

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$