

Shop Manual

D51EX-24

D51PX-24

CRAWLER DOZER

SERIAL NUMBERS **D51EX-24 B20001** and up
 D51PX-24 B20001 and up

ENGINE **4D107E-3**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2017 Komatsu
Printed in U.S.A.
Komatsu America Corp.

April 2017

00 INDEX AND FOREWORD

INDEX

- 00 INDEX AND FOREWORD 00-1
 - ABBREVIATION LIST 00-16
 - FOREWORD, SAFETY, BASIC INFORMATION 00-21
 - HOW TO READ THE SHOP MANUAL 00-21
 - SAFETY NOTICE FOR OPERATION 00-23
 - PRECAUTIONS TO PREVENT FIRE 00-31
 - ACTIONS IF FIRE OCCURS 00-33
 - PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS 00-34
 - ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS 00-35
 - PRECAUTIONS FOR DEF 00-36
 - STORE AdBlue/DEF 00-37
 - PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT 00-38
 - PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS 00-41
 - PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT 00-47
 - PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT 00-49
 - PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT 00-50
 - PRACTICAL USE OF KOMTRAX 00-51
 - DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER 00-52
 - PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS 00-56
 - METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR 00-60
 - METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR 00-61
 - METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ... 00-63
 - METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .. 00-64
 - METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .
..... 00-66
 - HOW TO READ ELECTRICAL WIRE CODE 00-67
 - EXPLANATION OF TERMS FOR MAINTENANCE STANDARD 00-71
 - STANDARD TIGHTENING TORQUE TABLE 00-74
 - CONVERSION TABLE 00-81
- 01 SPECIFICATIONS 01-1
 - CONTENTS 01-2
 - ABBREVIATION LIST 01-3
 - SPECIFICATIONS 01-8
 - SPECIFICATION DRAWING 01-8
 - SPECIFICATIONS 01-12
 - WEIGHT TABLE 01-22
 - FUEL, COOLANT, LUBRICANTS (FOR NORTH AMERICA) 01-26
 - FUEL, COOLANT, LUBRICANTS (FOR EUROPEAN UNION) 01-28
- 10 STRUCTURE AND FUNCTION 10-1
 - CONTENTS 10-2
 - ABBREVIATION LIST 10-5
 - UREA SCR SYSTEM 10-10
 - LAYOUT DRAWING OF UREA SCR SYSTEM 10-10
 - UREA SCR SYSTEM DIAGRAM 10-12
 - FUNCTION OF UREA SCR SYSTEM 10-13
 - COMPONENT PARTS OF UREA SCR SYSTEM 10-31
 - BOOT-UP SYSTEM 10-40
 - LAYOUT DRAWING OF BOOT-UP SYSTEM 10-40
 - SYSTEM OPERATING LAMP SYSTEM 10-41
 - BATTERY DISCONNECT SWITCH 10-43
 - ENGINE SYSTEM 10-44
 - LAYOUT DRAWING OF ENGINE SYSTEM 10-44
 - ENGINE CONTROL SYSTEM 10-46
 - AUTOMATIC IDLE STOP SYSTEM 10-52
 - COMPONENT PARTS OF ENGINE SYSTEM 10-55
 - COOLING SYSTEM 10-72

LAYOUT DRAWING OF COOLING SYSTEM	10-72
COOLING FAN CONTROL SYSTEM.....	10-74
COMPONENT PARTS OF COOLING SYSTEM.....	10-77
CONTROL SYSTEM.....	10-86
LAYOUT DRAWING OF CONTROL SYSTEM	10-86
MACHINE MONITOR SYSTEM	10-87
KOMTRAX SYSTEM.....	10-88
COMPONENT PARTS OF CONTROL SYSTEM.....	10-89
HYDRAULIC SYSTEM.....	10-121
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-121
CLSS	10-122
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-125
POWER TRAIN SYSTEM	10-157
LAYOUT DRAWING OF HST SYSTEM	10-157
OPERATION OF HST SYSTEM.....	10-158
STEERING AND BRAKE CONTROL SYSTEM	10-160
HST CONTROL SYSTEM.....	10-162
PARKING BRAKE CONTROL SYSTEM	10-173
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-176
WORK EQUIPMENT SYSTEM	10-212
WORK EQUIPMENT CONTROL	10-212
LAYOUT DRAWING OF FRONT WORK EQUIPMENT	10-214
LAYOUT OF FIXED MULTI-SHANK RIPPER.....	10-215
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-216
UNDERCARRIAGE AND FRAME.....	10-232
MAIN FRAME	10-232
SUSPENSION	10-233
TRACK FRAME AND IDLER CUSHION	10-236
WORK EQUIPMENT.....	10-238
STRUCTURE OF FRONT WORK EQUIPMENT.....	10-238
STRUCTURE OF FIXED MULTI-SHANK RIPPER.....	10-239
CAB AND ITS ATTACHMENTS	10-240
ROPS CAB	10-240
CAB MOUNT	10-242
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-8
STANDARD VALUE TABLE FOR ENGINE: D51EX-24	20-8
STANDARD VALUE TABLE FOR ENGINE: D51PX-24	20-12
STANDARD VALUE TABLE FOR MACHINE.....	20-16
STANDARD VALUE TABLE FOR MACHINE: D51EX-24	20-16
STANDARD VALUE TABLE FOR MACHINE: D51PX-24	20-32
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-46
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING	30-10
TOOLS FOR TESTING AND ADJUSTING.....	30-10
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-17
ENGINE AND COOLING SYSTEM.....	30-18
TEST ENGINE SPEED	30-18
TEST BOOST PRESSURE.....	30-20
TEST EXHAUST GAS COLOR.....	30-22
TEST AND ADJUST VALVE CLEARANCE	30-24
TEST COMPRESSION PRESSURE.....	30-26
TEST BLOWBY PRESSURE	30-31
TEST ENGINE OIL PRESSURE	30-33

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$